



[Manuals.plus](#) /

> [Vornado](#) /

> Vornado 693 Mid-Size Whole Room Air Circulator Fan Instruction Manual

## Vornado 693

# Vornado 693 Mid-Size Whole Room Air Circulator Fan Instruction Manual

Model: 693

## INTRODUCTION

---

This manual provides essential information for the safe and effective operation, setup, and maintenance of your Vornado 693 Mid-Size Whole Room Air Circulator Fan. Please read all instructions before use and retain this manual for future reference.



Image: Vornado 693 Mid-Size Whole Room Air Circulator Fan, showcasing its compact design and black finish.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- This product is designed for indoor use only.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan before moving, cleaning, or servicing.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the fan.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## SETUP

The Vornado 693 circulator is designed for easy assembly and versatile placement.

1. **Unpacking:** Carefully remove the circulator from its packaging.
2. **Assembly:** The 693 features an adjustable height stand. You can quickly assemble it to a short or tall circulator height (28" to 40"). Ensure all connections are secure before operation.
3. **Placement:** Position the circulator in a location where it can effectively circulate air throughout the room. For optimal whole-room circulation, place it in a corner or against a wall, directing the airflow towards the opposite wall or ceiling.

## Direct your comfort.

The 693 has adjustable height and a pivoting head, so you can direct the airflow where you need it or rotate it to a nesting position for storage.

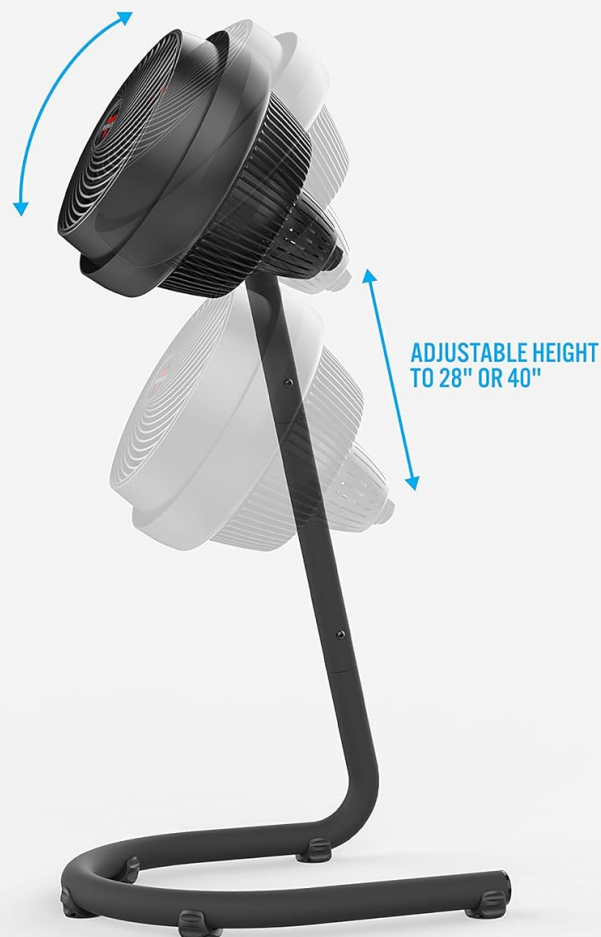


Image: The Vornado 693 fan demonstrating its adjustable height feature, allowing it to be set at 28 or 40 inches, and its pivoting head for directional airflow.

## OPERATING INSTRUCTIONS

The Vornado 693 features simple manual controls for adjusting airflow.

1. **Power On/Off and Speed Control:** Locate the 3-speed manual control dial on the back of the fan head. Rotate the dial to select your desired speed setting (1, 2, or 3). Turn the dial to the 'Off' position to power down the unit.

2. **Airflow Direction:** The circulator features a multi-directional pivoting head. Gently tilt the fan head up or down to direct the powerful airflow exactly where needed. For storage, the head can be rotated into a nesting position.

 MOVES AIR UP  
TO 75 FEET

 EASY TO CLEAN  
REMOVABLE GRILLE

 3 SPEED  
SETTINGS



Image: Close-up of the Vornado 693 fan head, highlighting its ability to move air up to 75 feet, its easy-to-clean removable grille, and its 3-speed settings.

# Circulate all the air in the room.

A Vornado circulator uses special airflow called Vortex Action to circulate all the air in the room.

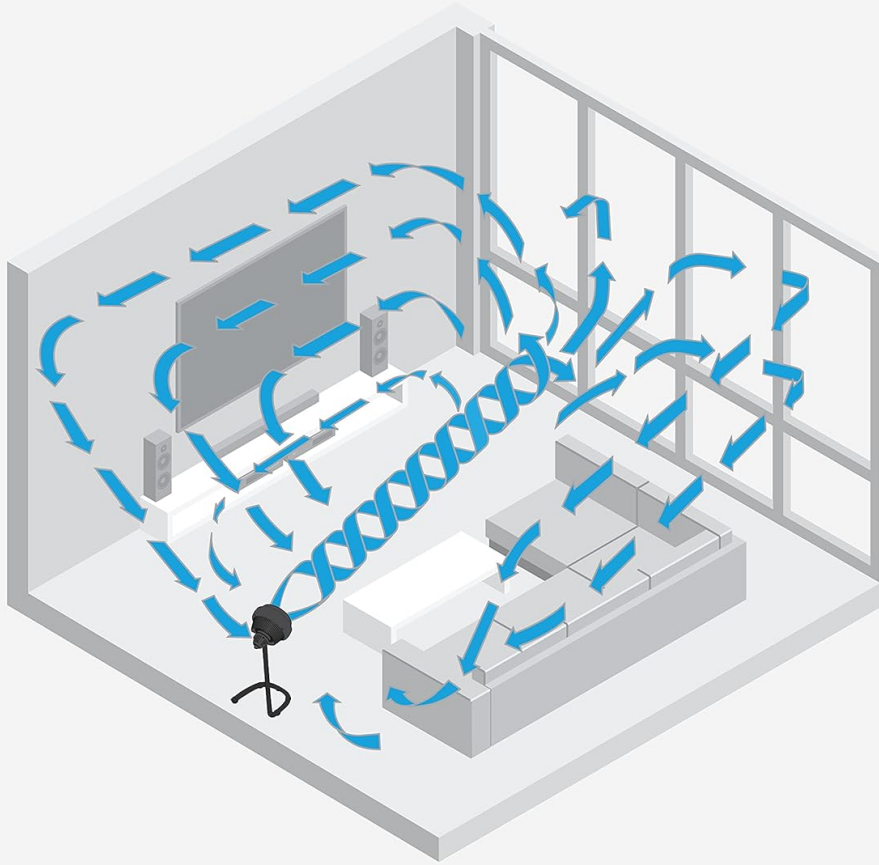


Image: An illustrative diagram demonstrating how the Vornado circulator uses Vortex Action to circulate air throughout an entire room, ensuring even temperature distribution.

# Built differently. Built to perform.



INLET AIR  
ACCELERATOR



DEEP PITCH  
BLADES



ENCLOSED  
AIR DUCT



AIR TENSITY  
SPIRAL GRILL

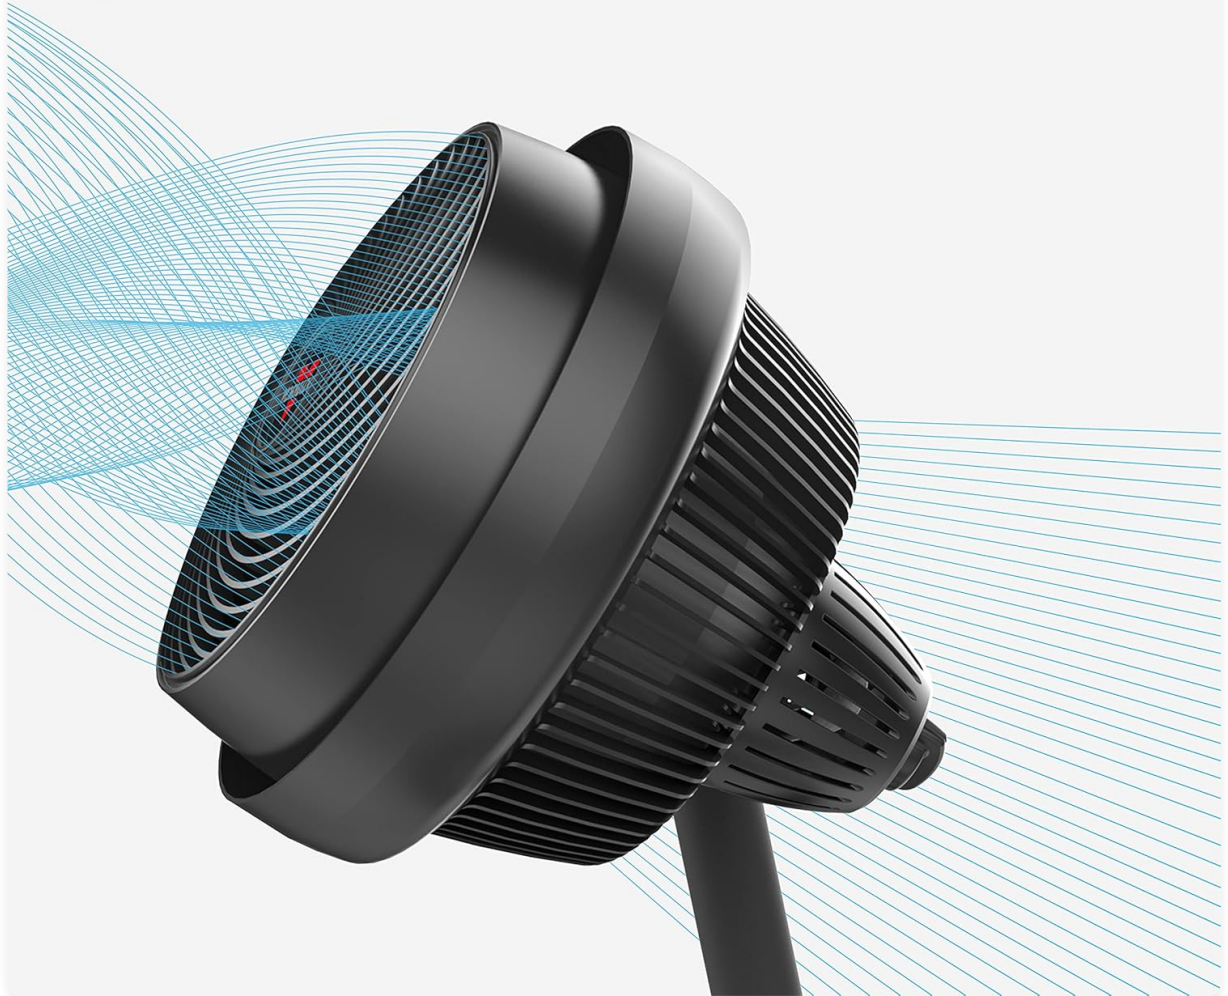


Image: A diagram illustrating the internal components of the Vornado 693, including the Inlet Air Accelerator, Deep Pitch Blades, Enclosed Air Duct, and Air Tensity Spiral Grill, which contribute to its efficient air circulation.

## MAINTENANCE

---

Regular cleaning ensures optimal performance and longevity of your Vornado circulator.

1. **Power Off:** Always unplug the circulator before cleaning.
2. **Grille Removal:** The 693 features a detachable grille for easy access to the blades. Follow the instructions in the full owner's guide to safely remove the front grille.
3. **Cleaning Blades and Grille:** Use a soft cloth or a vacuum cleaner with a brush attachment to remove dust and debris from the blades and grille. Do not use water or harsh chemicals.
4. **Reassembly:** Once clean, reattach the grille securely.

## TROUBLESHOOTING

---

If your Vornado 693 is not operating as expected, please check the following common issues:

- **Unit does not power on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker has tripped.

- **Reduced airflow:** Check for any obstructions to the air intake or exhaust. Clean the grille and blades as described in the Maintenance section.
- **Unusual noise:** Ensure the unit is placed on a stable, flat surface. Check for any loose parts or debris inside the fan head.

For more detailed troubleshooting, please refer to the complete owner's guide.

## SPECIFICATIONS

Feature	Detail
Brand	Vornado
Model Name	693
Color	Black
Electric Fan Design	Floor Fan
Power Source	AC
Product Dimensions	15.8"D x 15.4"W x 39.3"H
Special Feature	Adjustable Height, Adjustable Tilt
Number of Speeds	3
Noise Level	53 Decibels
Air Flow Capacity	325 Cubic Feet Per Minute (CFM)
Voltage	120.0 V
Material	Plastic
Item Weight	10.7 Pounds
UPC	043765011713

## WARRANTY & SUPPORT

Vornado stands behind its products with a commitment to quality and customer satisfaction.

- **Warranty:** The Vornado 693 Mid-Size Whole Room Air Circulator Fan comes with a 5-year limited warranty. This warranty covers defects in material and workmanship.
- **Support:** For any questions, assistance, or warranty claims, please contact Vornado Customer Service. Products are designed and supported in Andover, KS.

*Note: This item is built to meet U.S. voltage requirements and may not function properly when used in conjunction with external devices that alter or convert voltage or frequency of electricity. Improper use or shipping the product outside the U.S. will void all warranties.*

**PROUDLY MADE IN THE USA**

This Vornado product is designed, engineered, and assembled in Andover, Kansas, using U.S. and imported parts, reflecting a commitment to quality and craftsmanship.



Image: A graphic highlighting the Vornado brand's origin in the USA, with text confirming the product is proudly made in the USA.