



[Manuals.plus](#) /

› [Quoizel](#) /

› Quoizel Westover 20" Outdoor Wall Sconce Instruction Manual (Model WVR8407EK)

Quoizel WVR8407EK

Quoizel Westover 20" Outdoor Wall Sconce Instruction Manual

Model: WVR8407EK

1. INTRODUCTION

Thank you for purchasing the Quoizel Westover 20" Outdoor Wall Sconce. This manual provides important information regarding the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- This fixture is rated for **Wet Locations**, suitable for outdoor use where it may be exposed to rain or moisture.
- Use only the specified bulb type and wattage. Refer to the "Specifications" section for details.
- Handle glass components with care to prevent breakage.
- Proposition 65 Warning: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PACKAGE CONTENTS

Verify that all parts listed below are included in your package:

- Quoizel Westover 20" Outdoor Wall Sconce (Fixture body with glass panels)
- Mounting hardware (screws, nuts, bolts, mounting bracket)

- Installation instructions
- *Bulb not included*

PRODUCT DIMENSIONS



EXTENDS 8.5" FROM WALL

BULB NOT INCLUDED

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"



150 W



120 V



1 Bulb



E26 Base



**Incandescent
or 25W LED**



Wet Rated


Figure 1: Product Dimensions and Electrical Specifications. This image displays the overall dimensions of the 20-inch wall sconce, including its height (20"), width (7"), and extension from the wall (8.5"). It also highlights key electrical specifications: 150W max wattage, 120V, 1 bulb required (E26 base), suitable for incandescent or 25W LED, and Wet Rated for outdoor use.

4. SPECIFICATIONS

Feature	Detail
Brand	Quoizel
Model Number	WVR8407EK
Dimensions (L x W x H)	8.5"L x 7"W x 20"H
Color	Earth Black
Material	Alloy Steel, Glass
Light Source	1 x E26 Base Bulb (not included)

Max Wattage	150 Watts (Incandescent) or 25W LED equivalent
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor (Wet Rated)
Special Features	Dimmable (with compatible bulb and dimmer switch)
Weight	9.5 Pounds

Product Highlights:

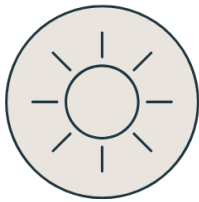


Weather & Water Resistant



ETL Wet Rated For Outdoors



Incandescent or LED

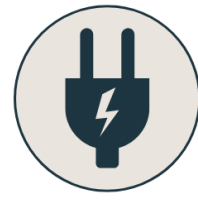

120 V

Figure 2: Key Features. This graphic illustrates the durability features of the Quoizel Westover sconce, including its weather resistance, water resistance, and heat resistance, making it suitable for various outdoor conditions.

5. INSTALLATION INSTRUCTIONS

Before you begin: Ensure power is disconnected at the circuit breaker. This fixture requires a standard electrical junction box for mounting.

- 1. Prepare the Mounting Surface:** Ensure the electrical box is securely installed and the wiring is accessible.
- 2. Attach Mounting Bracket:** Secure the provided mounting bracket to your electrical junction box using the screws supplied with the box. Ensure the bracket is level and stable.
- 3. Wire the Fixture:**
 - Connect the fixture's ground wire (usually bare copper or green) to the house ground wire.
 - Connect the fixture's white wire to the house white (neutral) wire.
 - Connect the fixture's black wire to the house black (hot) wire.
 - Secure all wire connections with wire nuts and wrap with electrical tape for added safety.
- 4. Mount the Fixture:** Carefully align the fixture body with the mounting bracket and secure it using the provided screws or nuts. Ensure a tight fit against the wall to prevent moisture entry.
- 5. Install the Bulb:** Insert one E26 base bulb (max 150W incandescent or 25W LED equivalent) into the socket. Do not overtighten.
- 6. Restore Power:** Once installation is complete, restore power at the circuit breaker and test the fixture.

BALANCED STYLE BUILT FOR THE ELEMENTS



Figure 3: Fixture Detail. This image provides a detailed view of the sconce's interior, highlighting the E26 bulb socket and the clear beveled glass panels that enhance light distribution.

6. OPERATING INSTRUCTIONS

The Quozel Westover Outdoor Wall Sconce operates like any standard outdoor lighting fixture. Once properly installed and powered, it can be controlled via a wall switch, dimmer switch (if using a dimmable bulb), or an external timer/photocell system (not included).

- **On/Off Control:** Use your existing wall switch to turn the light fixture on or off.
- **Dimming Functionality:** If you have installed a dimmable E26 LED or incandescent bulb and a compatible dimmer switch, you can adjust the light intensity.
- **Automatic Operation:** For automatic dusk-to-dawn or timed operation, connect the fixture to a compatible external photocell or timer switch (sold separately) according to their respective instructions.

7. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Quozel Westover Outdoor Wall Sconce.

- **Cleaning:**

- Turn off power to the fixture before cleaning.
- Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents, as they may damage the finish or glass.
- The open bottom design allows for easy access to clean the interior of the glass panels and replace the bulb without disassembling the fixture.

- **Bulb Replacement:**

- Turn off power to the fixture.
- Allow the bulb to cool completely before touching.
- Unscrew the old bulb and replace it with a new E26 base bulb (max 150W incandescent or 25W LED equivalent).

- **Inspection:** Periodically check for loose connections, damaged wiring, or signs of wear. Address any issues promptly to ensure safe operation.



Figure 4: Illuminated Sconce. This image demonstrates the Quoizel Westover sconce providing ample illumination for an outdoor entryway, showcasing its functional and aesthetic appeal.

8. TROUBLESHOOTING

If your fixture is not functioning correctly, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">Power is off at the circuit breaker.Loose wire connections.Bulb is faulty or not properly seated.	<ul style="list-style-type: none">Check and reset the circuit breaker.Verify all wire connections are secure (ensure power is off first).Replace the bulb and ensure it is screwed in tightly.
Light flickers.	<ul style="list-style-type: none">Loose bulb or wiring.Incorrect bulb type for dimmer (if applicable).	<ul style="list-style-type: none">Tighten bulb or check wiring connections.Ensure dimmable bulbs are used with dimmer switches.
Glass panels appear dirty or cloudy.	Accumulated dirt, dust, or water spots.	Clean glass panels as described in the "Maintenance" section.

9. WARRANTY AND SUPPORT

This Quoizel lighting fixture is backed by a **3-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use and service.

For warranty claims, technical assistance, or replacement parts, please contact Quoizel customer support through their official website or the retailer where the product was purchased. Please have your model number (WVR8407EK) and proof of purchase available.

For more information, visit the official [Quoizel Store](#).