

UBay RC-280

UBay RC-280 Remote Control Instruction Manual

Model: RC-280

INTRODUCTION

This manual provides instructions for the UBay RC-280 Remote Control, designed for use with various TCL Roku Smart TV models. Please read this manual thoroughly before using the remote control to ensure proper operation and longevity.

PRODUCT OVERVIEW

The UBay RC-280 is a replacement remote control for TCL Roku Smart TVs. It is designed for immediate use without requiring any programming or pairing. Simply insert batteries, and it is ready to operate your compatible television.

Key Features:

- No programming or pairing required.
- Compatible with a wide range of TCL Roku Smart TV models.
- Dedicated quick access buttons for popular streaming services.

Compatibility:

This remote control is compatible with all TCL Roku TV models, including but not limited to:

- 65US5800, 55UP120, 55UP130, 55FS3850, 55FS3700, 50FS3750, 50UP130, 50FS3800, 50FS3850, 49FP110, 48FS3750, 48FS3700, 48FS4610R, 43UP130, 43FP110, 40FS3750, 40FS4610R, 40FS3800, 40FS3850, 32S3700, 32S3750, 32S3800, 32S3850A, 32S3850B, 32S3850P, 32S4610R, 28S3750.

It is also compatible with Roku TVs from other brands such as Onn, Philips, Sharp, Westinghouse, Sanyo, RCA, JVC, Element, Magnavox, and Hitachi.

Important Note:

- This remote does not work for Roku Box or Roku Stick devices.
- It does not feature a pair button, voice control, or a headphone jack.

SETUP

The UBay RC-280 remote control is designed for immediate use with compatible TCL Roku TVs without any complex setup procedures.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Gently slide or lift the cover to open it.
2. **Insert Batteries:** Insert two AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.



Image: Back of the remote control with the battery cover open, illustrating the correct placement for two AAA batteries.

3. **Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
4. **Begin Use:** The remote control is now ready to operate your compatible TCL Roku TV. Point the remote towards the TV and press the power button to turn on the television.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal use of your UBay RC-280 remote control.





Image: Front view of the UBay RC-280 remote control, displaying the layout of all control buttons.

- **Power Button (Red Circle with Line):** Turns the TV on or off.
- **Back Button (Left Arrow):** Returns to the previous screen or menu.
- **Home Button (House Icon):** Navigates to the Roku Home screen.
- **Directional Pad (Purple Circle with Arrows):**

- **Up/Down Arrows:** Navigate through menus and lists.
- **Left/Right Arrows:** Navigate horizontally, adjust settings, or fast-forward/rewind during playback.
- **OK Button (Center):** Selects an item or confirms an action.
- **Rewind/Replay Button (Curved Arrow):** Replays the last few seconds of content.
- **Asterisk Button (*):** Accesses options or settings within certain applications.
- **Media Control Buttons:**
 - **Rewind (Double Left Arrows):** Rewinds media playback.
 - **Play/Pause (Vertical Bars and Triangle):** Plays or pauses media playback.
 - **Fast Forward (Double Right Arrows):** Fast forwards media playback.
- **Volume and Channel Buttons (Side of Remote):**





Image: Side view of the UBay RC-280 remote control, highlighting the volume up, volume down, mute, channel up, and channel down buttons.

- **Volume Up:** Increases TV volume.
 - **Volume Down:** Decreases TV volume.
 - **Mute:** Mutes or unmutes TV audio.
 - **Channel Up:** Changes to the next channel.
 - **Channel Down:** Changes to the previous channel.
- **Quick Access Buttons (Netflix, Amazon, Rdio, Vudu):** Directly launch the corresponding streaming applications.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your UBay RC-280 remote control.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote control. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your UBay RC-280 remote control, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
Specific buttons not working.	Button stuck or damaged; Remote not compatible with specific function (e.g., voice control).	Gently press the button multiple times. Confirm the remote supports the desired function (e.g., this remote does not have voice control).
Remote works for some TVs but not mine.	TV is not a compatible Roku TV model.	Verify your TV is a TCL Roku Smart TV or another compatible Roku TV brand listed in the "Product Overview" section. This remote is not for Roku Box or Roku Stick.

SPECIFICATIONS

- **Model:** RC-280
- **Brand:** UBay
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatibility:** TCL Roku Smart TVs and other Roku TV brands (Onn, Philips, Sharp, Westinghouse, Sanyo, RCA, JVC, Element, Magnavox, Hitachi)
- **Dimensions:** Approximately 5.1 x 1.7 x 0.5 inches
- **Weight:** Approximately 2.39 ounces (without batteries)
- **Special Feature:** Ergonomic design
- **Color:** Black remote with purple directional pad (Product specifications list 'Purple' as color, referring to the accent color)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.