

- Manuals.plus /
- › [Foxelli](#) /
 - › Foxelli Trail Camera Model 57047 Instruction Manual

Foxelli 57047

Foxelli Trail Camera Model 57047 Instruction Manual

- Overview
- Package Contents
- Product Diagram
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty

1. OVERVIEW


The Foxelli Trail Camera Model 57047 is designed for capturing high-resolution photos and videos of wildlife and for security monitoring. It features a 14-megapixel camera for still images and records 1080P Full HD videos with sound. Equipped with motion-activated night vision, a 120-degree wide-angle lens, and a 2.4-inch LCD screen, this camera is built to operate in various outdoor conditions thanks to its IP66 waterproof rating.

CRISP & CLEAR PHOTOS [14MP] HIGH DEFINITION VIDEO [1080P]

14MP



8MP

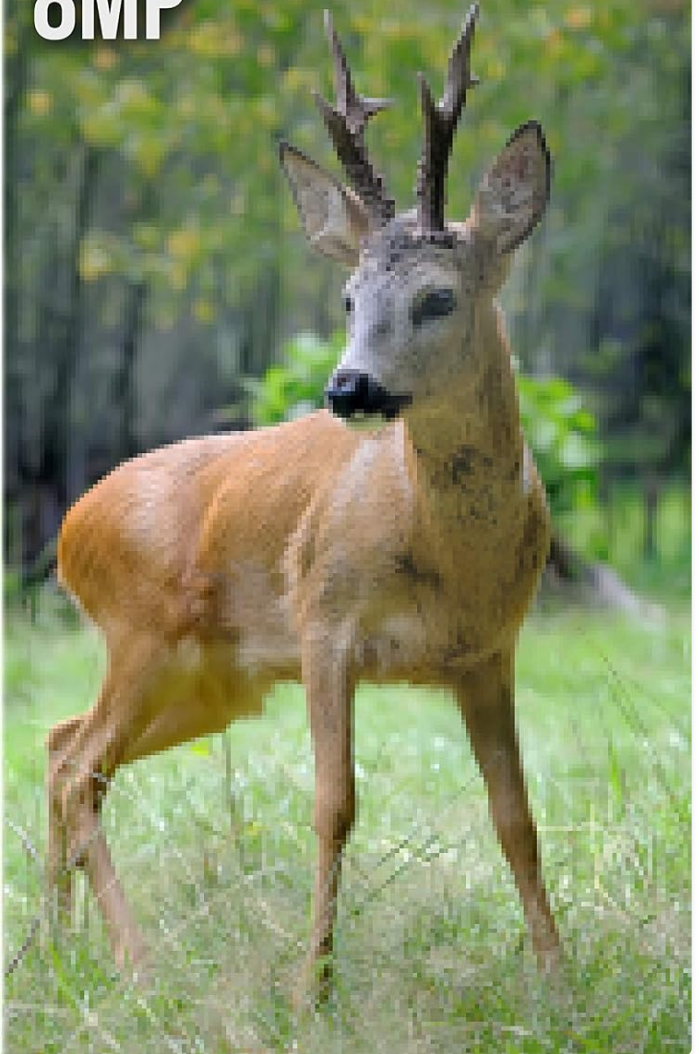

Foxelli Trail Camera Model 57047

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Foxelli Trail Camera Model 57047
- Mounting Strap
- USB Cable
- User Manual



Foxelli Trail Camera Model 57047 package contents including camera, strap, USB cable, and user manual.

3. PRODUCT DIAGRAM

Familiarize yourself with the camera's components:

SETUP IN 10 SECONDS

TURN IT ON AND IT'S READY FOR ACTION

(camera comes fully set up and does not need any extra steps to start taking great pictures and videos)



Diagram of Foxelli Trail Camera Model 57047 showing LCD screen, control buttons, battery compartment, MicroSD slot, USB port, and mode switch.

- **2.4" Color LCD:** For previewing photos/videos and menu navigation.
- **Operation Buttons:** MENU, REPLAY, OK, SHOT, and directional arrows for navigation.
- **Battery Compartment:** Holds 4 or 8 AA batteries.
- **MicroSD Card Slot:** Supports cards up to 32GB.
- **USB Port:** For connecting to a computer.
- **Mode Switch:** OFF, SETUP, ON positions.
- **Tripod Mount:** Standard threading for tripod attachment.
- **Locks:** Securely close the camera housing.
- **Speaker:** For audio playback.

4. SETUP

4.1. Battery Installation

1. Open the camera housing by releasing the side locks.
2. Locate the battery compartment.
3. Insert 4 or 8 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.2. MicroSD Card Insertion

1. With the camera housing open, locate the MicroSD card slot.
2. Insert a MicroSD card (up to 32GB) into the slot until it clicks into place.
3. To remove, press the card gently to release it.

SETUP IN 10 SECONDS

TURN IT ON AND IT'S READY FOR ACTION

(camera comes fully set up and does not need any extra steps to start taking great pictures and videos)



Close-up of Foxelli Trail Camera Model 57047 showing battery compartment and MicroSD card slot.

4.3. Mounting the Camera

The camera can be mounted using the included tree strap or a standard tripod.

- **Tree Strap:** Thread the strap through the brackets on the back of the camera and secure it around a tree or pole.
- **Tripod:** Attach the camera to a tripod using the 1/4-inch screw mount located at the bottom.



Foxelli Trail Camera Model 57047 mounted on a tree using the included strap.

5. OPERATION

5.1. Powering On/Off and Setup Mode

1. Slide the mode switch to the **SETUP** position to access the menu and configure settings. The LCD screen will turn on.
2. After configuring settings, slide the switch to the **ON** position to activate the camera for recording. The screen will turn off after a few seconds, and the camera will enter monitoring mode.

3. To turn off the camera completely, slide the switch to the **OFF** position.

5.2. Menu Navigation and Settings

In **SETUP** mode, use the following buttons:

- **MENU:** Enters or exits the settings menu.
- **Up/Down Arrows:** Navigate through menu options.
- **Left/Right Arrows:** Change values or select sub-options.
- **OK:** Confirms selection.
- **SHOT:** Manually takes a photo or starts recording a video (depending on current mode).

Key settings to configure:

- **Mode:** Select Photo, Video, or Hybrid (Photo + Video).
- **Photo Resolution:** Set image quality (e.g., 14MP).
- **Video Resolution:** Set video quality (e.g., 1080P).
- **PIR Sensitivity:** Adjust motion sensor sensitivity (High, Medium, Low).
- **Trigger Interval:** Set the delay between detections.
- **Time Stamp:** Enable or disable date, time, moon phase, and temperature display on images/videos.
- **Timer:** Set specific operating hours for the camera.
- **Password Protection:** Set a password to prevent unauthorized access.

5.3. Viewing Photos and Videos

In **SETUP** mode:

1. Press the **REPLAY** button to enter playback mode.
2. Use the **Left/Right Arrows** to browse through captured files.
3. Press **OK** to play a video or view a photo.
4. Press **REPLAY** again to exit playback mode.

5.4. Connecting to a Computer

To transfer files:

1. Ensure the camera is in **OFF** mode.
2. Connect the camera to your computer using the provided USB cable.
3. The camera will appear as a removable disk drive.
4. Access the files on the MicroSD card and copy them to your computer.

[UPGRADED] NIGHT VISION

12.01.18

42 Infrared LEDs
0.5 sec trigger time



Example of night vision capture from Foxelli Trail Camera Model 57047.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and housing. Avoid abrasive cleaners.
- **Battery Check:** Regularly check battery levels, especially before extended deployment. Replace all batteries simultaneously.
- **Waterproof Seal:** Ensure the rubber seal around the camera housing is clean and free of debris to maintain its IP66 waterproof rating.
- **Storage:** When not in use for long periods, remove batteries and store the camera in a cool, dry place.

7. TROUBLESHOOTING

7.1. Camera Not Turning On

- Check if batteries are inserted correctly with the right polarity.
- Ensure batteries have sufficient charge. Replace with new AA batteries if necessary.
- Verify the mode switch is firmly in the**SETUP** or **ON** position.

7.2. No Images/Videos Captured

- Confirm a MicroSD card is properly inserted and not full.
- Check if the camera is in**ON** mode for automatic recording.
- Adjust **PIR Sensitivity** if the camera is not detecting motion.
- Ensure the **Trigger Interval** is not set too long.
- Verify that the **Timer** settings are not preventing recording during desired periods.

7.3. Poor Image/Video Quality

- Clean the camera lens to remove dirt or smudges.
- Ensure the camera is positioned at an appropriate distance from the subject.
- Check **Photo Resolution** and **Video Resolution** settings in the menu to ensure they are set to desired quality (e.g., 14MP, 1080P).

8. SPECIFICATIONS

Feature	Specification
Still Resolution	14 MP
Video Resolution	1080P Full HD
Lens Angle	120 Degrees Wide Angle
Night Vision	42 Low Glow IR LEDs, 65-ft detection range
Trigger Time	0.5 seconds
LCD Screen	2.4-inch Color LCD
Storage	MicroSD card up to 32GB (not included)
Power Source	4 or 8 AA Batteries (not included)
Water Resistance	IP66 Waterproof
Connectivity	USB
Dimensions	2.6 x 3.8 x 5.5 inches
Model Number	57047

9. WARRANTY AND SUPPORT

The Foxelli Trail Camera Model 57047 comes with a**One Year Warranty**. Additionally, Foxelli offers a **120-day, no questions asked return policy**. For any questions, technical support, or warranty claims, please contact Foxelli customer service through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078JBWM26>

More documents and user manuals: <https://manuals.plus/>