

USARMT RM-AMU150W

RM-AMU150W Remote Control Instruction Manual

Model: RM-AMU150W | Brand: USARMT

- Overview
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. OVERVIEW

This manual provides instructions for the USARMT RM-AMU150W Remote Control, designed for use with various Sony Micro Hi-Fi Stereo Systems. This remote is pre-programmed and requires no setup or programming; simply insert batteries to begin operation.

 
1.1 Compatibility

The RM-AMU150W remote control is compatible with the following Sony Micro Hi-Fi Stereo System models:



- RM-AMU149
- RM-AMU150
- CMT-V10IP
- CMT-V10IP/CA
- CMT-V10IP/Z
- CMT-V9
- CMT-V9IF

1.2 Product Features

- Direct replacement remote control.
- No programming or pairing required.
- Ergonomic design for comfortable use.
- Infrared connectivity.

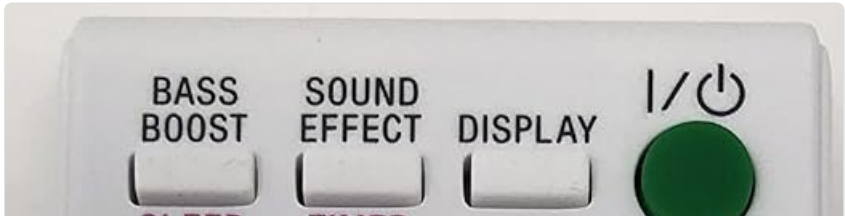

SLEEP
TIMER
MENU

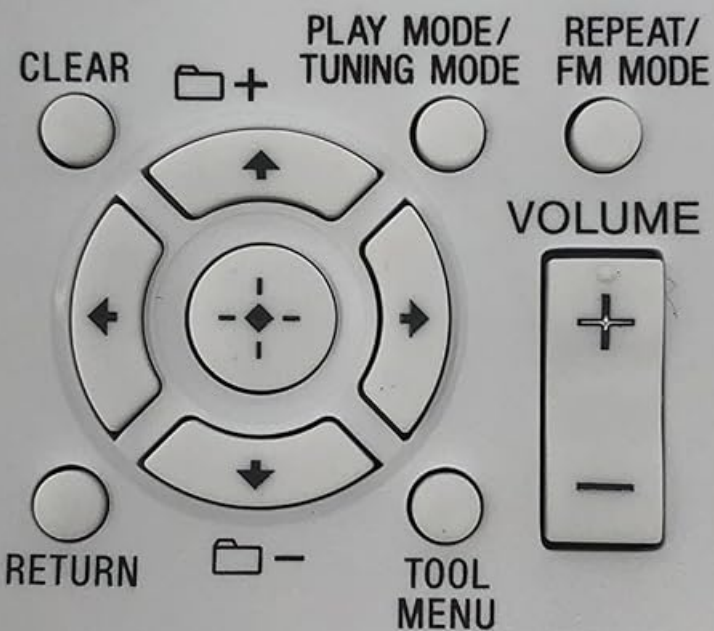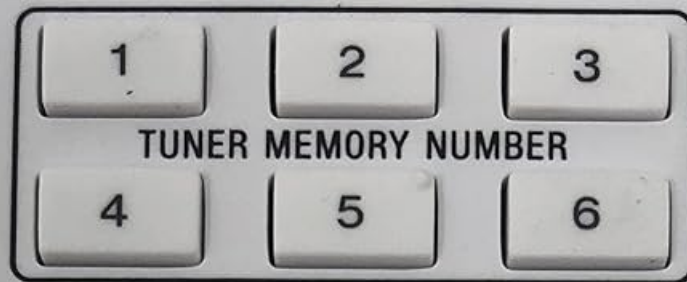  

SONY

SYSTEM AUDIO

 


Figure 1: Front view of the RM-AMU150W remote control. This image displays the layout of all control buttons, including power, numeric keys, function selectors, navigation, and playback controls.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Caution:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.





Figure 2: Back view of the RM-AMU150W remote control, illustrating the battery compartment. The image shows the cover and the general shape of the remote's rear.

3. OPERATION

Point the remote control directly at the infrared receiver on your Sony Micro Hi-Fi Stereo System. Ensure there are no obstructions between the remote and the system.

3.1 Button Functions

Button	Function
I/O (Power)	Turns the stereo system on or off.
BASS BOOST	Activates or deactivates the bass boost feature for enhanced low frequencies.
SOUND EFFECT	Cycles through various sound effects or equalizer presets.
DISPLAY	Changes the information displayed on the stereo system's screen.

Button	Function
SLEEP	Sets a sleep timer for the system to automatically turn off.
TIMER MENU	Accesses timer settings, such as play or record timers.
1-6 (Numeric)	Direct selection of tracks, radio presets, or inputting numbers.
TUNER MEMORY NUMBER	Used in conjunction with numeric buttons to recall stored radio stations.
USB	Selects the USB input source.
TUNER FM/AM	Switches between FM and AM radio bands.
AUDIO IN	Selects the auxiliary audio input source.
CD	Selects the CD input source.
FUNCTION	Cycles through available input functions (e.g., CD, Tuner, USB, Audio In).
iPod	Selects the iPod input source.
TUNER MEMORY	Stores or recalls radio station presets.
CLEAR	Clears current selections or entries.
PLAY MODE / TUNING MODE	Changes playback modes (e.g., repeat, shuffle) or tuning modes for radio.
REPEAT / FM MODE	Toggles repeat playback or changes FM reception mode (stereo/mono).
Navigation (Up, Down, Left, Right, Enter)	Navigates menus, adjusts settings, or tunes radio frequencies. The central button acts as Enter/Select.
VOLUME (+/-)	Adjusts the master volume level.
RETURN	Goes back to the previous menu or screen.
TOOL MENU	Accesses additional tools or settings menu.
SHIFT	Used in combination with other buttons for secondary functions (if applicable).
Playback Controls (Rewind, Play/Pause, Fast Forward, Skip Back, Stop, Skip Forward)	Controls media playback for CD, USB, or iPod sources.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.

- Do not use abrasive cleaners, alcohol, benzene, or thinners, as these can damage the surface.

4.2 Battery Replacement

Replace batteries when the remote control's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you experience issues with your RM-AMU150W remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Check battery polarity (+/-). Replace with new AAA batteries.
Remote control range is poor.	Weak batteries; Obstruction between remote and stereo system.	Replace batteries. Ensure a clear line of sight to the stereo system's IR receiver.
Specific buttons are not responding.	Dirt or debris under the button; Internal malfunction.	Clean the remote surface. If problem persists, contact customer support.
Remote works intermittently.	Loose battery connection; Low battery power.	Ensure batteries are seated firmly. Replace batteries.

6. SPECIFICATIONS

- **Model:** RM-AMU150W
- **Brand:** USARMT
- **Compatible Devices:** Sony Micro Hi-Fi Stereo Systems (RM-AMU149, RM-AMU150, CMT-V10IP, CMT-V10IP/CA, CMT-V10IP/Z, CMT-V9, CMT-V9IF)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic
- **Power Source:** 2 x AAA Batteries (not included)
- **Manufacturer:** USARMT
- **First Available Date:** December 21, 2017

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support for your USARMT RM-AMU150W remote control, please contact the seller or manufacturer directly. Details are typically provided with your purchase documentation or on the seller's website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078JC4V7H>

More documents and user manuals: <https://manuals.plus/>