

Windhager 04306

Windhager Flexi Fit Telescopic Insect Screen Instruction Manual

Model: 04306 | Brand: Windhager

1. INTRODUCTION

Thank you for choosing the Windhager Flexi Fit Telescopic Insect Screen. This product is designed to provide effective protection against insects while allowing fresh air into your home. Its innovative telescopic design ensures easy, drill-free installation in most standard window types. Please read this manual carefully before assembly and use to ensure proper installation and long-term satisfaction with your product.

2. SAFETY INSTRUCTIONS

- Always handle components with care to avoid injury.
- Keep small parts out of reach of children to prevent choking hazards.
- Ensure the screen is securely installed before use. Improper installation may lead to the screen falling, causing damage or injury.
- Do not lean on the insect screen or use it as a safety barrier. It is not designed to prevent falls.
- When cleaning, use only mild detergents and avoid abrasive materials that could damage the mesh or frame.

3. PACKAGE CONTENTS

Please check that all the following components are included in your package:

- 8 x Outer Profiles
- 4 x Inner Profiles
- 1 x Fiberglass Mesh Set
- 1 x Corner Connector Set
- 1 x Handle Set
- 14 x Snap Strips
- 4 x Spacer Strips
- 1 x Assembly Instructions (this manual)

4. SETUP AND INSTALLATION

The Windhager Flexi Fit insect screen is designed for continuous telescopic adjustment, fitting various standard window types without the need for sawing or drilling. Follow these steps for installation:

1. **Measure Your Window:** Carefully measure the inner dimensions of your window frame. It is crucial to verify measurements before proceeding with assembly. The maximum size for this model is 130 x 150 cm.
2. **Assemble the Frame:** Connect the outer and inner profiles using the corner connectors. The telescopic design allows you to adjust the frame to the exact size of your window opening. Ensure a snug fit.
3. **Install the Fiberglass Mesh:** Lay the fiberglass mesh over the assembled frame. Secure the mesh using the snap strips. This step can be tricky; apply firm, even pressure. A rubber mallet may assist in seating the plastic strips properly if finger pressure is insufficient.
4. **Attach Handles and Spacer Strips:** Secure the handle set to the frame as indicated in the detailed assembly instructions. Attach the spacer strips to ensure the screen sits correctly within your window frame, maintaining a minimum depth of 12 mm.
5. **Mount the Screen:** Hang the assembled insect screen into your window opening using the provided hanging springs. The screen should fit snugly and securely without damaging the window frame, making it suitable for rented apartments.



Image: A woman easily installing the Windhager Flexi Fit insect screen into a window frame, demonstrating its simple, drill-free installation.

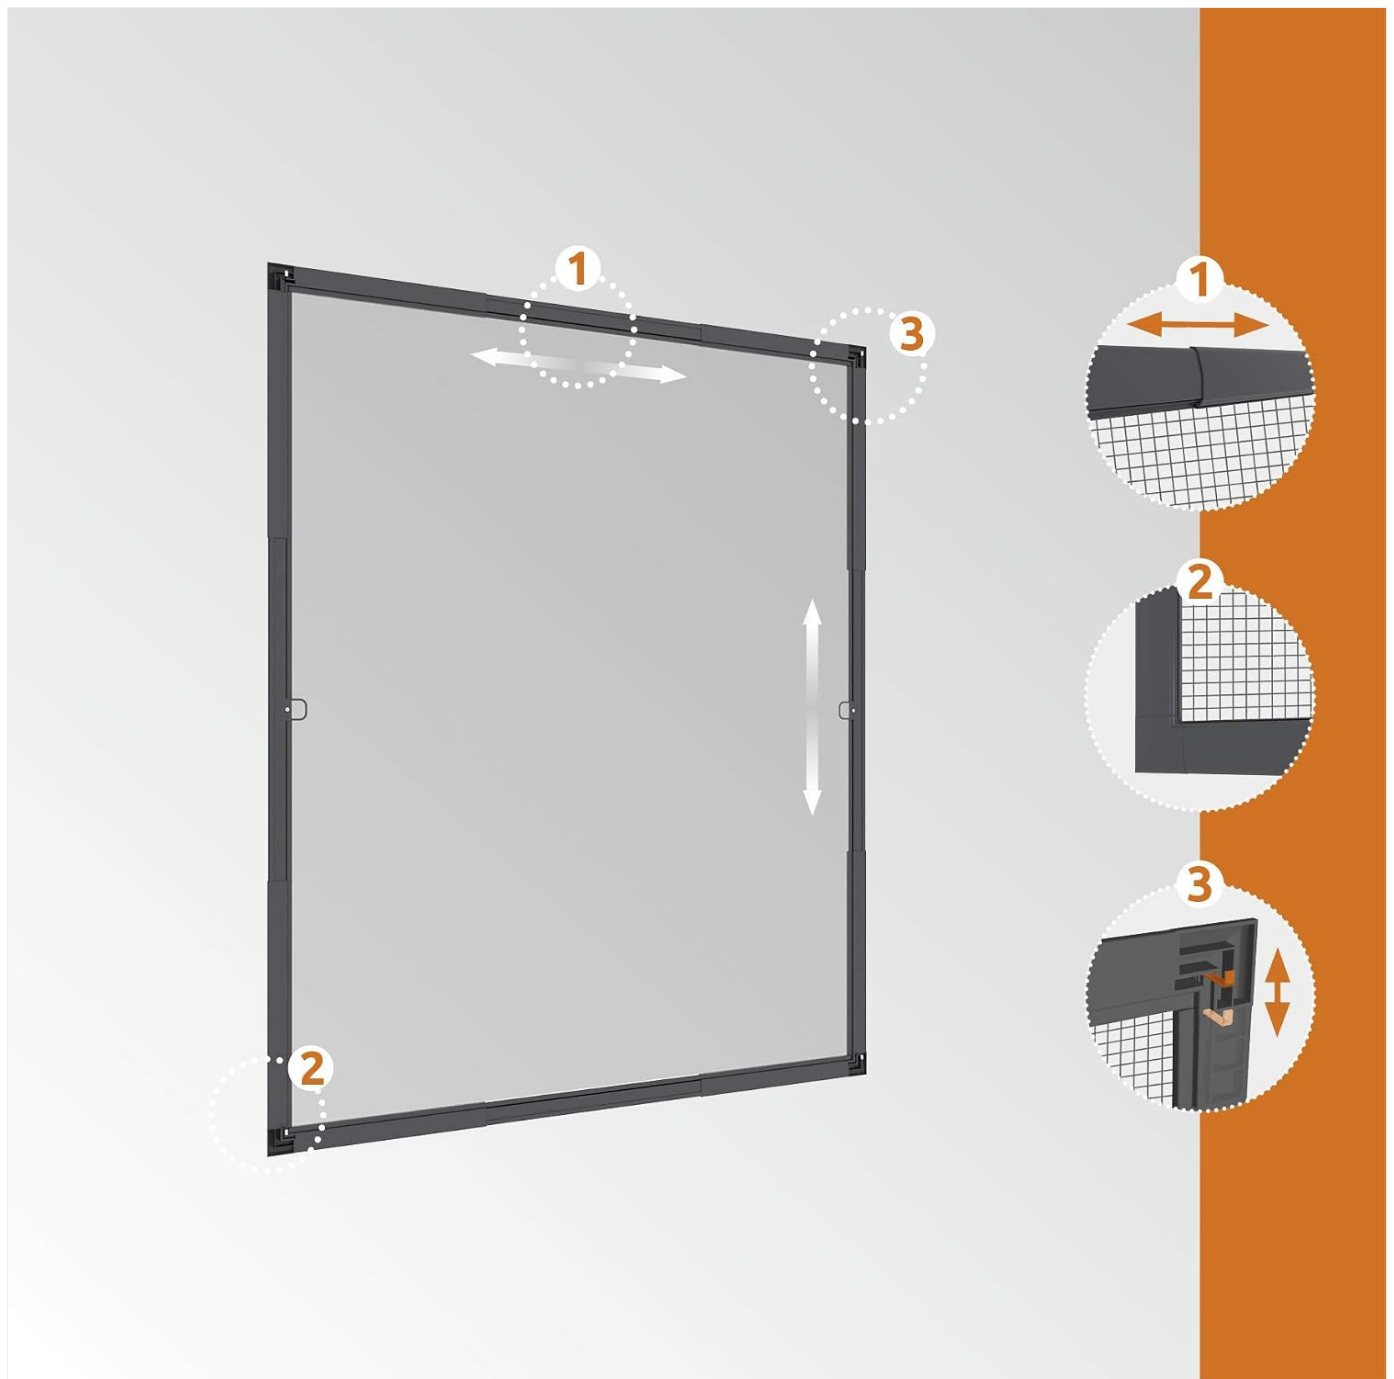


Image: This diagram details how the insect screen frame extends and retracts to fit various window sizes, with numbered callouts for specific adjustment points.



Image: This image shows the telescopic components of the frame, emphasizing that no cutting or sawing is required for assembly.

5. OPERATING INSTRUCTIONS

Once installed, the Windhager Flexi Fit insect screen operates passively. It remains in place, allowing you to open and close your window as usual while providing continuous protection against insects. The screen does not interfere with the normal function of your window.

- To open or close your window, simply operate the window handle as you normally would. The insect screen will stay in position.
- If you need to remove the screen, gently lift it from the hanging springs and store it in a safe place.

6. MAINTENANCE

Regular maintenance will ensure the longevity and effectiveness of your insect screen.

- **Cleaning the Mesh:** Periodically clean the fiberglass mesh with a soft brush or a damp cloth to remove dust, pollen, and debris. For stubborn dirt, use a mild soap solution and rinse with clean water. Allow the mesh to air dry completely before re-installing.
- **Cleaning the Frame:** Wipe the aluminum profiles with a damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Seasonal Storage:** If you choose to remove the screen during off-seasons, clean it thoroughly and store it in a dry, protected area to prevent damage.

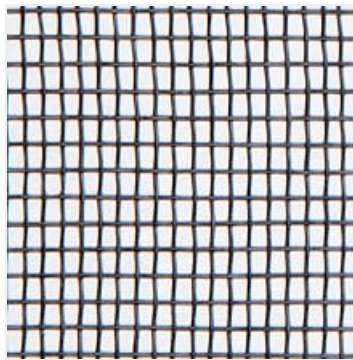


Image: A magnified view of the durable fiberglass mesh, which provides effective insect protection while allowing air circulation.



Image: This image displays the robust aluminum frame of the insect screen, designed for stability and longevity.

7. TROUBLESHOOTING

- **Difficulty Assembling Plastic Strips:** If the plastic snap strips are difficult to install by hand, a rubber mallet can be used to gently tap them into place. Avoid excessive force to prevent damage.
- **Screen Does Not Fit Snugly:** Re-check your window measurements and ensure the telescopic frame is adjusted correctly. The frame should be extended to create a firm fit within the window opening.
- **Insects Still Entering:** Verify that the mesh is fully secured within the frame and that there are no gaps between the screen

and the window frame. Adjust spacer strips if necessary to eliminate small openings.

8. SPECIFICATIONS

Brand	Windhager
Model Number	04306
Material	Aluminum frame, Fiberglass mesh
Color	Grey (also available in White)
Product Dimensions (L x W)	150 cm x 130 cm (Maximum)
Shape	Rectangular
Mounting Depth Required	12 mm
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased the Windhager Flexi Fit Telescopic Insect Screen or visit the official Windhager website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

