

[manuals.plus](#) /› [Axess](#) /› [Axess EPBT103BL TWS Wireless Headphones User Manual](#)

Axess EPBT103BL

Axess EPBT103BL TWS Wireless Headphones User Manual

Model: EPBT103BL

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Axess EPBT103BL True Wireless Headphones. These headphones are designed for an on-the-go lifestyle, featuring Bluetooth 4.2 connectivity and a built-in rechargeable battery. Please read this manual thoroughly before using your headphones to ensure optimal performance and longevity.

WHAT'S IN THE BOX

- Axess EPBT103BL True Wireless Headphones
- Proprietary Y-splitter charging cable (USB-A to dual barrel connectors)
- User Manual (this document)



Image: Axess EPBT103BL True Wireless Headphones. The image displays two blue earbuds with black ear hooks, designed for a secure

SETUP

1. Charging the Headphones

Before initial use, fully charge your Axess EPBT103BL headphones.

1. Connect the provided Y-splitter charging cable to the charging ports on each earbud. Then, connect the USB-A end of the cable to a USB power source (e.g., computer USB port, wall adapter).
2. The indicator light on the earbuds will illuminate during charging and turn off or change color when fully charged.
3. A full charge provides up to 4 hours of playback time.

2. Bluetooth Pairing

To connect your headphones to a device:

1. Ensure both earbuds are charged and powered off.
2. Power on both earbuds. They should automatically enter pairing mode, indicated by a flashing LED light (usually blue and red).
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "EPBT103BL" or a similar name from the list of found devices.
5. Once connected, the LED indicator on the earbuds will typically stop flashing and remain solid blue, or turn off.
6. The operating distance for Bluetooth connectivity is 5-10 meters.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the multi-function button on each earbud until the LED indicator lights up.
- **Power Off:** Press and hold the multi-function button on each earbud until the LED indicator turns off.

Music Playback

- **Play/Pause:** Press the multi-function button once on either earbud.
- **Next Track:** Double-pressing the multi-function button may initiate a call instead of skipping tracks on some devices. Refer to your device's Bluetooth settings for alternative controls or app-based control.
- **Volume Control:** Adjust volume directly from your connected device.

Call Handling

- **Answer/End Call:** Press the multi-function button once on either earbud.
- **Reject Call:** Press and hold the multi-function button for approximately 2 seconds.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earbuds. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in use for extended periods.
- **Water Resistance:** These headphones are not specified as waterproof. Avoid exposure to water or excessive

moisture.

TROUBLESHOOTING

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect them to a power source and allow sufficient charging time.
Cannot pair with a device.	Make sure Bluetooth is enabled on your device. Ensure the headphones are in pairing mode (flashing LED). Move the headphones closer to your device (within 10 meters). Forget the device from your phone's Bluetooth settings and try pairing again. Restart both the headphones and your device.
No sound or poor sound quality.	Check the volume level on both the headphones and your connected device. Ensure the headphones are properly paired and connected. Try playing audio from a different source or application. Ensure earbuds are clean and free from debris.
Headphones disconnect frequently.	Ensure you are within the 10-meter Bluetooth range. Avoid obstacles between the headphones and your device. Check for interference from other wireless devices.
Battery drains quickly.	Ensure the headphones are fully charged. Battery life can vary based on volume levels and usage. If the issue persists after a full charge, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	AXESS True Wireless Headphones with Built-in Rechargeable Battery
Model Number	EPBT103BL
Connectivity Technology	Bluetooth 4.2
Wireless Communication Technology	Bluetooth
Battery Capacity	50mAh (per earbud)
Battery Life	Up to 4 hours (playback)
Operating Distance	5 - 10 meters
Speaker Power	5mW
Control Type	Media Control, App
Material	Plastic

Feature	Detail
Item Weight	1.6 ounces
Product Dimensions	1 x 1.5 x 0.25 inches
UPC	818443016805

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Axess website. Keep your proof of purchase for any warranty claims.



© 2024 Axess. All rights reserved.

Related Documents - EPBT103BL

	<p>AXESS SPBT1076 Bluetooth Media Speaker User Manual User manual for the AXESS SPBT1076 Bluetooth Media Speaker, detailing features, specifications, operation, and charging instructions.</p>
	<p>Axess SPBL1010 Portable Bluetooth Speaker User Guide User guide for the Axess SPBL1010 portable Bluetooth speaker, detailing features, specifications, product details, and operating instructions for Bluetooth, USB, FM Radio, AUX-IN, and TWS functions.</p>
	<p>Axess PABT6022 Double 6.5" LED Bluetooth Speaker User Manual User manual for the Axess PABT6022 Double 6.5" LED Bluetooth Speaker. Includes specifications, operating instructions for Bluetooth, AUX, and TWS modes, charging details, and safety warnings. Learn how to connect, play music, and use features like the microphone input and LED lights.</p>



User Manual

PFBT7002

PORTABLE BLUETOOTH SPEAKER

PARTY FLAME SERIES



1712 Axess Ave, Suite 100, Chino Hills, CA 91710
Tel: (816) 551-0000 | www.axess.com | info@axess.com


[Axess PFBT7002 Party Flame Series Portable Bluetooth Speaker User Manual](#)

User manual for the Axess PFBT7002 Party Flame Series portable Bluetooth speaker, detailing specifications, remote control functions, and rear panel layout for optimal use.



[Axess PABT6028 Portable Bluetooth Speaker User Manual](#)

User manual for the Axess PABT6028 Single 6.5" Portable Bluetooth Speaker, detailing specifications, panel buttons, operating modes (Bluetooth, AUX, TWS), charging instructions, and important notes.

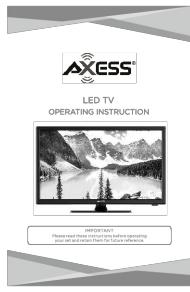

[Axess 23.6" LED TV Operating Instructions Manual](#)

Comprehensive operating instructions for the Axess 23.6-inch LED Television, covering setup, features, remote control, and troubleshooting. Learn how to use your Axess LED TV safely and effectively.