

## Mabe HMM114SEJ

# Mabe HMM114SEJ Microwave Oven User Manual

Model: HMM114SEJ

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Always use oven mitts when handling hot items from the microwave.

## 2. PRODUCT OVERVIEW

The Mabe HMM114SEJ microwave oven offers efficient and convenient cooking with a 1.4 cubic feet (40 L) capacity. It features an intuitive control panel and a sleek mirror finish.



Figure 2.1: Front view of the Mabe HMM114SEJ Microwave Oven.

## Control Panel

The control panel provides access to all cooking functions, power levels, and special programs. It features a digital display and easy-to-use buttons.



Figure 2.2: Detailed view of the control panel and digital display.

## 3. INSTALLATION

### 3.1 Placement

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in the oven.
- Ensure adequate ventilation. Leave a minimum of 4 inches (10 cm) of space around the sides, back, and top of the oven for proper airflow.
- Do not place the oven near heat sources such as a range or oven.
- Keep the oven away from strong magnetic fields.

## 3.2 Electrical Connection

- This appliance operates on 120 Volts, 60 Hz. Ensure your electrical outlet matches these specifications.
- Plug the microwave oven into a dedicated, properly grounded 3-prong outlet. Do not use an extension cord or adapter.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

# 4. OPERATION

---

## 4.1 Basic Cooking

1. Place food in a microwave-safe container and place it on the glass turntable. Close the oven door securely.
2. Press the 'Time Cook' button.
3. Use the number pad to enter the desired cooking time.
4. Press 'Start/+30 Sec' to begin cooking.

## Adjusting Power Levels

The microwave offers 10 power levels. To adjust:

1. Enter the cooking time.
2. Press the 'Power' button.
3. Use the number pad to select a power level from 1 (lowest) to 10 (highest).
4. Press 'Start/+30 Sec'.

## 4.2 Quick Cook Selections

The oven includes 6 quick cook selections for common food items:

- **Popcorn:** For quick preparation of popcorn.
- **Potatoes:** Optimized for cooking potatoes.
- **Pizza:** Reheat or cook pizza slices.
- **Beverages:** Heat drinks to an ideal temperature.
- **Frozen Foods:** Convenient setting for various frozen meals.
- **Dinner:** General setting for reheating dinner plates.



Figure 4.1: Popcorn, a quick cook option.



Figure 4.2: Pasta, suitable for general cooking or reheating.



Figure 4.3: Frozen meat, ideal for defrosting programs.

## 4.3 Defrosting

The microwave offers defrosting by time and by weight.

### Defrost by Time:

1. Press the 'Defrost by Time' button.
2. Enter the desired defrosting time using the number pad.
3. Press 'Start/+30 Sec'.

## Defrost by Weight:

1. Press the 'Defrost by Weight' button.
2. Enter the weight of the food in pounds (or kilograms, depending on model settings) using the number pad.
3. Press 'Start/+30 Sec'.

## 4.4 Memory Function

The memory function allows you to save and recall your favorite cooking settings.

1. Set your desired cooking time and power level.
2. Press the 'Memory' button.
3. To recall, simply press 'Memory' and then 'Start/+30 Sec'.

## 4.5 Eco Technology

This microwave features Eco technology, which automatically turns off the display when not in use. This helps to conserve energy and reduce electricity consumption.

## 4.6 Child Lock

To prevent unintended operation, the microwave includes a child lock feature.

- **To Activate:** Press and hold the 'Pause/Cancel' button for 3 seconds until a lock indicator appears on the display.
- **To Deactivate:** Press and hold the 'Pause/Cancel' button for 3 seconds until the lock indicator disappears.

## 5. CARE AND MAINTENANCE

### 5.1 Cleaning the Interior

- Always unplug the microwave before cleaning.
- Wipe the interior cavity with a damp cloth after each use to prevent food buildup.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen the grime, making it easier to wipe away.
- The glass turntable can be removed and washed with mild soap and water or in a dishwasher.

### 5.2 Cleaning the Exterior

- Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- Wipe the door and control panel gently to avoid scratching the mirror finish or damaging the buttons.

## 6. TROUBLESHOOTING

If you experience issues with your microwave, consult the following table before contacting service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse or reset circuit breaker.
Uneven cooking	Food not stirred or turned; Food not placed centrally on turntable; Incorrect power level.	Stir or turn food during cooking; Ensure food is centered; Adjust power level as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Display is off (Eco mode)	Eco technology activated.	This is normal operation for energy saving. Press any button to reactivate the display.

## 7. SPECIFICATIONS

---

Technical specifications for the Mabe HMM114SEJ Microwave Oven.

## Ficha técnica de producto



### Especificaciones

Producto: Microondas

Nomenclatura: HMM114SEJ

UPC: 757638614740

Capacidad: 1.4 cuft

Color: Espejo

### Principales beneficios

- Tecnología eco para apagar el display cuando no se usa, logrando un mayor ahorro de energía.
- Función de memoria para guardar tu configuración favorita.
- Programas especiales para cocinar distintos platillos de manera rápida y sencilla.

### Características

- Display digital en español
- 10 niveles de potencia
- 6 selecciones rápidas de cocinado
- Cocinado por etapas
- Timer de cocinado
- Descongelado por tiempo y peso
- Seguro para niños
- Botón de +30 segundos
- 127 volts/60hz



Medidas y pesos  
**sin empaque**



Medidas y pesos  
**con empaque**

Alto: 31.5 cm  
Ancho: 51.9 cm  
Profundo: 40.3 cm  
Peso: 15.7 kg

Alto: 38.2 cm  
Ancho: 58.3 cm  
Profundo: 54.4 cm  
Peso: 17.5 kg

Figure 7.1: Product dimensions.

Feature	Specification
Brand	Mabe
Model Number	HMM114SEJ
Color	Mirror
Product Dimensions (D x W x H)	40.3 x 51.9 x 31.5 cm
Capacity	1.4 Cubic Feet (40 L)

Feature	Specification
Power	2000 Watts
Voltage	120 Volts
Material	Plastic
Automatic Shut-off	Yes
Special Features	Defrost, Programmable
Product Weight	15.7 Kilograms
Installation Type	Freestanding
Control Type	Button



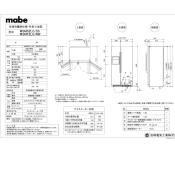
Figure 7.2: Technical data sheet.

## 8. WARRANTY AND SUPPORT

This Mabe microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and limitations.

For technical support, service, or warranty claims, please contact Mabe customer service. Contact details can typically be found on the Mabe official website or in your product documentation.

- **Online Support:** Visit the official Mabe website for FAQs and support resources.
- **Phone Support:** Refer to your product's packaging or Mabe's website for regional contact numbers.

	<p><a href="#"><b>Mabe HMM07CEBN Microwave Oven - Specifications and Installation Guide</b></a></p> <p>Detailed product specification sheet for the Mabe HMM07CEBN microwave oven, including its features, benefits, installation dimensions, and weight information.</p>
	<p><a href="#"><b>Manual de Instrucciones Horno de Empotre Mabe IO8042HGW / IO8042HEY</b></a></p> <p>Guía completa para la instalación, uso y mantenimiento del horno de empotre Mabe. Incluye especificaciones técnicas, advertencias de seguridad y funciones detalladas para los modelos IO8042HGW e IO8042HEY.</p>
	<p><a href="#"><b>Mabe Washing Machine LMA79114CBAKO &amp; Dryer SMG26N5MNBABO - Product Overview</b></a></p> <p>Detailed product information for Mabe automatic washing machine model LMA79114CBAKO and gas dryer model SMG26N5MNBABO, featuring specifications, key benefits, and installation guidelines.</p>
	<p><a href="#"><b>mabe MSMS2LG SS / MSMF2LG WW</b></a></p> <p>mabe MSMS2LG SS MSMF2LG WW</p>
	<p><a href="#"><b>Manual de Servicio Mabe Centro de Lavado: Modelos MCL6840 y MCL6040</b></a></p> <p>Manual de servicio completo para centros de lavado Mabe, cubriendo modelos MCL6840ESBB, MCL6840PSBB, MCL6040ESBB y MCL6040PSBB. Incluye especificaciones técnicas, guías de diagnóstico, desensamble y diagramas eléctricos.</p>
	<p><a href="#"><b>Mabe Top Load Washer Kraken 27" Service Manual</b></a></p> <p>Comprehensive service manual for Mabe Kraken 27" top-load washers, covering model nomenclature, safety procedures, disassembly, component replacement, and troubleshooting.</p>