



Manuals.plus /

› Keurig /

› Keurig K-Select Single-Serve K-Cup Pod Coffee Maker User Manual

Keurig K-Select

Keurig K-Select Single-Serve K-Cup Pod Coffee Maker

MODEL: K-SELECT

Brand: Keurig

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Keurig K-Select Single-Serve K-Cup Pod Coffee Maker. The K-Select brewer is designed to deliver a personalized brewing experience with features such as multiple brew sizes and a Strong Brew option. Please read this manual thoroughly before initial use and retain it for future reference.

SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only water in this appliance. Do not use any other liquids or foods.
- The brewer should always be kept in an upright position during use and storage.

PACKAGE CONTENTS

Verify that all components are present in the packaging:

- 1 Keurig K-Select Single-Serve Brewer
- 6-Count K-Cup Pod variety pack
- 1 water filter handle
- 1 filter

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Keurig K-Select coffee maker.



Figure 1: Front view of the Keurig K-Select coffee maker, showing the K-Cup pod holder, brew button, and drip tray. A clear glass mug is positioned to receive brewed coffee.

K·Select™

SINGLE SERVE COFFEE MAKER



PRODUCT DIMENSIONS

12.5" High
(17.0" High when open)

9.2" Wide

11.6" Deep

Weighs 7.3 lbs



Figure 2: Product dimensions of the Keurig K-Select brewer. The unit measures 12.5 inches high (17.0 inches when open), 9.2 inches wide, and 11.6 inches deep. It weighs 7.3 lbs.

Over 75 of the world's best beverage brands trust Keurig®



Figure 3: The 52oz removable water reservoir, located on the left side of the brewer, designed for easy refilling.



REMOVABLE DRIP TRAY

Fits a 7.2"
travel mug



Figure 4: The removable drip tray, which can accommodate travel mugs up to 7.4 inches tall and simplifies cleanup by catching accidental spills.

SETUP

Follow these steps for initial setup before brewing your first cup.

1. **Plug In:** Remove all packaging tape and materials. Plug the brewer into a grounded outlet.
2. **Rinse and Fill Water Reservoir:** Remove the water reservoir lid, then lift the reservoir straight up to remove it from the brewer. Rinse the reservoir with fresh water and fill it to the MAX fill line. Place the reservoir back on the brewer, ensuring it seats properly.
3. **First Cleansing Brew:** Place a large mug on the drip tray. Do not insert a K-Cup pod. Lift and lower the brewer handle. The brew size buttons will flash. Select the largest brew size (12 oz.) to start a cleansing brew. Pour the hot water into the sink. The brewer is now ready for use.

OPERATING INSTRUCTIONS

Your Keurig K-Select brewer offers simple button controls for a customized brewing experience.



Figure 5: The control panel features a power button, Strong Brew button, and four brew size buttons (6, 8, 10, 12 oz.). Indicator lights for Auto Off, Add Water, and Descale are also visible.



Figure 6: Overview of key features including the Strong Brew option, four available cup sizes (6, 8, 10, 12 oz.), the 52oz water reservoir, and a brew time of less than one minute.

HOW THE K-CUP® POD WORKS



Figure 7: Illustration of the K-Cup pod brewing process: hot water saturates freshly ground beans, flows through a paper filter, and gentle pressure extracts full-flavored coffee.

Brewing a K-Cup Pod

1. **Power On:** Press the power button to turn on the brewer.
2. **Fill Water Reservoir:** Ensure the water reservoir is filled with fresh water. The “Add Water” indicator will illuminate if the water level is low.
3. **Place Mug:** Place a mug on the drip tray.
4. **Insert K-Cup Pod:** Lift the brewer handle and place a K-Cup pod into the K-Cup pod holder. Lower the handle completely to close the lid.
5. **Select Brew Size:** The brew size buttons (6, 8, 10, 12 oz.) will flash. Select your desired brew size.
6. **Strong Brew (Optional):** For a bolder cup, press the “Strong” button before selecting your brew size. The “Strong” indicator light will illuminate.

7. **Brew:** The selected brew size button will illuminate solid, and brewing will begin. The brew will complete in less than one minute.
8. **Enjoy:** Once brewing is complete, carefully remove your mug. Lift the handle, remove and discard the used K-Cup pod.

Quiet Brew Technology

The Keurig K-Select features Quiet Brew Technology, which minimizes noise during the brewing process for a more peaceful experience.

Auto Off Feature

The brewer is equipped with an Auto Off feature that automatically turns off the brewer after a period of inactivity to save energy. This feature is programmable.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your Keurig K-Select coffee maker.

Cleaning the Exterior

Wipe the exterior of the brewer with a damp, non-abrasive cloth. Do not immerse the brewer in water or other liquids.

Cleaning the Drip Tray

The drip tray can accumulate spills. Remove the drip tray and empty any liquid. Wash it with warm, soapy water, rinse thoroughly, and dry. Replace the drip tray on the brewer.

Cleaning the Water Reservoir

The water reservoir should be cleaned periodically. Remove the reservoir and wash it with warm, soapy water. Rinse thoroughly and dry before refilling with fresh water.

Descaling

Over time, calcium deposits (scale) can build up in your brewer, affecting performance. The “Descale” indicator light will illuminate when descaling is recommended. Follow the descaling instructions provided by Keurig, typically involving a descaling solution or white vinegar, and multiple rinse cycles.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Brewer does not turn on.	No power.	Ensure the brewer is securely plugged into a grounded outlet. Check the circuit breaker.
“Add Water” light is on.	Water reservoir is low or empty.	Fill the water reservoir to the MAX fill line. Ensure it is seated correctly.
No coffee brews.	K-Cup pod not properly seated, or air in lines.	Lift and lower the handle to ensure the K-Cup pod is punctured. Perform a cleansing brew without a K-Cup pod to prime the system.
Coffee tastes weak.	Incorrect brew size selected, or Strong Brew not activated.	Select a smaller brew size or activate the Strong Brew feature for a bolder taste.
“Descale” light is on.	Calcium buildup in the brewer.	Perform a descaling procedure as per Keurig’s instructions.

SPECIFICATIONS

Brand:

Keurig

Model Name:

K-Select Coffee Maker

Color:

Matte White

Product Dimensions (D x W x H):

9.2"D x 11.6"W x 12.5"H

Item Weight:

7.4 pounds

Water Reservoir Capacity:

52 oz.

Brew Sizes:

6, 8, 10, 12 oz.

Special Features:

Strong Brew, Quiet Brew Technology, Large Water Reservoir

Coffee Maker Type:

Drip Coffee Machine

Exterior Finish:

Matte

Operation Mode:

Fully Automatic

Voltage:

120 Volts (AC)

Human Interface Input:

Buttons

UPC:

611247365762

ASIN:

B078NJS9PG

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official Keurig website or the warranty card included with your product. For further assistance or to download the official PDF user manual, visit the Keurig Support Page or contact Keurig customer service.