

[Manuals.plus](#) /

› [Krinner](#) /

› Krinner Christmas Tree Genie Tree Stand User Manual

Krinner 94735-EA

Krinner Christmas Tree Genie Tree Stand User Manual

MODEL: 94735-EA

[Introduction](#) [Key Features](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

The Krinner Christmas Tree Genie Tree Stand is designed for effortless and secure setup of your Christmas tree. This large model accommodates trees up to 8 feet in height with trunk diameters up to 6 inches, and features a generous 1-gallon water reservoir to keep your tree fresh throughout the season. Its innovative single-cable clamping system and foot pedal operation simplify the process of setting up and securing your tree straight and stable.



Image 1.1: The Krinner Christmas Tree Genie Tree Stand, showcasing its robust design and integrated foot pedal.

2. Key Features

- **Original Single Cable Operation:** Guarantees equal claw pressure around the trunk, regardless of whether the trunk is thick, thin, or crooked, ensuring a firm and straight stand.
- **Foot Pedal:** Provides the easiest setup, allowing you to secure the tree with minimal effort.
- **Security Lock:** Secure the foot pedal after fixing the tree to prevent unintentional opening and ensure stability.
- **Water Level Indicator:** A pop-up indicator tells you when to stop filling and when to refill water, helping to keep your tree hydrated.
- **1-Gallon Water Reservoir:** Ample capacity to keep your tree fresh and vibrant for longer.
- **Durable Construction:** Made from alloy steel and high-quality plastic for long-lasting use.



Image 2.1: Detailed diagram highlighting the key features of the Krinner Tree Genie, including the single cable, water level indicator, foot pedal, and security lock.

3. Setup Instructions

1. **Prepare the Tree Trunk:** Ensure the bottom of your tree trunk is cut flat and straight. No need to drill a hole for a spike.
2. **Open the Clamps:** Ensure the clamping claws within the stand are fully open.
3. **Insert the Tree:** Carefully place the tree trunk into the center of the stand, guiding it over the central spike.
4. **Secure the Tree:** Step on the foot pedal repeatedly until the claws firmly grip the tree trunk. The single cable system will ensure even pressure.
5. **Check Stability:** Gently shake the tree to ensure it is stable and upright. Adjust as needed by releasing the pedal slightly and re-securing.
6. **Engage Security Lock:** Once the tree is secure, engage the red security lock on the foot pedal to prevent

accidental release.

KRINNER

The Better Tree Stand

WATER RESERVOIR WITH LEVEL INDICATOR

Keep your tree fresh and looking great. The water indicator shows the maximum water height while filling the Christmas tree stand.

The Tree Genie L holds up to 1 gallon (3.8L) of water.



Image 3.1: Illustration demonstrating the simple foot pedal operation to secure the tree.

KRINNER

The Better Tree Stand

Max.
8 Ft.



Image 3.2: A Christmas tree securely placed in the Krinner stand, illustrating its capacity for trees up to 8 feet tall.

4. Operating Instructions

The Krinner Christmas Tree Genie is designed for straightforward operation once the tree is set up.

- **Watering:** Fill the water reservoir with fresh water. The integrated water level indicator will rise as the reservoir fills, showing the maximum water height.
- **Monitoring Water Level:** Regularly check the water level indicator. When the indicator begins to recede, it signifies that the tree has absorbed water and the reservoir needs refilling.
- **Tree Removal:** To remove the tree, disengage the security lock on the foot pedal. Then, firmly press the foot pedal down to release the clamping claws. Ensure you have a firm grip on the tree before releasing the pedal to prevent it from falling.

KRINNER

The Better Tree Stand

KRINNER ORIGINAL SINGLE CABLE OPERATION

The Krinner original single cable operation and clever clamping device ensures that the Christmas tree stands absolutely firm and straight whether it is thick, thin or crooked.



Image 4.1: Close-up of the water reservoir and the pop-up water level indicator, crucial for maintaining tree freshness.

KRINNER

The Better Tree Stand



Image 4.2: Visual guide on how to press the foot pedal to secure or release the tree.

5. Maintenance

- **Regular Watering:** Keep the water reservoir full to ensure your tree remains hydrated and fresh throughout its display period. A well-watered tree is less likely to shed needles.
- **Cleaning:** After the season, empty any remaining water from the reservoir. Clean the stand with mild soap and water to remove sap or debris. Rinse thoroughly.
- **Storage:** Store the tree stand in a cool, dry place away from direct sunlight when not in use.

6. Troubleshooting

- **Tree Not Stable:**
 - Ensure the tree trunk is cut flat and straight at the base.

- Verify that the foot pedal has been pressed firmly and the security lock is engaged.
- Check if the tree trunk diameter is within the recommended range (up to 6 inches).

• **Water Level Indicator Not Moving:**

- Ensure the stand is on a level surface.
- Check for any obstructions preventing the indicator from moving freely.

• **Difficulty Releasing Tree:**

- Ensure the security lock is fully disengaged.
- Apply firm, consistent pressure to the foot pedal.

7. Specifications

Attribute	Detail
Brand	Krinner
Model Number	94735-EA
Product Dimensions	18"D x 18"W x 96"H (for tree height)
Color	Green
Material	Alloy Steel
Item Package Quantity	1
Recommended Uses	Christmas Tree
Max Tree Height	8 ft
Max Trunk Diameter	6 inches
Water Reservoir Capacity	1 Gallon
Item Weight	10.58 pounds
UPC	832494000118

8. Warranty & Support

For information regarding product warranty, returns, or technical support, please refer to the product packaging or contact Krinner customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question