

Nixplay W10B

Nixplay Seed 10 Inch WiFi Digital Picture Frame Instruction Manual

Model: W10B

1. PRODUCT OVERVIEW

The Nixplay Seed 10 Inch WiFi Digital Picture Frame allows you to display and share your cherished photos and videos instantly. This frame connects to your home Wi-Fi network, enabling seamless content management through the Nixplay app or email.



Image: Front and back view of the Nixplay Seed 10 Inch WiFi Digital Picture Frame.

2. SETUP

Follow these steps to set up your Nixplay Seed Digital Picture Frame:

1. **Unpack the Frame:** Carefully remove the frame and all accessories from the packaging. Ensure all components are present: the Nixplay frame, power adapter, and quick start guide.
2. **Position the Frame:** The frame features a flexible power cable that doubles as a stand. Bend the cable to achieve your desired viewing angle and orientation (portrait or landscape).
3. **Connect Power:** Plug the power adapter into the frame and then into a wall outlet. The frame will automatically power on.
4. **Initial On-Screen Setup:** On the frame's screen, select your preferred language and connect to your Wi-Fi network by entering the password. The frame may download and install updates, which could take a few minutes.

5. **Download the Nixplay App:** Download the Nixplay app on your smartphone (available for iOS and Android).
6. **Create an Account:** Open the Nixplay app and create a new account or log in if you already have one.
7. **Link Your Frame:** Follow the in-app instructions to link your Nixplay frame to your account. You will typically need to enter the serial number displayed on the frame's screen during setup.



Image: Nixplay Seed 10 Inch WiFi Digital Picture Frame components.

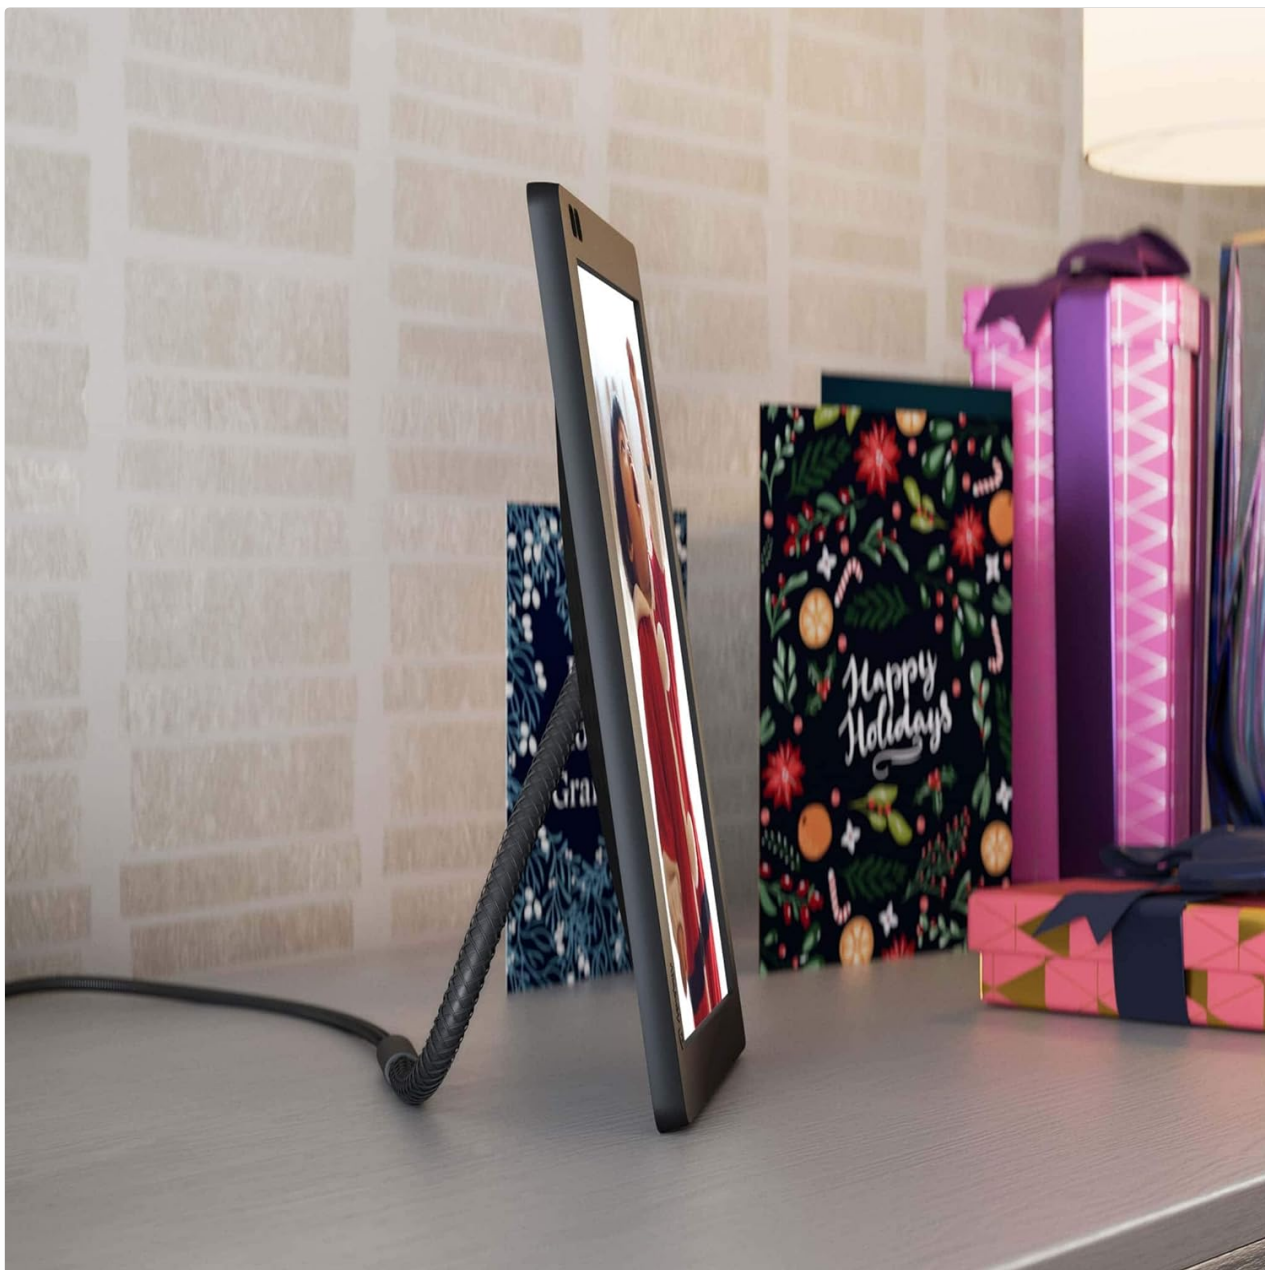


Image: Side view of the frame demonstrating the flexible stand.

Setup Demonstration Video

Video: An official Nixplay product presentation demonstrating the physical setup, including bending the stand, plugging in the power, and rotating the frame between portrait and landscape orientations.

3. OPERATING THE FRAME

3.1 Uploading and Managing Photos/Videos

- **Via Nixplay App:** Use the Nixplay app to select photos and videos from your phone's camera roll, social media (Facebook, Instagram), or cloud services (Dropbox, Flickr, Google Photos - subscription may be required for some features). Create albums and assign them to your frame.
- **Via Email:** Each Nixplay frame has a unique email address. You can email photos directly to this address for instant display on your frame.
- **Sharing with Others:** Invite family and friends to contribute photos and videos to your frame's albums

through the app.

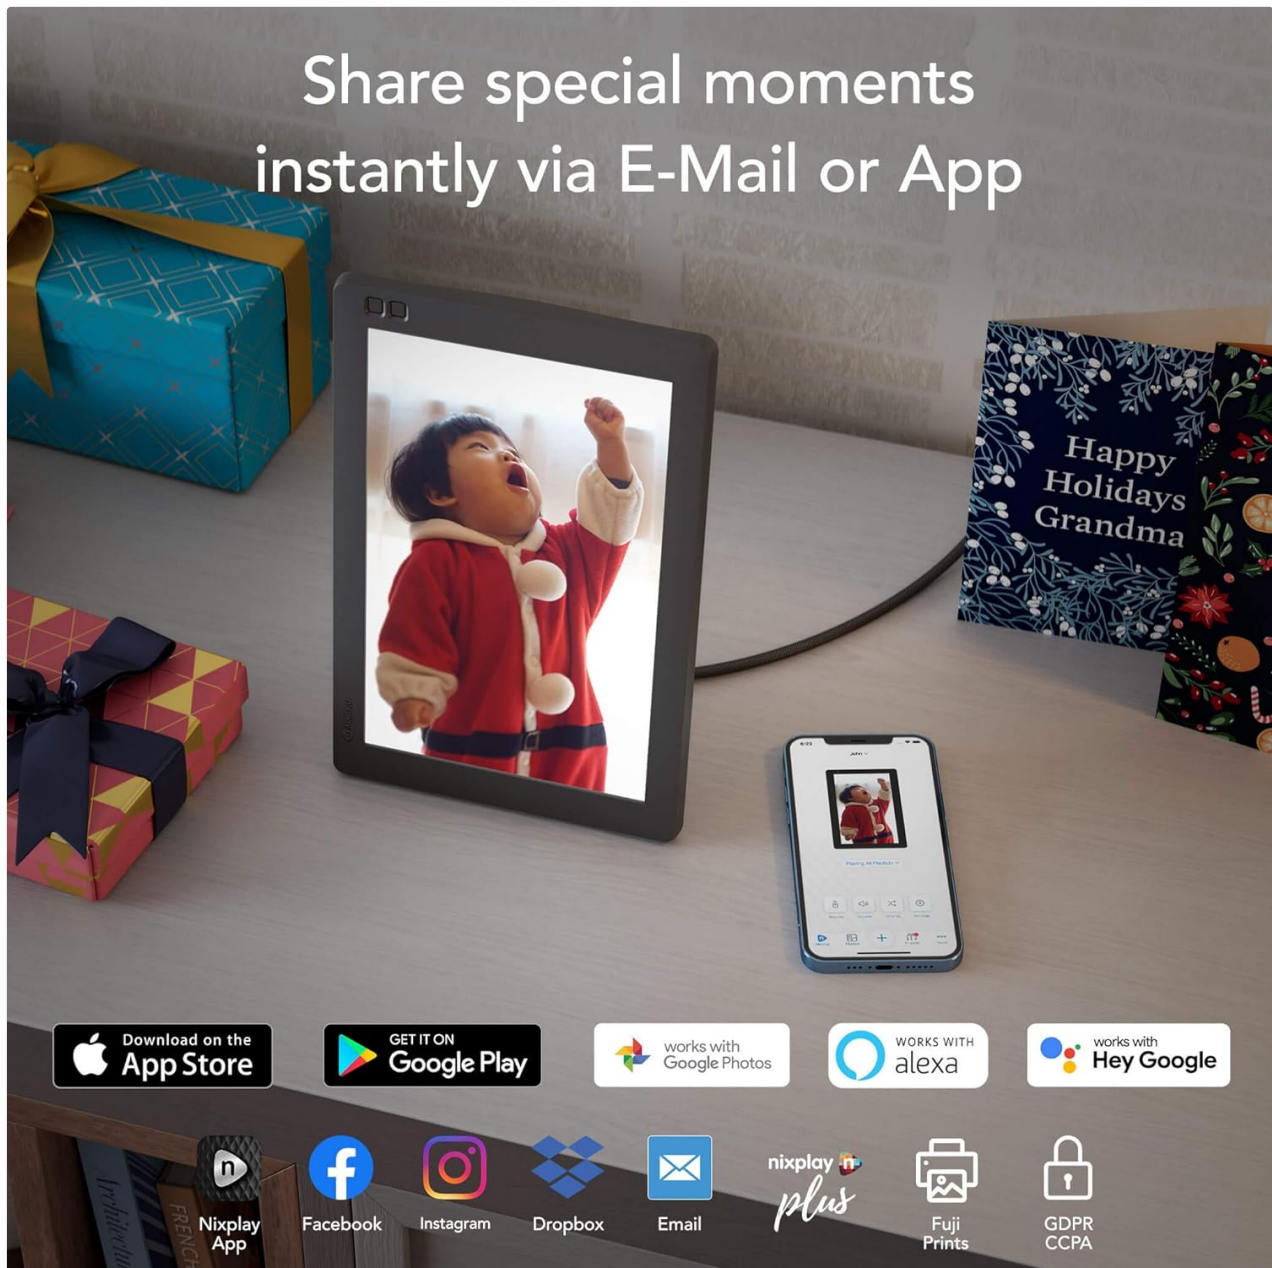


Image: Nixplay app interface demonstrating sharing options and integrations.

3.2 Display Modes and Settings

- **Smart Face Framing:** AI-driven smart-centering ensures images are perfectly framed.
- **Auto-Rotation:** The frame automatically switches between landscape and portrait modes based on its physical orientation.
- **Customizable Slideshows:** Adjust auto slideshow settings, including transition effects (e.g., random, cross fade, circle, wipe, slice, push, reveal) and display duration for each photo.
- **Volume Control:** Adjust the volume for videos played on the frame.
- **Brightness:** Control the screen brightness to suit your environment.

3.3 Activity Sensor and Sleep Schedule

- **Hu-Motion Sensor:** The integrated motion sensor can detect presence in the room, automatically turning the frame on when you enter and off when you leave. You can configure the sleep duration after inactivity (e.g., 15 seconds, 1 minute, 5 minutes, up to 3 hours).
- **Sleep Schedule:** Set specific times for the frame to go into standby mode and wake up, conserving energy during periods of inactivity, such as overnight.

4. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. Avoid abrasive cleaners or sprays directly on the screen.
- **Cleaning the Frame:** Wipe the frame's exterior with a soft, dry cloth.
- **Software Updates:** The frame will periodically check for and download software updates to ensure optimal performance and access to new features. Ensure your frame is connected to Wi-Fi for these updates.

5. TROUBLESHOOTING

- **Wi-Fi Connection Issues:** If the frame fails to connect to Wi-Fi, double-check your network password. A factory reset (using a paperclip in the small round hole) can resolve persistent connection problems.
- **Motion Sensor/Auto On/Off Not Working:** Verify that the activity sensor is enabled in the frame settings via the app. Check the sensitivity level and ensure no obstructions are blocking the sensor. Also, confirm that the sleep schedule is not overriding the sensor's functionality.
- **Photos Not Shuffling Correctly:** In the app's frame settings, ensure the 'Shuffle' option is enabled for your albums.
- **Frame Not Displaying Photos:** Ensure the frame is properly linked to your Nixplay account and that albums are assigned to it within the app. Check your internet connection.

6. SPECIFICATIONS

- **Model Number:** W10B
- **Screen Size:** 10.1 Inches
- **Resolution:** 1080p
- **Product Dimensions:** 10.2 x 0.98 x 6.69 inches
- **Item Weight:** 1.1 pounds
- **Batteries:** 1 Lithium Metal battery required (for remote control).
- **Compatible Devices:** Personal Computer, Smartphone, Tablet
- **Manufacturer:** Creedon Technologies USA LLC

7. WARRANTY AND SUPPORT




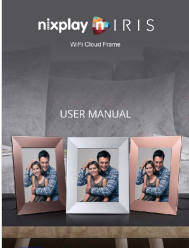

The Nixplay Seed 10 Inch WiFi Digital Picture Frame comes with a **1-Year Parts & Labor Warranty** from the


date of purchase.

For technical assistance, troubleshooting, or warranty claims, please contact Nixplay Customer Service through their official website or the Nixplay app.

© 2025 Nixplay. All rights reserved.

Related Documents - W10B

	<p>Nixplay WiFi Cloud Frame User Guide: Setup, Features, and Support</p> <p>Comprehensive guide to the Universal Nixplay WiFi Cloud Frame. Learn setup, photo management, cloud sharing, mobile app usage, frame settings, and troubleshooting. Connect with family and friends.</p>
	<p>Nixplay W15F Wifi Digital Photo Frame User Guide</p> <p>A comprehensive guide to setting up, using, and troubleshooting your Nixplay W15F Wifi Digital Photo Frame. Learn about the remote control, Wi-Fi connection, account creation, wall mounting, and photo sharing features.</p>
	<p>Nixplay Smart Photo Frame: Quick Start Guide and Setup</p> <p>Comprehensive guide to setting up and using your Nixplay Smart Photo Frame, including remote control functions, wall mounting, app connection, and app features.</p>
	<p>Nixplay Iris WiFi Cloud Frame User Manual</p> <p>Comprehensive user manual for the Nixplay Iris WiFi Cloud Frame, covering setup, photo management, playlists, settings, and important safety information.</p>
	<p>Nixplay Cloud Frame User Manual: Setup, Features, and Operation</p> <p>Comprehensive user manual for the Nixplay Cloud Frame, guiding users through setup, connecting to WiFi, managing photos and slideshows via Nixplay account, utilizing USB/SD card input, adjusting frame settings, and important safety information.</p>

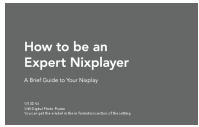

[Nixplay W13D-06 Wifi Digital Photo Frame User Guide](#)

A comprehensive guide to setting up, using, and mounting your Nixplay W13D-06 Wifi Digital Photo Frame, including remote control operation and account creation.