

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI 10x20 ft Pop Up Canopy Tent Instruction Manual

VINGLI bI20

VINGLI 10x20 ft Pop Up Canopy Tent Instruction Manual

Model: bI20

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your VINGLI 10x20 ft Pop Up Canopy Tent with 6 Sidewalls. Please read these instructions carefully before setup and retain for future reference.



Image: VINGLI 10x20 ft Pop Up Canopy Tent set up in an outdoor market environment, demonstrating its large coverage area.

Safety Information

WARNING: Failure to follow these safety guidelines may result in injury or damage to the product.

- Ensure the shelter is securely anchored in windy conditions. Use all provided ropes and stakes.
- Do not leave the shelter exposed to direct sunlight for extended periods without supervision.
- Keep the shelter away from open flames or heat sources.
- Do not use the canopy in severe weather conditions such as heavy rain, strong winds, or snow.
- Always disassemble and store the canopy during adverse weather to prevent damage.

Package Contents

Please verify that all components are present before beginning assembly:

- Pop-Up Canopy Frame (Pre-assembled)
- Canopy Top Fabric
- 6 Removable Sidewalls
- Carry Bag
- Ground Stakes and Ropes (for anchoring)

PRODUCT SIZE



Portable and Convenient



Image: Diagram illustrating the canopy's dimensions (10x20 ft with adjustable heights) and the compact size of the carry bag (46.9" x 8.7" x 7.5"), highlighting its portability.

SETUP INSTRUCTIONS


Two persons are recommended for efficient and safe setup.

- Unpack and Position:** Take the fully assembled frame with the canopy top out of the carry bag. Place the frame in the desired setup location.

2. **Expand Frame:** With a person on each side, gently pull the frame outwards to partially open it.
3. **Attach Canopy Top (if not pre-attached):** If the canopy fabric is separate, drape it over the partially opened frame, ensuring it is centered and corners are aligned. Secure the canopy top to the frame using any attached fasteners (e.g., Velcro straps).
4. **Fully Extend Frame:** Continue pulling the frame open until it is almost fully extended. Push the central lock mechanism upwards at the same time until it clicks into place, securing the frame.
5. **Adjust Height:** Extend the legs to your desired height. The canopy features 3 different height positions. Press the thumb button height adjuster on each leg and slide the inner leg upwards or downwards until it locks into the desired position.
6. **Attach Sidewalls:** If using, attach the 6 sidewalls to the canopy frame using the integrated zippers and Velcro straps.
7. **Secure the Canopy:** Use the provided ground stakes and ropes to anchor the canopy securely to the ground. This is crucial for stability, especially in light wind conditions.

EASILY SET UP

TWO PERSON
RECOMMENDED

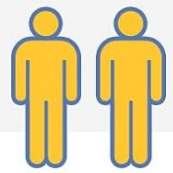

STEP 1

Open the frame and put the canopy on

STEP 2

Push the central lock
at the same time



STEP 3

Adjust the height

Image: A three-step visual guide demonstrating the easy setup process: 1) Open the frame and place the canopy on, 2) Push the central lock, and 3) Adjust the height.

OPERATING INSTRUCTIONS

Adjusting Height

The VINGLI canopy offers 3 adjustable height positions. To change the height, locate the thumb button height adjuster on each leg. Press the button and slide the inner leg up or down to the desired position until it clicks securely into place. Ensure all four legs are set to the same height for stability.

Using Sidewalls

The 6 removable sidewalls provide additional protection from sun, wind, and light rain. They can be attached or removed as needed using the integrated zippers and Velcro fasteners. For optimal ventilation, some sidewalls can be partially opened or tied back.



Image: Visual representation of the canopy's UV protection (blocking 99% of UV rays) and waterproof capabilities, shown with sidewalls attached during a light rain shower.

MAINTENANCE

Cleaning

- Clean the canopy fabric with mild soap and cool water. Do not use harsh detergents, bleach, or abrasive cleaners.
- Rinse thoroughly and allow the fabric to air dry completely before storage to prevent mildew.
- Wipe the metal frame with a damp cloth as needed.

Storage

- Ensure the canopy fabric and frame are completely dry before folding and storing.
- Carefully fold the canopy fabric and collapse the frame according to the reverse of the setup instructions.
- Store all components in the provided carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.

Inspection

- Periodically inspect the frame for any signs of damage, rust, or loose connections.
- Check the canopy fabric for tears, holes, or weakened seams. Repair minor damage promptly to prevent further deterioration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy is unstable or collapses in wind.	Insufficient anchoring; strong winds.	Ensure all legs are securely staked and ropes are taut. Do not use in strong winds. Disassemble immediately if winds become excessive.
Water pooling on canopy top.	Improper setup; heavy rain.	Ensure the frame is fully extended and the canopy top is taut. The pointed profile is designed to prevent pooling, but heavy rain may still cause issues. Do not leave up in heavy rain.
Water leaking through canopy fabric.	Fabric wear; extreme weather; manufacturing variation.	While the canopy is waterproof, prolonged exposure to heavy rain or wear can affect performance. Consider applying a waterproofing spray to the fabric if persistent leaking occurs. Avoid use in heavy rain.
Frame difficult to open/close.	Frame components are stiff or misaligned.	Ensure all locking mechanisms are disengaged. Apply a silicone-based lubricant to moving parts if necessary. Ensure two people are assisting with setup/takedown.

SPECIFICATIONS

- **Brand:** VINGLI
- **Model Number:** bl20
- **Size:** 10x20 ft (240"L x 120"W x 104.4"H)
- **Floor Area:** 200 square feet

- **Max Ceiling Height:** 8.8 feet (Adjustable)
- **Material:** Metal (Frame), Alloy Steel (Frame/Pole), UV Coated Tarp (Canopy Fabric)
- **Color:** Blue
- **Item Weight:** 70.5 pounds
- **Recommended Uses:** Camping, Outdoor Activities, Parties, Commercial Events
- **UV Protection:** Blocks 99% of harmful UV rays (UPF 50+)
- **Water Resistance Level:** Waterproof
- **Closure Type (Sidewalls):** Zipper
- **UPC:** 611890863721



PRODUCT DETAILS



Durable truss bar for high stability of the frame



Thumb button height adjuster of 3 positions



Sturdy nylon feet with drill holes

Image: Close-up details of the canopy's construction, including a durable truss bar for frame stability, a thumb button height adjuster with 3 positions, and sturdy nylon feet with drill holes for anchoring.

WARRANTY INFORMATION

VINGLI products are designed for quality and durability. For specific warranty terms and conditions, please refer to the product packaging or contact VINGLI customer support directly. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact VINGLI customer support. You can find more information and contact details by visiting the official VINGLI Store on Amazon:

Visit VINGLI
Store

© 2023 VINGLI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question