

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PEPPER JOBS](#) /
- › [Pepper Jobs W10 GYRO Air TV Remote User Manual](#)

## PEPPER JOBS W10 GYRO

# Pepper Jobs W10 GYRO Air TV Remote User Manual

Model: W10 GYRO | Brand: PEPPER JOBS

## 1. INTRODUCTION

The Pepper Jobs W10 GYRO Air TV Remote is a versatile 3-in-1 device designed to enhance your control over Windows 10 and Windows 11 operating systems. It functions as a TV remote, a mouse, and a full QWERTY keyboard, providing comprehensive control for your PC connected to a display.



Image: Front view of the Pepper Jobs W10 GYRO Air TV Remote, showcasing its sleek design and primary control buttons.

## 2. PRODUCT FEATURES

- **Optimized for Windows 10/11:** Shortcut buttons and hotkeys are specifically designed for seamless interaction with Windows 10 and Windows 11 operating systems.
- **Dual-Sided Backlit QWERTY Keyboard:** Features a full QWERTY keyboard on one side and control buttons on the other, both with LED backlighting for visibility in low-light conditions. Includes a power-saving timer that automatically turns off LEDs after 5 seconds of inactivity.

- **3-in-1 Control Design:** Functions as a TV remote, a mouse, and a keyboard, offering consolidated control for various devices. A dedicated switching key allows easy toggling between PC remote and mouse/keyboard modes.
- **IR Learning Capability:** Can learn up to 34 keys from your existing TV IR remote, enabling control of multiple devices with a single remote.
- **Plug and Play Connectivity:** Operates via a 2.4 GHz radio frequency USB receiver with an operating distance of up to 10 meters. No driver installation is required.
- **6-Axis Gyroscope:** Provides precise air mouse functionality, allowing intuitive cursor control by simply moving the remote in the air.



Image: Diagram illustrating the dimensions of the W10 GYRO remote, showing its compact and ergonomic design.

### 3. SETUP GUIDE

#### 3.1 Battery Installation

The W10 GYRO remote requires **two AAA batteries** (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.

4. Slide the cover back into place until it clicks securely.

# Power Supply

Only need 2\*AAA batteries (NOT included) to start using your air remote.



Image: View of the remote's battery compartment with two AAA batteries being inserted, demonstrating the correct orientation.

## 3.2 USB Receiver Connection

The W10 GYRO remote connects to your device via a USB receiver. This is a plug-and-play device, requiring no additional driver installation.

1. Locate the small USB receiver, typically stored within the remote's battery compartment or included separately in the packaging.
2. Plug the USB receiver into an available USB port on your Windows 10/11 PC, Mini PC, Laptop, Tablet, or compatible TV.
3. The system will automatically detect and install the necessary components. The remote should be ready for use within a few seconds.



Image: Visual representation of the W10 GYRO remote and its USB receiver, alongside various compatible devices such as Mini PC, Computer, Laptop, Tablet, and TV, highlighting its broad compatibility.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Navigation and Keyboard Use

The remote features a dual-sided design. The front side contains primary control buttons, while the reverse side houses a full QWERTY keyboard.

- **Front Side:** Use the directional pad and "Enter/OK" button for menu navigation. Volume and media control buttons are also present.
- **Back Side (QWERTY Keyboard):** Flip the remote to access the full keyboard for typing. The backlight will illuminate automatically in low-light conditions.
- **PC/TV Switch Button:** Use this button to easily switch between PC control mode (mouse/keyboard) and TV remote mode (if IR learning is configured).

### 4.2 Gyro Air Mouse Function

The 6-axis gyroscope allows you to control the on-screen cursor by moving the remote in the air. This is particularly useful for navigating graphical interfaces.

1. Press the dedicated "Mouse" button (often indicated by a cursor icon) on the front side of the remote to activate the air mouse function.
2. Move the remote in the air to control the cursor on your screen.
3. Click the "Enter/OK" button to perform a left-click action.
4. Press the "Mouse" button again to deactivate the air mouse and return to directional pad navigation.

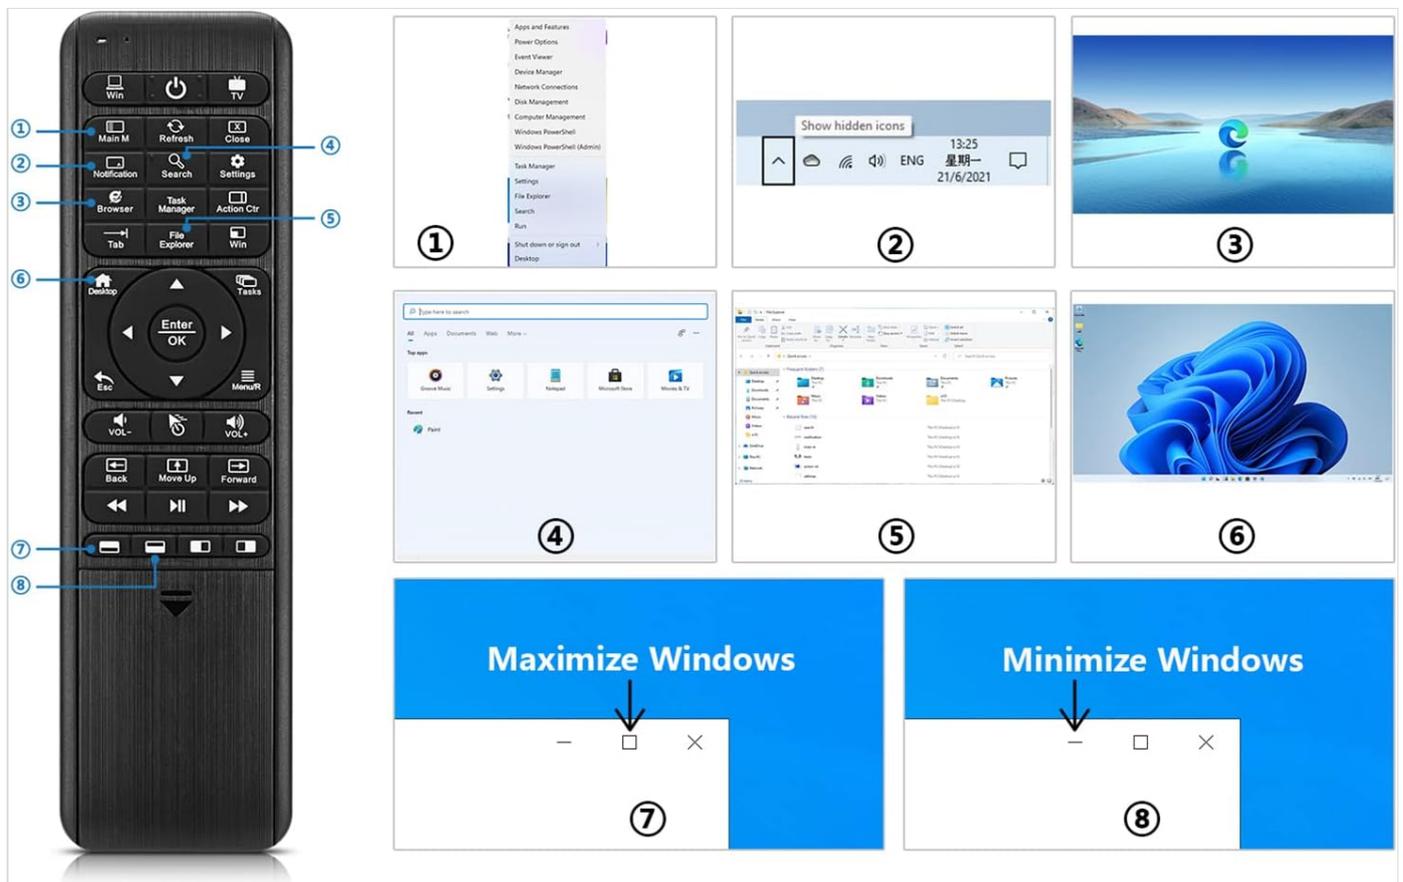


Image: Detailed view of the remote's front side, highlighting key buttons and illustrating the air mouse cursor movement on a screen.

### 4.3 IR Learning Function

The IR learning feature allows the W10 GYRO remote to mimic functions from your existing infrared TV remote. This consolidates control to a single device.

1. Ensure both the W10 GYRO remote and your original IR remote have fresh batteries.
2. Place both remotes head-to-head, approximately 1-3 cm apart.
3. Press and hold the "TV" button on the W10 GYRO remote until the LED indicator starts blinking rapidly, then stays solid. This indicates it's in learning mode.
4. Press the button on the W10 GYRO remote that you wish to program (e.g., Power button). The LED will blink slowly.
5. Press the corresponding button on your original IR remote. The LED on the W10 GYRO remote will blink rapidly three times, then stay solid, indicating successful learning.
6. Repeat steps 4 and 5 for up to 34 desired keys.
7. Press the "TV" button again on the W10 GYRO remote to exit learning mode. The LED will turn off.

For a visual guide on IR learning, please refer to online video tutorials provided by Pepper Jobs or authorized distributors.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your Pepper Jobs W10 GYRO remote, follow these maintenance

guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Care:** Replace batteries when the remote's performance degrades or if the backlight becomes dim. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is unresponsive.	Low or dead batteries; USB receiver not properly connected; remote out of range.	Replace batteries. Ensure USB receiver is firmly plugged into a working USB port. Move closer to the connected device (within 10 meters).
Air mouse cursor is erratic or not moving.	Gyroscope needs calibration; interference.	Place the remote on a flat, stable surface for a few seconds to allow the gyroscope to self-calibrate. Ensure no strong magnetic fields or other wireless devices are causing interference.
IR learning fails.	Incorrect learning procedure; weak IR signal from original remote; distance between remotes.	Review the IR learning steps in Section 4.3. Ensure remotes are placed head-to-head and close (1-3 cm). Try with fresh batteries in both remotes.
Backlight not working.	Power saving mode; low batteries.	The backlight automatically turns off after 5 seconds of inactivity. Press any button to reactivate. Replace batteries if the issue persists.

## 7. SPECIFICATIONS

Feature	Detail
Brand	PEPPER JOBS
Model Number	W10 GYRO
Wireless Type	2.4 GHz Radio Frequency, Infrared
Operating System Compatibility	Windows (Optimized for Win 10/11)
Item Weight	2.92 ounces
Product Dimensions (LxWxH)	2.51 x 0.7 x 0.23 inches
Battery Type	2 AAA batteries (Required, not included)
Max Number of Supported Devices	1 (plus IR learning for additional devices)
Special Feature	Backlit Keyboard, 6-Axis Gyro

## 8. WARRANTY AND SUPPORT

The Pepper Jobs W10 GYRO Air TV Remote comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable operation under normal use.

For technical assistance, troubleshooting, or warranty claims, please feel free to contact our customer service. You can typically find contact information on the product packaging or the official Pepper Jobs website.

Please retain your proof of purchase for warranty validation.