

[Manuals.plus](#) /

› [SoundBot](#) /

› SoundBot SB572 Wireless Bluetooth Speaker User Manual

SoundBot SB572

SoundBot SB572 Wireless Bluetooth Speaker User Manual

1. INTRODUCTION

The SoundBot SB572 is a 3-watt, 4.0 channel wireless Bluetooth speaker designed for portable audio. It features 52mm premium drivers for clear sound, Bluetooth 4.0 connectivity, and a durable silicon finish that provides shock and water resistance. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your SB572 speaker.



Figure 1: SoundBot SB572 Wireless Bluetooth Speaker

This image displays the SoundBot SB572 speaker in black, highlighting its compact, rectangular design with a front speaker grille and visible control buttons on the side or top panel. The durable silicon casing is also apparent.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- SoundBot SB572 Bluetooth Speaker
- MicroUSB Charging Cable
- 3.5mm Audio Cable
- User Guide (this document)

3. PRODUCT FEATURES

- **Crystal Clear Audio:** 3-watt HD loudspeakers with 52mm drivers for dynamic sound.
- **Bluetooth 4.0 Connectivity:** Wireless streaming up to 33 feet (10 meters) line of sight.
- **Extended Playback:** Up to 10 hours of music playback on a single charge.
- **Durable Design:** Shock and water-resistant silicon material for outdoor and indoor use.

- **Versatile Connectivity:** Built-in 3.5mm audio line-in for non-Bluetooth devices.
- **Hands-Free Calling:** Integrated microphone for speakerphone functionality.
- **Universal Compatibility:** Works with Android, iPhone, iPad, tablets, smartphones, iPods, MP3/MP4 players, and other Bluetooth-enabled or AUX-compatible devices.

4. SETUP

4.1 Charging the Speaker

1. Connect the MicroUSB charging cable to the charging port on the SB572 speaker.
2. Connect the other end of the MicroUSB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging. It will turn off or change color once the speaker is fully charged.
4. A full charge typically takes a few hours and provides up to 10 hours of playback.

4.2 Powering On/Off

- To power on, press and hold the Power button until you hear an audible indication or see the LED indicator light up.
- To power off, press and hold the Power button again until the indicator light turns off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and within 3 feet (1 meter) of your Bluetooth-enabled device.
2. The speaker will automatically enter pairing mode, indicated by a blinking blue LED light.
3. On your device (smartphone, tablet, etc.), go to the Bluetooth settings and enable Bluetooth.
4. Search for available devices. Select "SB572" from the list.
5. Once paired, the speaker will emit an audible confirmation, and the blue LED light will stop blinking and remain solid.
6. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

The SB572 speaker features intuitive button controls for various functions:

- **Power Button:** Press and hold to power on/off.
- **Play/Pause Button:** Press once to play or pause audio.
- **Volume Up (+):** Press to increase volume. Press and hold to skip to the next track.
- **Volume Down (-):** Press to decrease volume. Press and hold to go to the previous track.
- **Call Button:** Press to answer an incoming call. Press again to end a call. Press and hold to reject a call.

5.2 Bluetooth Audio Playback

After successful Bluetooth pairing, audio from your connected device will stream wirelessly to the SB572 speaker. Use the speaker's control buttons or your device's controls to manage playback and volume.

5.3 AUX Input Mode

To use the speaker with non-Bluetooth devices:

1. Connect one end of the 3.5mm audio cable to the AUX-in port on the SB572 speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output port of your device.
3. The speaker will automatically switch to AUX mode.
4. Control playback and volume directly from your connected device.

5.4 Hands-Free Calling

When connected via Bluetooth, the SB572 can be used as a speakerphone:

- **Answering a Call:** Press the Call button once.
- **Ending a Call:** Press the Call button once during a call.
- **Rejecting a Call:** Press and hold the Call button for 2 seconds.

6. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is water-resistant, not waterproof. Do not submerge it in water. Ensure the charging port cover is securely closed when exposed to moisture.
- **Storage:** Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the MicroUSB cable.
Cannot pair via Bluetooth.	• Ensure the speaker is in pairing mode (blinking blue LED). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device (within 33 feet/10 meters). • Turn off and on both the speaker and your device's Bluetooth. • Clear previous Bluetooth connections on your device if necessary.
No sound or low volume.	• Increase the volume on both the speaker and your connected device. • Ensure the speaker is properly paired (Bluetooth) or the 3.5mm cable is fully inserted (AUX mode). • Check if the audio source on your device is playing.

Problem	Possible Solution
Bluetooth connection stutters or disconnects.	• Reduce the distance between the speaker and your device. • Ensure there are no major obstructions (walls, large metal objects) between the devices. • Avoid strong electromagnetic interference from other devices. • Ensure the speaker is not charging while in use, as this can sometimes cause interference.
Sound quality is poor.	• Ensure the audio source is of good quality. • Adjust the volume levels on both the speaker and the source device to avoid distortion. • Check for physical damage to the speaker.

8. SPECIFICATIONS

Feature	Detail
Brand	SoundBot
Model Number	SB572
Speaker Maximum Output Power	3 Watts
Number of Audio Channels	4.0
Connectivity Technology	Auxiliary, Bluetooth, Wireless
Wireless Technology Type	Bluetooth 4.0
Frequency Response	2.48 GHz
Signal-to-Noise Ratio	75 dB
Audio Output Mode	Stereo
Battery Average Life	10 Hours
Number of Batteries	1 Lithium Metal (included)
Control Method	Button
Is Waterproof	Yes (Water-resistant)
Colour	Black
Item Weight	322.05 Grams
Compatible Devices	Android, iPhone, iPad, tablets, smartphones, iPods, MP3, MP4, radio players, and other Bluetooth enabled digital players or media devices with aux port.

9. WARRANTY AND SUPPORT

9.1 Limited Warranty

SoundBot provides a **1-year limited warranty** from the date of purchase. This warranty covers defects in material or workmanship under normal use. It does not cover problems caused by conditions, malfunctions, or damage not resulting from defects in material or workmanship.

If a product or part proves defective during the warranty period, SoundBot will repair or replace it at no charge, using new or refurbished parts. A replacement product or part assumes the remaining warranty of the original product or 1 year from the date of replacement/repair, whichever is longer.

9.2 Customer Support

For warranty service or technical support, please contact SoundBot customer service:

- **Email:** care@soundbot.in
- **Phone:** +91-8700702823

Please have your proof of purchase and product model number (SB572) ready when contacting support.

10. IMPORTANT SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Keep the speaker away from strong magnetic fields.
- Avoid listening at excessively high volumes for extended periods to prevent hearing damage.
- Dispose of the battery and speaker according to local regulations. Do not dispose of in household waste.