

[manuals.plus](#) /

› [CLP](#) /

› [CLP Pepe Visitor Chair Instruction Manual \(Model 1817113104\)](#)

CLP 1817113104

CLP Pepe Visitor Chair Instruction Manual

Model: 1817113104

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your CLP Pepe Visitor Chair. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.





Image 1.1: Front view of the CLP Pepe Visitor Chair with an oak-colored wooden seat and chrome-plated metal legs.

2. SAFETY INFORMATION

- **Maximum Load Capacity:** The chair is designed to support a maximum weight of **120 kg (264 lbs)**. Do not exceed this limit.
- Ensure the chair is placed on a stable, level surface before use to prevent tipping.
- Keep fingers and clothing clear of moving parts during assembly.
- Regularly check all fasteners to ensure they remain tight.
- Do not stand on the chair.



Image 2.1: Illustration indicating the maximum load capacity of 120 kg for the chair.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Chair Seat and Backrest (Integrated Wooden Shell)
- Metal Leg Frame (4 legs)
- Floor Protectors (Pre-installed or separate)
- Assembly Hardware (Screws, washers, Allen key)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is straightforward and typically requires one person. Please follow these steps carefully.

4.1. Required Tools

- Included Allen Key

4.2. Assembly Steps

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Leg Frame to Seat:** Align the metal leg frame with the pre-drilled holes on the underside of the wooden seat shell.
3. **Secure with Screws:** Insert the provided screws through the leg frame and into the seat. Hand-tighten all screws initially.
4. **Final Tightening:** Once all screws are in place, use the Allen key to fully tighten them. Ensure all connections are secure but do not overtighten.
5. **Check Stability:** Place the assembled chair on a flat surface and gently test its stability. If it wobbles, check that all screws are evenly tightened.



Image 4.1: Visual representation of the chair assembly process, including components and tools.

5. USAGE GUIDELINES

- Use the chair for seating purposes only.
- Avoid sudden movements or leaning excessively on the backrest, especially if the chair is not fully stable.
- Do not expose the chair to extreme temperatures or direct sunlight for prolonged periods, as this may affect the wood finish.
- The integrated floor protectors are designed to prevent scratches on various floor types.



Image 5.1: The CLP Pepe chairs arranged around a dining table, demonstrating typical usage in a home environment.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your chair.

- **Cleaning:**
 - For light dirt, wipe the wooden surfaces with a damp cotton cloth.
 - For more thorough cleaning, use a cotton cloth moistened with lukewarm water.
 - Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the wood finish or metal.
 - Dry immediately with a clean, dry cloth after cleaning.
- **Inspection:** Periodically check all screws and connections for tightness. Retighten as necessary to maintain stability.
- **Floor Protectors:** Ensure floor protectors are intact and replace if worn to continue protecting your floors.



Image 6.1: Illustration representing the recommended cleaning method using a cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles	Unevenly tightened screws; uneven floor surface.	Ensure all assembly screws are tightened evenly. Move the chair to a level surface.
Scratches on floor	Worn or missing floor protectors.	Check and replace floor protectors if necessary.
Squeaking noise	Loose connections between seat and frame.	Retighten all assembly screws.

8. PRODUCT SPECIFICATIONS

Brand	CLP
Model Number	1817113104
Color	Oak
Overall Dimensions (L x W x H)	47 cm x 43 cm x 87 cm (18.5 in x 16.9 in x 34.3 in)
Seat Dimensions (W x D)	Approx. 40 cm x 36 cm (15.7 in x 14.2 in)
Seat Height	Approx. 45 cm (17.7 in)
Backrest Height	Approx. 42 cm (16.5 in)
Weight	4 kg (8.8 lbs)
Maximum Load Capacity	120 kg (264 lbs)
Materials	Wooden seat shell, Metallic frame



Image 8.1: Detailed dimensional diagram of the CLP Pepe chair, including height, width, depth, and weight/load capacity.

9. WARRANTY INFORMATION

CLP products are manufactured to high-quality standards. For specific warranty details, please refer to the purchase documentation or contact your retailer. Typically, a standard manufacturer's warranty covers defects in materials and workmanship under normal use.

This warranty does not cover damage resulting from improper assembly, misuse, abuse, alteration, or normal wear and tear.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact your point of purchase or the manufacturer directly.

For more information about CLP products, visit the official CLP store: [CLP Store on Amazon](#)