

Gemmy 39631

Gemmy 39631 Lightshow Projection-Swirl Classic Instruction Manual

Model: 39631

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Gemmy 39631 Lightshow Projection-Swirl Classic. Please read this manual thoroughly before installation and operation, and retain it for future reference.

SAFETY INFORMATION

- Ensure the product is unplugged before any installation, maintenance, or cleaning.
- Do not operate if the cord or plug is damaged.
- This product is designed for outdoor and indoor use. Ensure proper placement to avoid tripping hazards.
- Do not immerse the unit in water.
- Keep away from heat sources and open flames.

PACKAGE CONTENTS

- Gemmy 39631 Lightshow Projection-Swirl Classic Unit
- Ground Stake
- Power Cord

SETUP AND INSTALLATION

The Gemmy 39631 Lightshow Projection-Swirl Classic is designed for easy installation.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Stake:** Attach the ground stake to the base of the projector unit. Ensure it is securely fastened.
3. **Positioning:**

- For outdoor use, firmly insert the ground stake into soft ground. Ensure the projector is stable and upright.
 - For indoor use, the unit can be placed on a flat, stable surface.
 - Adjust the angle of the projector head to direct the light pattern as desired.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. This unit is corded electric and does not require batteries.



Image: The Gemmy 39631 Lightshow Projection-Swirl Classic projector, showing its round projection head, black body, and ground stake. A circular projection of swirling blue and warm white lights is displayed next to it.

OPERATING INSTRUCTIONS

Once plugged in, the projector will automatically begin displaying the swirling light pattern.

- **Activation:** Connect the power cord to an active electrical outlet. The light will illuminate and project the pattern.
- **Deactivation:** Disconnect the power cord from the electrical outlet to turn off the unit.
- **Projection:** The unit projects a swirl design with a mix of bright white and blue hues.
- **Control Method:** This model is controlled by a remote (if included, check packaging for remote

presence). If no remote is present, operation is limited to plugging/unplugging.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your projector. The durable plastic construction is designed for years of reliable use.

- **Cleaning:** Ensure the unit is unplugged. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. Discontinue use if damage is found.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not light up.	No power to the unit.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker or fuse for the outlet. Inspect the power cord for any damage.
Light pattern is dim or inconsistent.	Lens obstruction or internal issue.	Ensure the projection lens is clean and free of debris. If the issue persists, the internal LED may be failing. Contact customer support.
Motor sound but no light.	LED failure.	This indicates a potential failure of the internal light source. The unit may need replacement. Contact customer support.

SPECIFICATIONS

Brand	Gemmy
Model Number (User-Facing)	39631
Internal Model Identifier	b88a870a-42bf-4447-b1d0-6fb8a07ecdd3
UPC	086786396315
Shape	Round
Material	Plastic
Power Source	Corded Electric
Light Source Type	Light Emitting Diode (LED)
Control Method	Remote (if included)
Color	Blue / Warm White Swirl

Item Weight	1.08 pounds
Package Dimensions	8.5 x 4.57 x 3.19 inches
UL Listed	Yes
Date First Available	December 30, 2017

WARRANTY INFORMATION

Specific warranty details for the Gemmy 39631 Lightshow Projection-Swirl Classic are typically provided with the product packaging or can be obtained directly from the manufacturer. Please refer to the documentation included with your purchase for the most accurate and up-to-date warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Gemmy 39631 Lightshow Projection-Swirl Classic, please contact Gemmy customer service. Contact information can usually be found on the product packaging or the official Gemmy website.

Online Resources: Visit the official [Gemmy Store on Amazon](#) for product information and updates.