

[manuals.plus](#) /› [CHACON](#) /› [CHACON 54661 Set of 2 Remote Controlled On/Off Sockets User Manual](#)

CHACON 54661

CHACON 54661 Set of 2 Remote Controlled On/Off Sockets User Manual

Model: 54661

1. PRODUCT OVERVIEW

The CHACON 54661 Set provides a convenient solution for wirelessly controlling your electrical appliances and lighting. This set includes two remote-controlled sockets and one remote control, allowing you to switch devices on or off from a distance within your home.

- **Wireless Control:** Operate devices without direct access to the wall socket.
- **Easy Installation:** Simple plug-and-play setup.
- **Wide Compatibility:** Suitable for various household appliances.
- **Operating Frequency:** 433.92 MHz.
- **Maximum Power:** 2000 Watts.
- **Transmission Range:** Up to 25 meters in open field conditions.



Image: CHACON remote control and a socket in a typical home environment, demonstrating wireless control.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Indoor Use Only:** This product is designed for indoor use in dry locations. Do not expose to rain or moisture.
- **Maximum Load:** Do not exceed the maximum load of 2000 Watts. Overloading can cause overheating and fire.
- **Ventilation:** Ensure adequate ventilation around the sockets. Do not cover them.
- **Children and Pets:** Keep out of reach of children and pets.
- **Disassembly:** Do not attempt to open, modify, or repair the device. Refer all servicing to qualified personnel.
- **Cleaning:** Disconnect from power before cleaning. Use a dry, soft cloth. Do not use liquid cleaners.
- **Disposal:** Dispose of batteries and the product according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 2 x CHACON Remote Controlled Sockets
- 1 x CHACON Remote Control
- 1 x Lithium-ion Battery (pre-installed in remote or supplied separately)
- 1 x User Manual (this document)

4. SETUP

4.1. Remote Control Battery Installation

The remote control requires one Lithium-ion battery. If not pre-installed, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the Lithium-ion battery, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.



Image: Close-up view of the CHACON remote control, showing the ON/OFF buttons and channel selectors (1, 2, 3, 4).

4.2. Pairing Sockets with Remote Control

Each socket needs to be paired with the remote control to establish communication. The remote control has four channels (1, 2, 3, 4) which can be used to control individual sockets or groups of sockets.

1. Plug one CHACON remote controlled socket into a standard wall outlet. The LED indicator on the socket may flash.
2. Within 5 seconds of plugging in the socket, press and hold the small pairing button located on the side or front of the socket until the LED indicator starts flashing rapidly.
3. While the socket's LED is flashing, press the desired "ON" button (e.g., "1 ON") on the remote control.
4. The socket's LED indicator will stop flashing and remain solid for a moment, then turn off, indicating successful pairing.
5. Repeat this process for the second socket, assigning it to a different channel (e.g., "2 ON") or the same channel if you wish to control both simultaneously.
6. To unpair a socket, plug it in, then press and hold the pairing button until the LED flashes rapidly. Then, press the corresponding "OFF" button on the remote control.



Image: A CHACON remote controlled socket plugged into a wall outlet, ready for pairing.

5. OPERATING INSTRUCTIONS

Once your sockets are paired, you can easily control your connected devices.

1. Plug the appliance you wish to control into the CHACON remote controlled socket.
2. Ensure the appliance's own power switch is in the "ON" position (if applicable).
3. To turn the appliance ON, press the corresponding "ON" button (1, 2, 3, or 4) on your remote control.
4. To turn the appliance OFF, press the corresponding "OFF" button (1, 2, 3, or 4) on your remote control.

You can control devices individually or, if multiple sockets are paired to the same channel, control them simultaneously.



Image: A hand holding the CHACON remote control, demonstrating its use to switch on a lamp.

6. MAINTENANCE

6.1. Cleaning

To clean the sockets and remote control, ensure they are disconnected from power. Use a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse in water.

6.2. Remote Control Battery Replacement

If the remote control's range decreases or it stops responding, the battery may need replacement. Follow the steps in Section 4.1 to replace the Lithium-ion battery with a new one of the same type.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Socket does not respond to remote control.	<ul style="list-style-type: none">• Remote control battery is low or dead.• Socket is not properly paired.• Socket is not receiving power.• Remote control is out of range or obstructed.	<ul style="list-style-type: none">• Replace the remote control battery.• Re-pair the socket with the remote control (refer to Section 4.2).• Check if the wall outlet is functioning and the socket is firmly plugged in.• Move closer to the socket or remove obstructions between the remote and socket.
Connected appliance does not turn on/off.	<ul style="list-style-type: none">• Appliance's own power switch is off.• Appliance is faulty.• Socket is overloaded.	<ul style="list-style-type: none">• Ensure the appliance's power switch is in the "ON" position.• Test the appliance by plugging it directly into a working wall outlet.• Ensure the total power consumption of the connected appliance does not exceed 2000 Watts.
Reduced transmission range.	<ul style="list-style-type: none">• Low remote control battery.• Interference from other wireless devices.• Thick walls or metal objects obstructing the signal.	<ul style="list-style-type: none">• Replace the remote control battery.• Try to minimize interference by moving other wireless devices.• Relocate the socket or remote control to improve line of sight.

8. SPECIFICATIONS

Brand	CHACON
Model Number	54661
Color	White
Special Features	Wireless
Compatible Devices	Air conditioner, Game console, Iron, Speaker, Lamp, DVD player, MP3 player, E-reader, Coffee machine, Modem, Laptop, Heater, Router, Refrigerator, Set-top box, Smartphone, Smartwatch, Audio system, Hair dryer, Tablet, Television
Remote Battery Type	Lithium-ion (1 included)
Max Power	2000 Watts

Transmission Distance	25m (open field)
Frequency	433.92 MHz
Voltage	230V
Number of Sockets	2
Plug Type	FR (Type E/F)
Material	Polyvinyl Chloride (PVC)
Country of Origin	China

9. WARRANTY

This CHACON product is covered by a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

Please retain your proof of purchase for warranty claims.

10. SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact CHACON customer support.

Visit the official CHACON website for the most up-to-date support information and contact details.

Note: Specific contact information may vary by region.