

PRUNUS CARADIO908CB

PRUNUS Mini Portable Radio J-908 User Manual

Model: CARADIO908CB

1. INTRODUCTION

Thank you for choosing the PRUNUS Mini Portable Radio J-908. This compact and versatile device offers AM/FM radio reception, MP3 playback from Micro SD/TF cards and USB drives, and an integrated LED flashlight. This manual provides detailed instructions to help you get the most out of your radio.

2. SAFETY INFORMATION

- Keep Away From Water:** This device is not water resistant. Avoid exposure to water or high humidity to prevent damage.
- Battery Safety:** Use only the specified 1200mAh rechargeable and replaceable battery (BL-5C type). Do not expose the battery to excessive heat or direct sunlight.
- Charging:** Use a DC5V/500mA-1A USB adapter, computer, car charger, or power bank for charging. Avoid overcharging.
- Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- Disassembly:** Do not attempt to disassemble or repair the radio yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

- PRUNUS Mini Portable Radio J-908 (Blue)
- USB Charging Cable
- 1200mAh Rechargeable Battery (BL-5C)
- Owner's Manual

4. PRODUCT OVERVIEW AND FEATURES

The PRUNUS J-908 is designed for portability and ease of use, offering a range of features for an enhanced listening experience.



Front view of the PRUNUS Mini Portable Radio J-908, showcasing its compact design and control panel.

Upgraded New Features



Able To Change Folder

Set folders for your MP3s, you can switch between them easily.



Larger Battery

New upgraded 1200mAh larger battery make it more durable.



Charging Tips

Low power reminder and charging indicator make the charging easier.

Upgraded Features: Includes a 1200mAh rechargeable battery for extended playtime, folder switching function for MP3s, and clear low battery/charging indicators.

EASY TO CARRY

Close to iPhone 7 size, you can easily slip it into your pocket.



Portable Design: With dimensions of 4.61" L x 0.79" W x 2.52" H and a weight of 6.4 ounces, it's designed to be easily carried in a pocket or bag. A gray carrying strap is included, which can also be used as a stand.



City



Micro sd/TF card



MP3/MP4/iPod



Suburb




Flash drive



Computer/Laptop



FM/AM

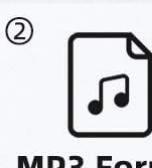

MP3 Format



AUX Jack



Universal Compatibility

Universal Compatibility: Supports FM/AM radio, MP3 playback from Micro SD/TF cards (up to 64GB) and USB flash drives (up to 64GB), and features an AUX jack for external audio input.

Small Size, Clear Sound

3W built-in high-quality magnetic speaker, provides a reliable deep bass and smooth treble what make listening to music perfect.



Clear Sound: Equipped with a 3W built-in high-quality magnetic speaker, providing reliable deep bass and smooth treble for an enjoyable listening experience.

Emergency Flashlight

Perfect for camping, walking and any night activities, or electricity fails, vehicle maintenance, earthquake, flooding and etc.



high brightness

Emergency Flashlight: Features a bright LED flashlight, useful for camping, night activities, power outages, or emergency situations.

Able To Change Folder



Folder Switching: When playing MP3s, you can switch between different folders (e.g., albums or genres) stored on your memory card or USB drive.

PRUNUS J-908



VS

OLD VERSION



1200mAH Lithium battery, prolongs 50% duration



800mAH Lithium battery, lasts for only 5-6 hours at 30% volume(our true testing result)

Switch between different music style folders



NO switch between folders

Don't have to press continuously at night



Must press and hold the button at night

Headphone volume is as excellent as the speaker volume



Headphone volume is lower than the speaker volume

J-908 Improvements: The J-908 model features a larger 1200mAh battery for longer playtime, the ability to switch between music folders, and an improved LED flashlight function compared to older versions.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the radio.
2. Open the battery compartment cover.
3. Insert the provided 1200mAh BL-5C Lithium Ion battery, ensuring the contacts align correctly.
4. Close the battery compartment cover securely.

5.2 Initial Charging

1. Connect the small end of the USB charging cable to the radio's charging port.
2. Connect the larger end of the USB cable to a DC5V/500mA-1A USB power source (e.g., USB adapter, computer USB port, power bank).
3. The charging indicator light will illuminate. A low battery indicator will also be present when charging is needed.
4. Charge the radio for 3-5 hours for a full charge. The indicator light will change or turn off when fully charged. You can use the radio while it is charging.



The radio features an easy-to-use USB charging port.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on the radio, slide the power switch to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.

6.2 Radio Operation (AM/FM)

1. Extend the telescopic antenna for optimal reception.
2. Press the 'MODE' button to switch between FM and AM bands. The display will show the current frequency.
3. **Auto Scan and Store:** Press and hold the 'PLAY/PAUSE' button (often labeled with a play/pause icon or 'SCAN'). The radio will automatically scan for available stations and store them in numerical order. *Note: The order of stations cannot be changed after auto-scanning.*
4. **Navigate Stored Stations:** Use the 'PREVIOUS' (⟨⟨) and 'NEXT' (⟩⟩) buttons to cycle through the stored stations.
5. **Manual Tuning (if applicable):** If your model supports it, use the number pad to directly enter a frequency or use the tuning knob/buttons for fine-tuning.



One-key operation for automatic scanning and saving of radio stations.

6.3 MP3 Playback (USB/TF Card)

1. Insert a Micro SD/TF card or USB flash drive (formatted to FAT32) containing MP3 audio files into the corresponding slot. The radio will automatically detect and begin playing the MP3 files.
2. **Play/Pause:** Press the 'PLAY/PAUSE' button to pause or resume playback.
3. **Next/Previous Track:** Use the 'PREVIOUS' (⟨⟨) and 'NEXT' (⟩⟩) buttons to skip to the next or previous track.
4. **Fast Forward/Rewind:** Press and hold the 'PREVIOUS' (⟨⟨) or 'NEXT' (⟩⟩) buttons to fast forward or rewind within a track.
5. **Folder Switching:** Press the 'MODE' button repeatedly until the folder switching mode is activated (if available). Use the number pad or navigation buttons to select a specific folder.
6. **Repeat Modes:** Some models may offer repeat modes (e.g., repeat one, repeat all, repeat folder). Consult the on-screen display or specific button labels for these functions.

6.4 Flashlight Operation

- Press the 'LED' button (or designated flashlight button) to turn the LED flashlight on.
- Press the 'LED' button again to turn the flashlight off.

6.5 Volume Adjustment

- Rotate the volume knob (typically on the side) to increase or decrease the audio volume.

6.6 Headphone Use

- Insert 3.5mm headphones (not included) into the headphone jack for private listening. The speaker will automatically mute when headphones are connected.

7. MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery when the low battery indicator appears. If storing the radio for an extended period, charge the battery periodically.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Radio does not power on.	Battery is low or depleted. Charge the battery. Ensure the battery is correctly installed.
Poor radio reception.	Extend the telescopic antenna fully. Try repositioning the radio. Interference from other electronic devices.
MP3 files not playing.	Ensure the Micro SD/TF card or USB drive is formatted to FAT32. Only MP3 format files are supported. Check if the card/drive is inserted correctly.

Problem	Possible Cause / Solution
Cannot change the order of stored radio stations.	The radio automatically stores stations in numerical order during auto-scan, and this order cannot be manually rearranged.
Radio suddenly shuts off.	Battery is depleted. Recharge the battery.
No sound from speaker when headphones are unplugged.	Ensure headphones are fully unplugged from the jack. Check volume level.

9. SPECIFICATIONS

Feature	Specification
Brand	PRUNUS
Model Number	CARADIO908CB
Color	Blue
Dimensions (L x W x H)	4.61" x 0.79" x 2.52" (117mm x 20mm x 64mm)
Item Weight	6.4 ounces (181g)
Power Source	Battery Powered
Battery Type	1200mAh Lithium Ion (BL-5C, included)
Connectivity Technology	USB
Radio Bands Supported	FM, AM
Speaker Output	3W
Media Support	Micro SD/TF Card (up to 64GB), USB Flash Drive (up to 64GB)
Audio Format	MP3 only
Special Feature	Portable, LED Flashlight
Water Resistance Level	Not Water Resistant

10. WARRANTY AND SUPPORT

PRUNUS offers a 1-year warranty for this product. Additionally, a 30-day no-questions-asked return policy is typically available through your retailer.

For any questions, concerns, or technical support, please contact PRUNUS customer service. Refer to your purchase documentation or the PRUNUS official website for the most current contact information.

