

Oxelo Mid 7

Oxelo Mid 7 Scooter Instruction Manual

Model: Mid 7

1. IMPORTANT SAFETY INFORMATION

Before using your Oxelo Mid 7 Scooter, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury.

- **Protective Gear:** Always wear a helmet, knee pads, elbow pads, and wrist guards.
- **Age and Weight Limit:** This scooter is designed for adults. Do not exceed the maximum weight limit specified by the manufacturer (refer to product specifications).
- **Riding Environment:** Ride on smooth, dry, paved surfaces away from traffic. Avoid riding on uneven terrain, sand, gravel, or wet surfaces.
- **Visibility:** Ride during daylight hours or in well-lit areas. Consider reflective clothing for increased visibility.
- **Braking:** Familiarize yourself with the braking system. Practice braking at low speeds before riding faster.
- **Inspections:** Before each ride, check that all components are securely fastened, especially the handlebars and wheels.
- **Local Regulations:** Be aware of and comply with all local laws and regulations regarding scooter use.

Warning: Scooters can be dangerous. Use with caution and at your own risk.

2. SETUP AND ASSEMBLY

Your Oxelo Mid 7 Scooter comes largely pre-assembled. Follow these steps to prepare it for use.

2.1 Unfolding the Scooter

1. Place the scooter on a flat, stable surface.
2. Locate the folding mechanism lever near the base of the steering column.
3. Pull the lever to release the locking pin.
4. Carefully lift the handlebar stem until it clicks into the upright, locked position. Ensure the locking pin is fully engaged.



Image: The Oxelo Mid 7 Scooter in its fully unfolded state, showing the handlebar, deck, and wheels.

2.2 Adjusting Handlebar Height

1. Locate the quick-release clamp on the handlebar stem.
2. Open the quick-release clamp.
3. Adjust the handlebar to a comfortable height. The handlebar should be roughly at hip level when standing on the scooter.
4. Close the quick-release clamp firmly to secure the handlebar. Ensure there is no wobble.

3. OPERATING INSTRUCTIONS

3.1 Riding the Scooter

1. Place one foot firmly on the scooter deck.
2. Push off with your other foot to gain momentum.
3. Once moving, place both feet on the deck, one in front of the other, or side-by-side, depending on your preference and balance.
4. Steer by gently leaning and turning the handlebars.

3.2 Braking

The Oxelo Mid 7 Scooter features a rear fender brake.

- To slow down or stop, gently press your foot down on the rear fender brake.
- Apply pressure gradually to avoid sudden stops, which can cause loss of balance.
- Practice braking at low speeds in a safe area before riding in more challenging environments.

4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth after use. Avoid using harsh chemicals or abrasive cleaners.

- **Wheel Inspection:** Regularly check the wheels for wear and tear. Ensure they spin freely and are securely attached.
- **Fasteners:** Periodically check all bolts, screws, and quick-release mechanisms to ensure they are tight and secure.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures.

4.1 Folding the Scooter for Storage/Transport

1. Ensure the handlebar is at its lowest position and the quick-release clamp is secured.
2. Locate the folding mechanism lever near the base of the steering column.
3. Pull the lever to release the locking pin.
4. Carefully fold the handlebar stem down towards the deck until it locks into the folded position.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Handlebar wobbles	Quick-release clamp not tight enough; stem not fully engaged.	Tighten the quick-release clamp. Ensure the handlebar stem is fully locked into the upright position.
Squeaky brake	Dirt or debris on the brake pad/wheel; worn brake pad.	Clean the brake area. If squeaking persists or braking performance is reduced, inspect the brake pad for wear and replace if necessary.
Wheels don't spin freely	Dirt in bearings; overtightened axle bolts.	Clean around the wheel bearings. Check axle bolts are not overtightened. If issues persist, professional inspection may be required.

6. SPECIFICATIONS

- **Brand:** Oxelo
- **Model:** Mid 7
- **Frame Material:** Alloy Steel
- **Wheel Material:** Plastic
- **Age Range:** Adult
- **Handlebar Type:** Adjustable
- **Wheel Type:** Solid
- **Suspension Type:** Front Suspension
- **Brake Style:** Rear Braking
- **ASIN:** B078RQVRRH

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Oxelo website or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the [Oxelo Mid 7 product page](#) (example link, actual link may vary).