

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Sunbeam](#) /
- › [Sunbeam 5891 2-LB Bread Maker Instruction Manual](#)

Sunbeam 5891

Sunbeam 5891 2-LB Bread Maker Instruction Manual

Model: 5891

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Sunbeam 5891 2-LB Bread Maker. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Sunbeam 5891 2-LB Bread Maker, a white appliance featuring a front-facing control panel with an LED display and various buttons. The top includes a lid with a viewing window and handle.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric

shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or bread maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Sunbeam 5891 Bread Maker is designed to simplify the bread-making process. Key components include:

- **Control Panel:** Features an LED display and easy-clean touch controls for program selection.
- **Baking Pan:** Non-stick and removable for easy cleaning and bread removal.
- **Kneading Paddle:** For mixing and kneading dough.
- **Lid:** With a viewing window to monitor the baking process.

SETUP

1. **Unpacking:** Carefully remove the bread maker and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wash the baking pan and kneading paddle with warm, soapy water. Wipe the exterior of the bread maker with a damp cloth. Dry all parts thoroughly.
3. **Placement:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Insert Baking Pan:** Place the non-stick baking pan into the bread maker's cavity, ensuring it is securely locked in place.
5. **Connect Power:** Plug the power cord into a standard electrical outlet. The display will illuminate.

OPERATING INSTRUCTIONS

Your Sunbeam 5891 Bread Maker offers 12 cooking functions for various bread types and doughs.

Basic Operation Steps:

1. **Add Ingredients:** Add ingredients to the baking pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last).
2. **Select Program:** Use the control panel to select the desired program (e.g., Basic, French, Whole Wheat, Dough, ExpressBake). The LED display will show the selected program and cycle time.
3. **Select Loaf Size/Crust Color (if applicable):** Adjust loaf size (e.g., 2 LB) and crust color settings if your chosen

program allows.

- 4. **Start Cycle:** Press the START/STOP button to begin the selected program. The bread maker will automatically mix, knead, rise, and bake.
- 5. **Delay Bake Function:** To use the 13-hour delay bake function, set your program and then use the delay timer buttons to set the desired delay time before pressing START/STOP.
- 6. **ExpressBake Cycle:** This cycle bakes bread in under 1 hour. Refer to specific recipes for this function.
- 7. **Completion:** Once the cycle is complete, the bread maker will beep. Unplug the appliance and carefully remove the baking pan using oven mitts.
- 8. **Remove Bread:** Invert the pan to release the bread. If the kneading paddle remains in the bread, remove it carefully with a non-metallic utensil after the bread has cooled slightly.

Important Notes:

- Always use fresh ingredients.
- Measure ingredients precisely.
- Do not open the lid frequently during the baking cycle, especially during the rising phase.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your bread maker.

- **Before Cleaning:** Always unplug the bread maker from the power outlet and allow it to cool completely before cleaning.
- **Baking Pan and Kneading Paddle:** Wash these parts with warm, soapy water. The non-stick coating is delicate; avoid abrasive cleaners or metal utensils. Rinse thoroughly and dry completely.
- **Exterior:** Wipe the exterior of the bread maker with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Wipe the interior of the baking chamber with a damp cloth to remove any crumbs or residue.
- **Storage:** Store the bread maker in a clean, dry place when not in use.

Product Care Instructions: Wipe with Dry Cloth (for exterior).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect ingredient measurements, water too hot/cold.	Check yeast expiration date. Ensure accurate measurements. Use water at recommended temperature (around 105-115°F / 40-46°C).
Bread is too dense	Too much flour, not enough liquid, old yeast.	Reduce flour slightly, increase liquid, use fresh yeast.
Bread sticks to pan	Pan coating damaged, bread not cooled enough.	Ensure pan coating is intact. Allow bread to cool in the pan for 10-15 minutes before removing.
Machine not starting	Not plugged in, program not selected, START/STOP not pressed.	Check power connection. Select a program. Press START/STOP button firmly.

SPECIFICATIONS

- **Model Number:** 5891
- **Brand:** Sunbeam
- **Loaf Capacity:** 2 LB
- **Number of Programs:** 12 cooking functions
- **Delay Bake:** 13-hour delay bake setting
- **ExpressBake Cycle:** Bakes in under 1 hour
- **Display:** LED display
- **Control Panel:** Easy-clean touch controls
- **Baking Pan:** Non-stick, removable
- **Color:** White
- **Product Dimensions:** 19 x 13.5 x 14 inches
- **Item Weight:** 2 pounds
- **UPC:** 027045651783
- **Manufacturer:** SUNBEAM

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Sunbeam customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may visit the official Sunbeam website or contact their customer support line. Contact details are typically found in the product packaging or on the manufacturer's website.

