

Decathlon Oxelo Town 7 XL

Decathlon Oxelo Town 7 XL Adult Scooter Instruction Manual

Model: Oxelo Town 7 XL

1. INTRODUCTION

Thank you for choosing the Decathlon Oxelo Town 7 XL Adult Scooter. This manual provides essential information for the safe assembly, operation, maintenance, and care of your scooter. Please read this manual thoroughly before first use and retain it for future reference.

The Oxelo Town 7 XL scooter is designed for adult commuting and recreational use, offering features such as adjustable handlebar height and a foldable design for convenience.

2. SAFETY INFORMATION

Your safety is paramount. Please observe the following safety guidelines:

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Ensure all locking mechanisms are securely engaged before riding.
- Do not exceed the maximum weight limit of **100 kg**.
- Ride on smooth, dry surfaces away from traffic. Avoid wet, uneven, or slippery terrain.
- Be aware of your surroundings and other pedestrians or vehicles.
- Check the brakes, wheels, and all components for wear or damage before each use.
- Do not modify the scooter in any way.
- Adult supervision is recommended for new riders.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all the following items are present:

- Oxelo Town 7 XL Adult Scooter (main unit)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

The Oxelo Town 7 XL scooter comes largely pre-assembled. The primary setup involves unfolding the scooter and adjusting the handlebar height.

4.1 Unfolding the Scooter

1. Place the scooter on a flat, stable surface.
2. Locate the folding mechanism lever near the base of the handlebar stem.
3. Release the locking mechanism and carefully lift the handlebar stem until it clicks into its upright, locked position. Ensure the locking pin is fully engaged.
4. Verify that the handlebar stem is rigid and does not wobble.

4.2 Adjusting Handlebar Height

1. Locate the quick-release clamp on the handlebar stem.
2. Open the quick-release clamp.
3. Adjust the handlebar to your desired height. Ensure the handlebar is at a comfortable level, typically around hip height when standing on the deck.
4. Align the handlebar with the front wheel.
5. Close the quick-release clamp firmly. Ensure the handlebar is secure and does not rotate or slide down.



This image displays the Oxelo Town 7 XL Adult Scooter in its fully assembled, upright position. The scooter features a light green frame, black handlebars with grips, and white wheels with black spokes. The adjustable handlebar is extended, and the deck is visible.

5. OPERATING INSTRUCTIONS

5.1 Riding the Scooter

1. Place one foot firmly on the scooter deck.
2. Use your other foot to push off the ground, generating momentum.

3. Once moving, place both feet on the deck, one behind the other, or side-by-side if comfortable.
4. Steer by gently leaning and turning the handlebars in the desired direction.

5.2 Braking

The Oxelo Town 7 XL features a **rear braking** system.

- To slow down or stop, gently press your foot down on the rear fender brake located above the rear wheel.
- Apply pressure gradually to avoid sudden stops, which can lead to loss of balance.
- Practice braking at low speeds in a safe area before riding in more challenging environments.

5.3 Folding the Scooter

To fold the scooter for storage or transport:

1. Ensure the scooter is stationary and on a flat surface.
2. Release the quick-release clamp on the handlebar stem and lower the handlebar to its lowest position. Re-secure the clamp.
3. Locate the folding mechanism lever at the base of the handlebar stem.
4. Release the locking mechanism and carefully push the handlebar stem downwards until it folds parallel to the deck. Ensure it locks into the folded position.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth after use. Avoid using harsh chemicals or abrasive cleaners.
- **Wheel Check:** Regularly inspect the polyurethane wheels for wear, cracks, or damage. Replace worn wheels promptly.
- **Brake Check:** Ensure the rear brake is functioning correctly and provides adequate stopping power. Adjust or replace if necessary.
- **Bearings:** Check wheel bearings for smooth rotation. If they feel gritty or stiff, they may need cleaning or replacement.
- **Folding Mechanism:** Keep the folding mechanism clean and free of debris. Lubricate moving parts with a light oil if they become stiff.
- **Fasteners:** Periodically check all bolts, nuts, and screws to ensure they are tight. Do not overtighten.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Scooter not folding/unfolding smoothly:** Check for debris in the mechanism. Apply a small amount of lubricant to the moving parts. Ensure the locking pin is fully retracted/engaged.
- **Handlebar wobbles:** Ensure the quick-release clamp is fully tightened. Check that the handlebar stem is fully inserted and locked into the main frame.
- **Brake not effective:** Inspect the rear fender brake for wear. Ensure it makes proper contact with the

wheel. Clean any dirt or debris from the brake area and wheel surface.

- **Wheels not spinning freely:** Check for debris caught in the wheels or bearings. The bearings may need cleaning or replacement if they are worn.

If you encounter issues not listed here or cannot resolve a problem, please contact Decathlon customer support.

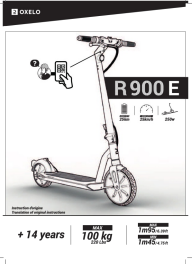


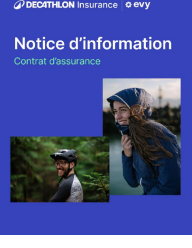


8. SPECIFICATIONS

Brand	Decathlon
Model Name	Oxelo Town 7 XL
Item Model Number	2160939
Age Range	Adult
Colour	Multicolour (Light Green)
Special Feature	Adjustable Handlebar Height, Foldable
Weight Limit	100 Kilograms
Number of Wheels	2
Wheel Material	Polyurethane
Frame Material	Alloy Steel
Item Weight	5.55 Kilograms
Handlebar Type	Adjustable
Wheel Type	Solid
Suspension Type	Front Suspension
Brake Style	Rear Braking
Recommended Uses	Commuting
Item Dimensions (LxWxH)	73 x 18 x 30 Centimeters

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the official Decathlon website or contact Decathlon customer service directly. Keep your proof of purchase for any warranty claims.

Related Documents - Oxelo Town 7 XL

	<p>Decathlon R900E Electric Scooter User Manual and Maintenance Guide</p> <p>Comprehensive guide for the Decathlon R900E electric scooter, covering user information, maintenance, and repair. Includes details on product specifications, safety, and usage.</p>
	<p>Decathlon B'Twin SD 500 E Electric Scooter User Manual</p> <p>This document provides comprehensive instructions for the safe use, maintenance, and troubleshooting of the Decathlon B'Twin SD 500 E electric scooter. It covers conditions of use, battery care, error codes, and important safety warnings.</p>
	<p>Decathlon Bicycle User Guide, Guarantee, and Maintenance Instructions</p> <p>Comprehensive guide for Decathlon bicycles, covering assembly, safety, riding position, maintenance schedules, adjustments, and guarantee information. Learn how to care for your bike and ensure a safe, enjoyable riding experience.</p>
	<p>Notice d'information : Contrat d'assurance Fitness DECATHLON Extension de garantie 3 ans</p> <p>Ce document détaille les conditions générales du contrat d'assurance Fitness DECATHLON Extension de garantie 3 ans (ICIDKTFIT24), couvrant votre équipement sportif. Il explique les garanties, exclusions, procédures de sinistre, renonciation et résiliation, avec les informations sur DECATHLON et Evy.</p>
	<p>Általános Szerződési Feltételek - Decathlon Magyarország</p> <p>Általános Szerződési Feltételek (ÁSZF) a Decathlon Magyarország webáruházban történő vásárlásokhoz, beleértve a Marketplace partnerek által értékesített termékeket és szolgáltatásokat. Részletes információk a rendelés menetéről, fizetési módokról, szállításról, jótállásról és szavatosságról.</p>
	<p>Troubleshooting E2 and E3 Error Codes on Decathlon Fitness Equipment</p> <p>A guide to resolving E2 and E3 error codes on Decathlon fitness devices by checking and securing cable connections. Includes step-by-step instructions for inspection and reassembly.</p>