

## RCA HSB5812

# RCA HSB5812 Soundbar User Manual

Model: HSB5812

## 1. INTRODUCTION

Thank you for purchasing the RCA HSB5812 Soundbar. This manual provides essential information for setting up, operating, and maintaining your new soundbar. Please read this manual thoroughly before use to ensure proper functionality and to maximize your listening experience. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- Bluetooth Connectivity
- 40 Watts RMS Output Power
- Auxiliary 3.5mm Input
- FM Radio Functionality
- Digital Optical Output

### 2.2 Included Components

- RCA HSB5812 Soundbar
- Remote Control

### 2.3 Product View



This image displays the RCA HSB5812 Soundbar in a piano black finish. The front panel features a digital display showing '328', indicating a setting or status. The RCA logo is visible on the left side. The soundbar has a sleek, elongated design.

## 3. SETUP

---

### 3.1 Placement

Place the soundbar on a stable, flat surface, such as a TV stand or shelf, directly in front of your television for optimal sound dispersion. Ensure there are no obstructions blocking the front of the soundbar.

### 3.2 Power Connection

1. Connect the AC power cord to the power input on the back of the soundbar.
2. Plug the other end of the power cord into a wall outlet.

### 3.3 Audio Connections

Choose one of the following methods to connect your audio source:

- **Optical Digital Input:** Connect an optical cable (not included) from your TV or other audio source's optical output to the OPTICAL IN port on the soundbar. This provides high-quality digital audio.
- **Auxiliary 3.5mm Input:** Connect a 3.5mm audio cable (not included) from your device's headphone jack or audio output to the AUX IN port on the soundbar.
- **Bluetooth:** For wireless connection, refer to section 4.1 for Bluetooth pairing instructions.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off

Press the **POWER** button on the remote control or on the soundbar to turn the unit on or off.

### 4.2 Input Selection

Press the **INPUT** button on the remote control or on the soundbar repeatedly to cycle through the available input sources: Bluetooth, AUX, OPTICAL, FM.

### 4.3 Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control or on the soundbar to adjust the volume level.

### 4.4 Bluetooth Pairing

1. Turn on the soundbar and select the Bluetooth input mode. The display will show 'BT' and flash, indicating it is in pairing mode.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
3. Select 'RCA HSB5812' from the list of devices.
4. Once paired, the soundbar will emit a confirmation tone, and the 'BT' indicator will stop flashing. You can now play audio from your device through the soundbar.

### 4.5 FM Radio Operation

1. Select FM input mode using the **INPUT** button.
2. Press the **PLAY/PAUSE** button to automatically scan and save available FM stations.
3. Use the **PREV/NEXT** buttons to navigate through the saved stations.

## 5. MAINTENANCE

---

## 5.1 Cleaning

To clean the soundbar, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish. Ensure the soundbar is unplugged before cleaning.

## 5.2 Storage

If storing the soundbar for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

If you encounter issues with your soundbar, please refer to the following common problems and solutions:

- **No Power:**

Ensure the power cord is securely connected to both the soundbar and a working wall outlet. Try plugging another device into the same outlet to confirm it has power.

- **No Sound:**

Check that the soundbar is powered on and the volume is not muted or set too low. Verify that the correct input source is selected (Bluetooth, AUX, OPTICAL). Ensure all audio cables are securely connected. If using optical, confirm your TV's audio output is set to PCM.

- **Bluetooth Not Connecting:**

Ensure the soundbar is in Bluetooth pairing mode (BT flashing). Make sure your device's Bluetooth is enabled and within range (typically 10 meters). Try unpairing and re-pairing the device. Disconnect any other Bluetooth devices from the soundbar.

- **Remote Control Not Working:**

Check the battery in the remote control and replace it if necessary. Ensure there are no obstructions between the remote and the soundbar's sensor.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Specification	Value
Model Name	HSB5812
Speaker Type	Surround Sound
Special Feature	Bluetooth
Compatible Devices	Laptop, MP3 Player, Smartphone, Tablet, Television
Surround Sound Channel Configuration	2.0
Color	Piano Black
Included Components	Soundbar, Remote Control
Product Weight	10 kg
Warranty Type	Limited

Number of Items	1
Control Method	Remote Control
Wireless Communication Technology	Bluetooth
Power Source	AC
Manufacturer	Rca
Part Number	HSB5812
Remote Control Description	remote_control
Speaker Connectivity	Bluetooth, RCA, Optical
Average Battery Life (Remote)	5 Hours
Batteries Included	No
Batteries Required	No
Product Dimensions	87 x 8 x 5 cm
Maximum Speaker Output Power	40 Watts
Connectivity Technology	Auxiliary, Bluetooth, RCA
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

## 8. WARRANTY AND SUPPORT

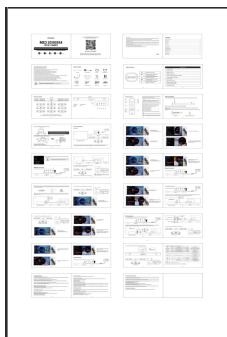
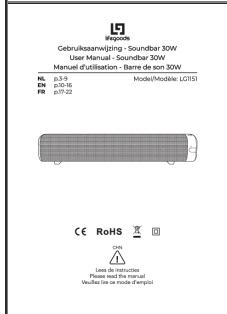
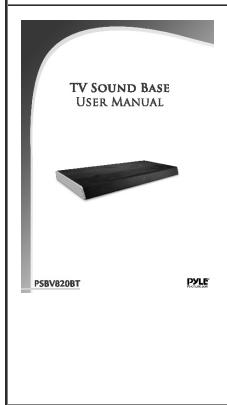
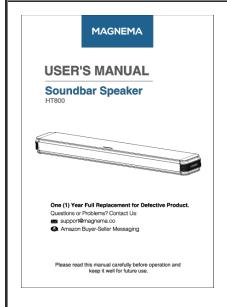
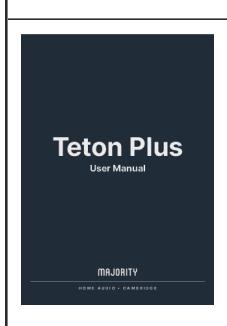
---

### 8.1 Warranty Information

This product comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. Retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact RCA customer support. Contact information can typically be found on the product packaging or the official RCA website.

	<p><a href="#"><b>WITSHOCK MX3 Soundbar: User Manual and Setup Guide</b></a></p> <p>Explore the WITSHOCK MX3 Soundbar, a 2.1 channel home theater system with built-in subwoofer. This guide covers setup, connections (Bluetooth, HDMI ARC, Optical, RCA, AUX, USB), remote control, troubleshooting, and specifications for your WITSHOCK audio experience.</p>
	<p><a href="#"><b>LifeGoods Soundbar 30W (LG1151) User Manual</b></a></p> <p>Comprehensive user manual for the LifeGoods Soundbar 30W (LG1151), covering setup, operation, features, troubleshooting, and safety guidelines.</p>
	<p><a href="#"><b>PYLE PSBV820BT TV Sound Base User Manual</b></a></p> <p>User manual for the PYLE PSBV820BT TV Sound Base, covering safety instructions, parts identification, remote control operation, connections, basic operation, Bluetooth pairing, troubleshooting, and specifications.</p>
	<p><a href="#"><b>Magnema HT800 Soundbar Speaker User Manual</b></a></p> <p>Comprehensive user manual for the Magnema HT800 and HT800X Soundbar Speakers, covering setup, connections, playback, sound settings, troubleshooting, and warranty information.</p>
	<p><a href="#"><b>PHEANOO P15 2.1CH Soundbar with Subwoofer User Manual</b></a></p> <p>User manual for the PHEANOO P15 2.1CH Soundbar system, providing safety instructions, setup guide, operation details, and technical specifications for optimal audio experience.</p>
	<p><a href="#"><b>Majority Teton Plus Soundbar User Manual</b></a></p> <p>Comprehensive user manual for the Majority Teton Plus 2.1ch Home Theatre system, covering setup, controls, connections (USB, RCA, HDMI ARC, Optical, AUX), Bluetooth pairing, troubleshooting, specifications, warranty, and safety information.</p>