

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 24V AC/DC Adapter Instruction Manual for Booster Pro 2 3 Massage Guns

UPBRIGHT Booster Pro 2 3 Pro2 Power Supply

UpBright 24V AC/DC Adapter Instruction Manual

Compatible with Booster Pro 2, 3, Pro2, Pro3, P2, Pro E, JUFIT Fascia, Cotsoco, VIWIK Lpysfw Massage Guns

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your UpBright 24V AC/DC Adapter. This adapter is designed to power and charge various massage guns, including models from Booster Pro 2, 3, Pro2, Pro3, P2, Pro E, JUFIT Fascia, Cotsoco, and VIWIK Lpysfw. Please read this manual thoroughly before use and retain it for future reference.



A clear view of the UpBright 24V AC/DC adapter, showing its compact design and integrated power cord.

1. SETUP

Follow these steps to properly set up your UpBright AC/DC adapter:

1. **Identify the Correct Connector:** The adapter comes with both a barrel round connector and a smart plug tip pigtail to ensure compatibility with different massage gun models. Select the tip that matches your device's charging port.



This image shows the two types of connector tips provided with the adapter: a smart plug tip and a standard barrel round connector, ensuring compatibility with different massage gun models.

2. **Connect to Device:** Insert the selected connector tip firmly into the charging port of your massage gun.
3. **Connect to Power Outlet:** Plug the AC adapter into a standard electrical wall outlet. The adapter supports a worldwide input voltage range of 100-240VAC, 50/60Hz.

UpBright AC Adapter Power Supply Compatible with:

Compatible with:



This image displays the UpBright AC/DC adapter connected to a Booster massage gun, demonstrating how the adapter powers the device. Various massage gun attachments are also visible.

4. **Verify Connection:** Ensure all connections are secure. Your device should indicate that it is receiving power or charging, typically via an LED indicator on the device itself.

2. OPERATING INSTRUCTIONS

The UpBright AC/DC adapter is designed for straightforward operation:

- **Charging:** Once connected, the adapter will begin to charge your compatible massage gun. Refer to your massage gun's instruction manual for specific charging indicators and times.
- **Safety Features:** The adapter is equipped with built-in protection mechanisms:
 - **OVP (Over Voltage Output Protection):** Protects your device from excessive voltage.
 - **OCP (Over Current Output Protection):** Guards against damage from excessive current.
 - **SCP (Short Circuit Output Protection):** Prevents damage in case of a short circuit.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then carefully remove the connector tip from your massage gun.

3. MAINTENANCE

To ensure the longevity and optimal performance of your UpBright AC/DC adapter, follow these maintenance guidelines:

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Disconnect the adapter from both the power outlet and your device before cleaning. Wipe

the adapter with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Cable Care:** Avoid bending or crimping the power cord excessively. Do not place heavy objects on the cord.
- **Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as frayed wires or cracked casing. If damage is observed, discontinue use immediately and contact support.

4. TROUBLESHOOTING

If you encounter issues with your UpBright AC/DC adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging or receiving power.	• Loose connection. • Incorrect adapter tip used. • Power outlet issue. • Damaged adapter or cable.	• Ensure all connections are secure. • Verify you are using the correct connector tip for your massage gun model. • Test the power outlet with another device. • Inspect the adapter and cable for damage. If damaged, discontinue use.
Adapter tip does not fit the device.	• Incorrect adapter tip selected. • Device model not compatible.	• Ensure you are using the correct tip (barrel round or smart plug pigtail). • Confirm your massage gun model is listed as compatible. Refer to the product description or contact support if unsure.
Adapter becomes excessively hot during use.	• Overload or internal fault. • Poor ventilation.	• Unplug immediately. Allow to cool. If problem persists, discontinue use and contact support. • Ensure the adapter is in a well-ventilated area.

5. SPECIFICATIONS

Technical details for the UpBright 24V AC/DC Adapter:

Input Voltage	100-240VAC, 50/60Hz
Output Voltage	24V DC
Output Current	1A (1000mA)
Power Output	24W
Connector Type	Barrel Round Connector, Smart Plug Tip Pigtail

Product Dimensions	3 x 3 x 1 inches
Item Weight	3.52 ounces
Safety Features	OVP, OCP, SCP Protection
Included Components	1 adapter

6. WARRANTY INFORMATION


Your UpBright AC/DC Adapter is covered by the following warranty:

- **Refund Period:** 30 days from the date of purchase.
- **Exchange Period:** 24 months from the date of purchase.

For warranty claims or further details, please refer to the warranty certificate included with your product or contact UpBright customer support.

Come With A Suitable Outlet Adapter (Only One) to Fit

Your Country/Area For International Order

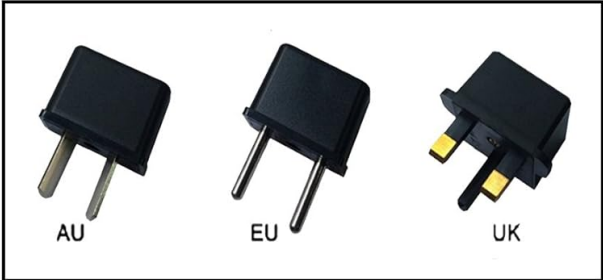

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE

+ UPBRIGHT® LIMITED WARRANTY



This image displays the UpBright Limited Warranty Certificate alongside a product warranty seal, indicating the product's coverage.

7. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue that is not covered in this manual, please contact UpBright customer support. For the most up-to-date contact information, please refer to the packaging or the official UpBright website.

Manufacturer: **UpBright**

© 2024 UpBright. All rights reserved.