

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Thetford](#) /

› [Thetford 12V Heating Cartridge User Manual for N3145, N3150, N3170, N3175 Refrigerators](#)

Thetford 633572

Thetford 12V Heating Cartridge User Manual

Models: N3145, N3150, N3170, N3175 (Part No. 633572)

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your Thetford 12V Heating Cartridge. This component is designed to enhance the performance of compatible Thetford refrigerators, specifically models N3145, N3150, N3170, and N3175. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

The Thetford 12V Heating Cartridge (Part No. 633572) is a highly efficient and easy-to-use component, designed for reliable performance in automotive and recreational vehicle applications.

SAFETY INFORMATION

WARNING:

- Always disconnect power before attempting any installation or maintenance.
- Installation should only be performed by a qualified technician.
- Ensure correct voltage (12V DC) is supplied to prevent damage to the cartridge and refrigerator.
- Do not operate the heating cartridge if it appears damaged.

SETUP AND INSTALLATION

The Thetford 12V Heating Cartridge is designed for integration into specific Thetford refrigerator models. Refer to your refrigerator's main instruction manual for specific access points and wiring diagrams.

1. **Preparation:** Ensure the refrigerator is completely powered off and disconnected from all power sources (12V, 230V, Gas). Allow the refrigerator to cool down if it has been recently in operation.
2. **Access:** Locate the heating element compartment within your Thetford refrigerator. This typically involves removing a cover panel.
3. **Removal of Old Cartridge (if applicable):** Carefully disconnect any existing heating cartridge wiring and remove the old cartridge from its housing. Note the orientation for correct installation of the new unit.

4. **Installation of New Cartridge:** Insert the new Thetford 12V Heating Cartridge (Part No. 633572) into the designated housing. Ensure it is seated securely.
5. **Wiring Connection:** Connect the two blue wires of the heating cartridge to the corresponding 12V DC terminals as indicated in your refrigerator's wiring diagram. Ensure a secure and correct polarity connection.

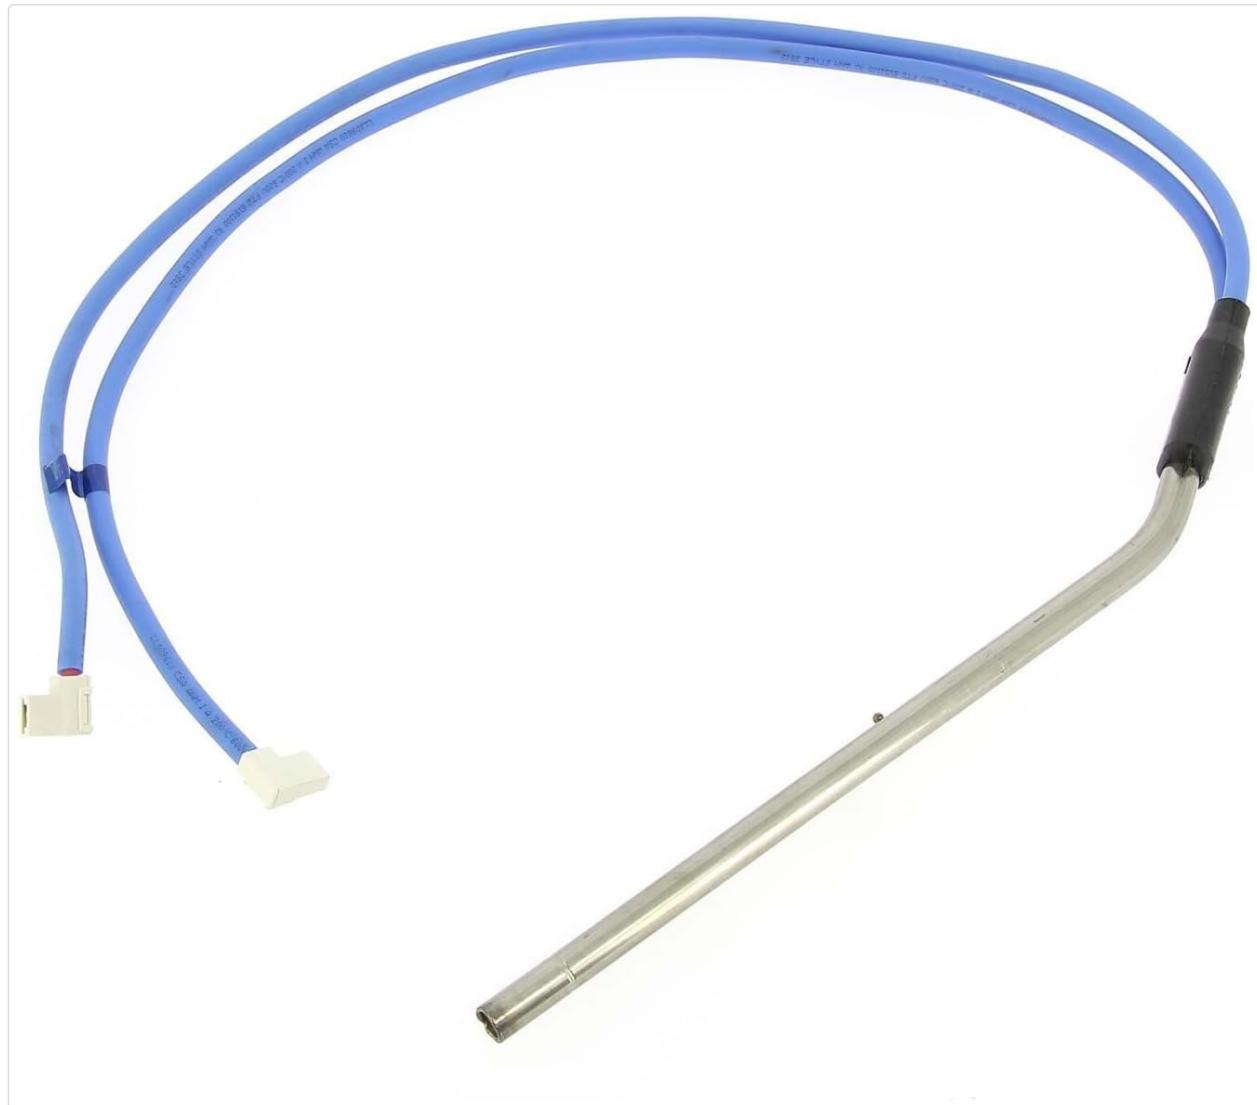


Image 1: The Thetford 12V Heating Cartridge, showing the metal probe and connected blue wires. This component is crucial for the refrigerator's heating function.



Image 2: A detailed view of the electrical connectors on the Thetford 12V Heating Cartridge, highlighting the connection points for the 12V power supply.

Reassembly: Replace any removed cover panels and secure them properly.

Testing: Reconnect power to the refrigerator and test the heating function according to your refrigerator's operating instructions.

OPERATING INSTRUCTIONS

The Thetford 12V Heating Cartridge operates in conjunction with your Thetford refrigerator's control system. Its function is typically automatic, engaging when the refrigerator's control unit determines a need for heating (e.g., during defrost cycles or specific operating modes).

- Ensure your refrigerator is powered on and set to the desired operating mode.
- The heating cartridge will activate as required by the refrigerator's internal logic.
- No direct user interaction is typically required for the heating cartridge itself once installed.

Refer to your specific Thetford refrigerator model's user manual for detailed operating procedures and control panel functions.

MAINTENANCE

The Thetford 12V Heating Cartridge is designed for long-term, maintenance-free operation. However, periodic checks are recommended as part of overall refrigerator maintenance.

- **Visual Inspection:** Annually, or if performance issues arise, visually inspect the cartridge and its wiring for any signs of corrosion, damage, or loose connections.
- **Cleaning:** Ensure the area around the heating cartridge is free from dust and debris to allow for optimal heat transfer. Disconnect power before cleaning.
- **Professional Check:** If you suspect a malfunction, have the system inspected by a qualified service technician.

TROUBLESHOOTING

If your Thetford refrigerator is not performing as expected, and you suspect an issue with the heating cartridge, consider the following:

Symptom	Possible Cause	Solution
Refrigerator not heating (if applicable mode)	No 12V power supply; Faulty wiring connection; Defective heating cartridge; Refrigerator control unit issue.	Check 12V power supply to the refrigerator. Verify wiring connections to the cartridge. Test cartridge resistance (requires multimeter and technical knowledge). Consult a qualified technician if issues persist.
Error code related to heating element	Specific error in the refrigerator's control system.	Refer to your refrigerator's user manual for error code definitions and troubleshooting steps.

For complex issues or if you are unsure, always contact a qualified service technician or Thetford customer support.

SPECIFICATIONS

Brand:	Thetford
Model:	Heating Cartridge (Compatible with N3145, N3150, N3170, N3175)
Part Number:	633572
Voltage:	12V DC
Item Weight:	170 g

Product Dimensions (L x W x H):	32 x 10 x 20 cm
ASIN:	B078T2TVZB

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your Thetford refrigerator or visit the official Thetford website. Keep your purchase receipt as proof of purchase.

If you have questions regarding this heating cartridge, please contact Thetford customer service directly.



Image 3: The official Thetford logo, representing the manufacturer of this heating cartridge.

© 2023 Thetford. All rights reserved.