

[Manuals.plus](#) /

› [ROJAPLAST](#) /

› ROJAPLAST Vegas Lux 3-Seater Wooden Garden Swing Instruction Manual Model 307/1

ROJAPLAST 307/1

ROJAPLAST Vegas Lux 3-Seater Wooden Garden Swing Instruction Manual

Model: 307/1

INTRODUCTION

Thank you for choosing the ROJAPLAST Vegas Lux 3-Seater Wooden Garden Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new garden swing. Please read all instructions carefully before assembly and retain this manual for future reference.

SAFETY INFORMATION

- **Weight Limit:** Do not exceed the maximum weight capacity of 300 kg (661 lbs). This swing is designed for three persons.
- **Stable Surface:** Always place the swing on a flat, level, and stable surface to prevent tipping.
- **Assembly:** Ensure all parts are correctly assembled and all fasteners are securely tightened before use. Periodically check all bolts and nuts for tightness.
- **Children:** Children should be supervised by an adult when using the swing. Do not allow children to play unsupervised around the swing.
- **Weather Conditions:** In strong winds or severe weather, remove the canopy and cushions to prevent damage. Consider storing the swing indoors or covering it during winter months.
- **Maintenance:** Regularly inspect the wooden frame for cracks or damage and the chains for wear. Replace any damaged parts immediately.

PACKAGE CONTENTS

Before beginning assembly, ensure all components are present and undamaged. If any parts are missing or damaged, contact ROJAPLAST customer service.

- Wooden Frame Components (legs, crossbeams, armrests)
- Swing Seat Base
- Canopy Fabric and Frame
- Seat Cushions (Green)
- Suspension Chains and Hooks
- Hardware Pack (bolts, nuts, washers, screws)

- Assembly Tools (may not be included, prepare a wrench and screwdriver)

SETUP AND ASSEMBLY

Assembly requires two adults. Lay out all components on a soft, clean surface to prevent scratching. Do not fully tighten bolts until instructed.

1. **Unpack and Identify Parts:** Carefully remove all items from the packaging. Compare them against the package contents list to ensure everything is present.
2. **Assemble Side Frames:** Attach the horizontal support beams to the vertical leg pieces to form the two A-shaped side frames. Secure with bolts and nuts, but do not fully tighten yet.
3. **Connect Side Frames:** Use the long top beam and lower crossbeams to connect the two assembled side frames. This forms the main structure of the swing.
4. **Assemble Swing Seat:** Construct the swing seat base according to the diagrams. Ensure all wooden slats are correctly oriented.
5. **Attach Suspension Chains:** Secure the suspension chains to the designated points on the swing seat and then hang the seat from the hooks on the top beam of the main frame. Ensure the chains are evenly distributed and securely fastened.
6. **Install Canopy:** Assemble the canopy frame and attach the green canopy fabric. Mount the assembled canopy onto the top of the main frame, ensuring it is securely fastened and provides adequate shade.
7. **Place Cushions:** Lay the green seat cushions onto the swing seat.
8. **Final Tightening:** Once all components are in place and aligned, go back and fully tighten all bolts and nuts using the appropriate tools. Do not overtighten.



Image: Fully assembled ROJAPLAST Vegas Lux 3-Seater Wooden Garden Swing, featuring a sturdy wooden frame, a dark green canopy, and matching green cushions on the seat. The swing is designed for outdoor relaxation.

OPERATING INSTRUCTIONS

- **Seating:** The swing is designed to comfortably seat three adults. Distribute weight evenly when sitting.
- **Gentle Swinging:** Use the swing with gentle, controlled movements. Avoid excessive force or aggressive swinging, which could compromise stability or damage the structure.
- **Convertible Seat:** The swing seat is multi-functional and can be converted into a flat bed for relaxation. To convert, carefully lower the backrest until it is horizontal with the seat. Ensure it locks securely into the bed position before use. To return to the upright position, lift the backrest until it clicks into place.
- **Canopy Adjustment:** The canopy provides shade and can be adjusted to block sunlight from different angles. Loosen the adjustment knobs, position the canopy, and then tighten the knobs to secure it.

MAINTENANCE

- **Wood Care:** The wooden frame should be cleaned periodically with a damp cloth and mild soap. Avoid harsh chemicals. To prolong the life of the wood, consider applying a wood sealant or stain annually, especially if exposed to direct sunlight and rain.
- **Cushion and Canopy Care:** The cushions and canopy fabric can be spot cleaned with a mild detergent and water. Allow them to air dry completely before storage. For extended durability, store cushions and canopy indoors during inclement weather or when not in use for long periods.
- **Hardware Check:** Regularly inspect all bolts, nuts, and chains for tightness and signs of wear or corrosion. Tighten any loose fasteners. Replace any rusted or damaged hardware immediately.
- **Winter Storage:** During winter months or prolonged periods of non-use, it is recommended to disassemble the swing or cover it with a protective outdoor furniture cover and store cushions and canopy indoors in a dry place.

TROUBLESHOOTING

- **Squeaking Noise:** If the swing makes squeaking noises, check the suspension chains and their attachment points. Apply a silicone-based lubricant to the moving parts if necessary.
- **Instability:** Ensure the swing is placed on a perfectly level surface. Check that all assembly bolts are fully tightened. Uneven ground or loose fasteners can cause instability.
- **Canopy Sagging:** Verify that the canopy frame is correctly assembled and securely attached. Adjust the tension of the canopy fabric if possible, or re-tighten its mounting points.

SPECIFICATIONS

Model Number	307/1
Brand	ROJAPLAST
Product Dimensions (L x W x H)	235 x 118 x 179 cm (92.5 x 46.5 x 70.5 inches)
Item Weight	63 Kilograms (138.9 lbs)
Material	Wood (Frame), Fabric (Canopy, Cushions)
Color	Brown (Wood), Green (Canopy/Cushions)
Maximum Weight Recommendation	300 Kilograms (661 lbs)
Seating Capacity	3 Persons
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact ROJAPLAST customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question