

Manuals.plus /
› Monster /
› Monster S200 Portable Bluetooth Speaker User Manual

Monster S200

Monster S200 Portable Bluetooth Speaker User Manual

Model: S200 | Brand: Monster

INTRODUCTION

The Monster S200 Portable Bluetooth Speaker is designed to deliver an exceptional audio experience with smart features. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity.



Figure 1: Monster S200 Portable Bluetooth Speaker (Angled View)

This image shows the Monster S200 speaker from an angled perspective, highlighting its compact, triangular design and textured black finish. The side panel features the "MONSTER SUPERSTAR S200" branding and NFC logo.

PRODUCT FEATURES

- **Pure Monster Sound:** Experience incredible, clean, articulate, and transparent room-filling sound.
- **V-Sound Technology:** Features bidirectional drivers for direct and reflected sound, utilizing a 3-driver configuration.
- **Durable Design:** Water, weather, and splash resistant with an IPX7 rating and high-strength casing.
- **Extended Playback:** Enjoy over 15 hours of continuous music playback on a single charge.
- **Advanced Call Clarity:** Premium speaker with echo cancellation for exceptional call clarity when paired with your phone.
- **Voice Assistant Integration:** MonsterTalk voice assistant operated via the Melody app for convenient control.

PACKAGE CONTENTS

Please check the package for the following items:

- Monster S200 Portable Bluetooth Speaker
- Charging Cable (USB)
- Quick Start Guide (not explicitly mentioned but standard)

MONSTER®

SUPERSTAR™
THE SMARTER MUSIC SPEAKER

S200
VOICE CONTROL READY
CONTROLE PAR LA VOIX

MONSTER TALK™
POWERED BY



Bluetooth®

V-SOUND™

WATERPROOF
IMPERMEABLE

SPEAKERPHONE
FONCTION MAINS LIBRES

19+ HOURS PLAYTIME*
19+ HEURES PLAYTIME*

Figure 2: Monster S200 Retail Packaging

This image displays the Monster S200 speaker in its retail box, showcasing the product name, brand, and key features like "Voice Control Ready" and "19+ Hours Playtime".

SETUP

1. Charging the Speaker

Before first use, fully charge your Monster S200 speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button () located on the side panel until you hear an audible prompt and the indicator light illuminates.
- **To Power Off:** Press and hold the Power button () again until the speaker powers down.

3. Bluetooth Pairing

To connect your Monster S200 to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in pairing mode (the Bluetooth indicator light will typically flash).
2. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
3. Search for available devices and select "Monster S200" from the list.
4. Once connected, the Bluetooth indicator light on the speaker will become solid, and you will hear a confirmation tone.

For NFC-enabled devices, simply tap your device to the NFC area on the speaker for quick pairing.



Figure 3: Monster S200 Control Panel

This image shows the side panel of the Monster S200 speaker, featuring the power button, volume controls, and an indicator light, essential for setup and operation.

OPERATING INSTRUCTIONS

1. Audio Playback

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button, refer to Figure 3) once to play or pause audio.
- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons on the speaker to adjust the volume. You can also control volume from your connected device.
- **Skip Tracks:** Press and hold Volume Up (+) for next track, and Volume Down (-) for previous track (functionality may vary by device).

2. Call Management

When connected to a smartphone, the Monster S200 can be used as a speakerphone:

- **Answer/End Call:** Press the Multi-function button once to answer an incoming call or end an ongoing call.
- **Reject Call:** Press and hold the Multi-function button to reject an incoming call.

3. Voice Assistant (MonsterTalk)

The Monster S200 supports the MonsterTalk voice assistant, operated via the Melody app. Download the Melody app on your smartphone and follow the in-app instructions to set up and utilize voice commands for music control and other functions.

4. Water Resistance (IPX7)

The Monster S200 is IPX7 rated, meaning it can be submerged in water up to 1 meter for up to 30 minutes. While it is water resistant, it is not designed for continuous underwater use. Ensure all ports are securely closed before exposure to water.

MAINTENANCE

1. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface or internal components.

2. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

3. Battery Care

To maximize battery lifespan, avoid fully discharging the battery frequently. Charge the speaker when the low battery indicator appears.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided USB cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device is too far; previous connection interference.	Ensure speaker is in pairing mode (flashing light). Move device closer. Forget "Monster S200" from your device's Bluetooth list and try pairing again.

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both the speaker and your connected device. Ensure the speaker is successfully paired.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move speaker away from other electronic devices.

SPECIFICATIONS

Feature	Detail
Brand	Monster
Model Name	S200
Item Model Number	129743-00
Connectivity Technology	Bluetooth
Color	Black
Speaker Type	Subwoofer (Implies full-range with bass emphasis)
Audio Output Mode	Stereo
Maximum Speaker Output Power	3 Watts
Power (General)	50 Watts
Battery Life	100 hours
Waterproof Rating	IPX7
Product Dimensions (L x W x H)	13.34 x 12.07 x 20.96 cm
Weight	390 grams
Special Features	Fast charging, Voice control
Controller Type	Voice control

Note on Battery Life: The product features state "15+ hours of continuous playback," while the specifications table lists "100 hours." Please refer to the "15+ hours" as a more practical expectation for continuous use.

Note on Power Output: The specifications list "Maximum speaker output power: 3 Watts" and "Power: 50 Watts". The 50 Watts likely refers to peak power or total system power, while 3 Watts might be RMS per channel or a specific driver's output.

WARRANTY AND SUPPORT

Specific warranty details for the Monster S200 speaker are not provided in this manual. For warranty information, technical support, or service inquiries, please refer to the official Monster website or contact their customer support directly.

It is recommended to retain your proof of purchase for warranty claims.

- **Official Website:** www.monsterproducts.com (Example link, actual link may vary)
- **Customer Support:** Refer to the contact section on the official website for phone numbers or email support.

© 2024 Monster. All rights reserved. Monster and Pure Monster Sound are trademarks or registered trademarks of Monster, Inc.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078T5PYG1>

More documents and user manuals: <https://manuals.plus/>