

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MuveAcoustics](#) /

› [MuveAcoustics Box Portable Wireless Bluetooth Speaker MA-2005SG User Manual](#)

MuveAcoustics MA-2005SG

MuveAcoustics Box Portable Wireless Bluetooth Speaker MA-2005SG User Manual

Introduction Product

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

Thank you for choosing the MuveAcoustics Box Portable Wireless Bluetooth Speaker MA-2005SG. This speaker is designed to provide a versatile and engaging audio experience with essential controls for ease of use. This manual will guide you through the setup, operation, and maintenance of your new speaker.

The lightweight design delivers stereo sound with boosted bass, making it suitable for various environments. It offers multiple connectivity options including wireless Bluetooth, FM Radio, USB, and Micro SD card modes. With a built-in Li-ion rechargeable battery, enjoy up to 6 hours of powerful sound per charge. The integrated microphone allows for seamless switching between music and phone calls.

2. PRODUCT OVERVIEW

2.1. Package Contents

- MuveAcoustics Box Portable Wireless Bluetooth Speaker MA-2005SG
- USB Charging Cable
- User Manual

2.2. Speaker Components

Familiarize yourself with the speaker's layout and controls:



Image 1: Front view of the MuveAcoustics Box speaker. This image displays the speaker's front grille and the MuveAcoustics logo, indicating its primary sound output area.



Image 2: Top view of the MuveAcoustics Box speaker showing control buttons. The top panel features buttons for power, volume adjustment, track control, and mode selection.

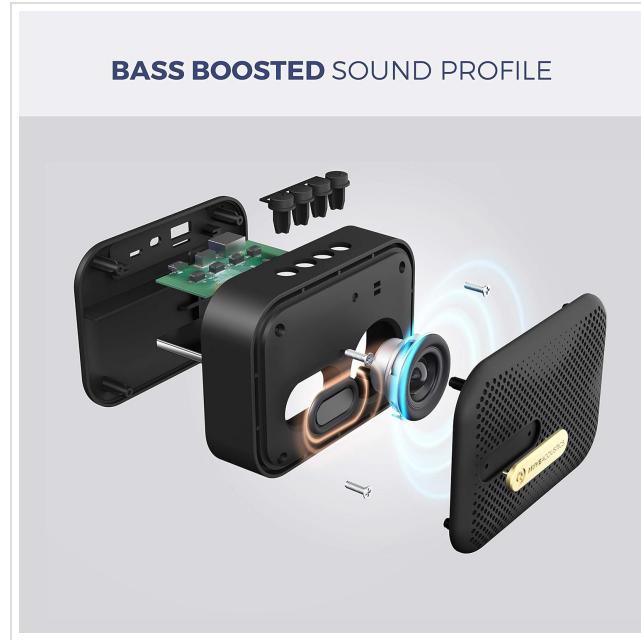


Image 3: Side view of the MuveAcoustics Box speaker showing USB, Micro SD, and charging ports. This view highlights the connectivity options available on the device.

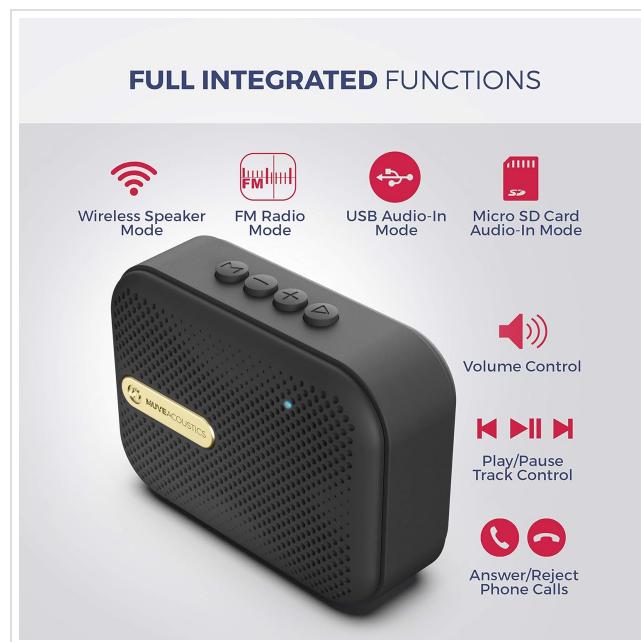


Image 4: Diagram illustrating the full integrated functions of the MuveAcoustics Box speaker. This graphic details the various modes and controls, including Wireless Speaker Mode, FM Radio Mode, USB Audio-In Mode, Micro SD Card Audio-In Mode, Volume Control, Play/Pause/Track Control, and Answer/Reject Phone Calls.

3. SETUP

3.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will illuminate during charging and turn off or change color when fully charged. A full charge provides up to 6 hours of playback.

3.2. Powering On/Off

- To Power On: Press and hold the Power button (refer to Image 2) for approximately 3 seconds until the LED indicator lights up and you hear an audible prompt.
- To Power Off: Press and hold the Power button for approximately 3 seconds until the LED indicator turns off and you hear an audible prompt.

3.3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. The LED indicator will flash, indicating it is ready for pairing.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "MuveAcoustics Box" from the list of devices.
4. Once successfully paired, the LED indicator will become solid, and you will hear a confirmation sound.

3.4. FM Radio Setup

1. Power on the speaker.
2. Press the Mode button (often integrated with Play/Pause, refer to Image 2) repeatedly until you enter FM Radio mode.
3. In FM mode, press and hold the Play/Pause button to initiate an automatic scan for FM stations. The speaker will scan and save all available stations.
4. Use the Previous/Next Track buttons to navigate between the saved FM stations.

3.5. USB/Micro SD Card Playback

1. Power on the speaker.
2. Insert a USB flash drive or a Micro SD card (with audio files) into the corresponding port on the side of the speaker (refer to Image 3).
3. The speaker will automatically detect the storage device and begin playing audio files. If it does not, press the Mode button to switch to USB or Micro SD mode.

4. OPERATING INSTRUCTIONS

4.1. Basic Audio Controls

- **Play/Pause:** Press the Play/Pause button once to play or pause the current audio track.
- **Volume Up:** Press the '+' button to increase the volume.
- **Volume Down:** Press the '-' button to decrease the volume.
- **Next Track/Station:** Press and hold the '+' button to skip to the next track (in Bluetooth/USB/SD mode) or next saved station (in FM mode).
- **Previous Track/Station:** Press and hold the '-' button to go to the previous track (in Bluetooth/USB/SD mode) or previous saved station (in FM mode).

4.2. Call Management (in Bluetooth Mode)

- **Answer/End Call:** When an incoming call is received, press the Play/Pause button once to answer. Press it again to end the call.
- **Reject Call:** When an incoming call is received, press and hold the Play/Pause button to reject the call.

4.3. Mode Switching

Press the Mode button (often integrated with Play/Pause) repeatedly to cycle through the available modes: Bluetooth, FM Radio, USB, and Micro SD card playback.

5. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge the speaker regularly, even if not in use for extended periods.
- Water Resistance:** The product is listed as 'Not Water Resistant'. Avoid exposure to water or high humidity.
- Disassembly:** Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided USB cable.
No sound from the speaker.	Volume is too low; Incorrect mode selected; Device not connected.	Increase volume on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, FM, USB, SD) is selected. Verify Bluetooth connection.
Bluetooth connection is unstable or disconnects.	Speaker is out of range; Interference; Low battery.	Ensure the speaker and device are within 10 meters (33 feet) and free from obstructions. Move away from other wireless devices. Charge the speaker. Re-pair the device.
Poor FM radio reception.	Weak signal.	Reposition the speaker to improve signal reception.
USB/Micro SD card not playing.	Incorrect file format; Card/drive not inserted correctly; Speaker in wrong mode.	Ensure audio files are in a compatible format. Reinsert the USB drive or Micro SD card. Press the Mode button to select the correct input mode.

7. SPECIFICATIONS

Feature	Detail
Model Name	MA-2005SG

Feature	Detail
Brand	MuveAcoustics
Speaker Type	Outdoor
Recommended Uses	Music
Colour	Space Gold
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Battery Type	1 Lithium Ion (included)
Battery Average Life	6 Hours
Item Weight	220 g
Product Dimensions (LxWxH)	11 x 8 x 3.5 cm
Water Resistance Level	Not Water Resistant
Manufacturer	Zeeva Electronics Pvt. Ltd.

8. WARRANTY AND SUPPORT

8.1. Warranty Information

MuveAcoustics offers a **1-year warranty** for this product from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2. Customer Support

For warranty claims, technical assistance, or any questions regarding your MuveAcoustics Box speaker, please contact the retailer where you purchased the product or refer to the official MuveAcoustics website for customer support contact information.

	<p>MUVEACOUSTICS CORE Headphones User Manual and Warranty</p> <p>This document provides a comprehensive user manual and warranty information for the MUVEACOUSTICS CORE Headphones (MA-1550). It details product features, specifications, operational guidance for Bluetooth and wired connections, battery charging, safety instructions, and warranty terms.</p>
	<p>MUVEACOUSTICS FOCUS Wireless On-Ear Headphones User Manual and Specifications</p> <p>Comprehensive user manual and specifications for MUVEACOUSTICS FOCUS Wireless On-Ear Headphones (MA-1525), covering features, operation, safety, and warranty information.</p>
	<p>NISSAN Vehicle Maintenance Manual</p> <p>Comprehensive guide to maintaining your NISSAN vehicle, covering engine, chassis, body, fluids, and specifications. Includes periodic maintenance schedules, procedures, and service data for reliable operation.</p>
	<p>MA-WBL41 N LED</p> <p>SANWA SUPPLY MA-WBL41 N LED</p>