



Manuals.plus /

› Redragon /

› Redragon G807 Saturn Wired Gamepad User Manual

Redragon G807

Redragon G807 Saturn Wired Gamepad User Manual

Model: G807

1. INTRODUCTION

Thank you for choosing the Redragon G807 Saturn Wired Gamepad. This manual provides detailed instructions for setting up, operating, and maintaining your new gamepad. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

The Redragon G807 is a versatile wired game controller designed for a comfortable and responsive gaming experience across multiple platforms, including Windows PC, PlayStation 3, and Android devices.

2. PACKAGE CONTENTS

- Redragon G807 Saturn Wired Gamepad
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the layout and functions of your Redragon G807 gamepad.



Figure 3.1: Front view of the Redragon G807 Saturn Gamepad, showing the D-pad, left and right analog sticks, action buttons (1, 2, 3, 4), Turbo, Select, Start, Clear, and Home buttons.

3.1. Key Components

- **D-Pad:** Directional Pad for precise movement.
- **Left Analog Stick:** For analog movement and control.
- **Right Analog Stick:** For camera control or other analog inputs.
- **Action Buttons (1, 2, 3, 4):** Standard gaming action buttons.
- **Shoulder Buttons (L1/LB, R1/RB):** Located on the top edge.
- **Triggers (L2/LT, R2/RT):** Analog triggers for sensitive input, located on the underside of the shoulder buttons.
- **SELECT Button:** For menu navigation or specific game functions.
- **START Button:** For pausing games or confirming selections.
- **TURBO Button:** Activates turbo function for rapid button presses.
- **CLEAR Button:** Deactivates turbo function.
- **HOME Button:** Returns to system menu or dashboard.



Figure 3.2: Close-up view highlighting the USB 2.0 wired connection of the Redragon G807 Saturn Gamepad.

4. SETUP INSTRUCTIONS

4.1. Connecting to PC (Windows)

1. Ensure your computer is powered on.
2. Plug the USB connector of the Redragon G807 Gamepad into an available USB 2.0 or 3.0 port on your computer.
3. The operating system will automatically detect and install the necessary drivers. This may take a few moments.
4. Once the drivers are installed, the gamepad is ready for use. You can verify its functionality in your operating system's game controller settings.

4.2. Connecting to PlayStation 3

1. Ensure your PlayStation 3 console is powered on.
2. Plug the USB connector of the Redragon G807 Gamepad into an available USB port on your PS3 console.
3. The console should recognize the gamepad automatically.
4. The gamepad is now ready for use with your PS3 games.

4.3. Connecting to Android Devices

For Android devices, an OTG (On-The-Go) adapter may be required if your device does not have a standard USB-A port. Ensure your Android device supports OTG functionality.

1. Connect the USB connector of the Redragon G807 Gamepad to an OTG adapter (if needed).
2. Plug the OTG adapter (or the gamepad directly) into your Android device's USB port.
3. Your Android device should detect the gamepad. Some games may require specific controller settings within the game itself.



Figure 4.1: Image illustrating the compatibility of the Redragon G807 Saturn Gamepad with PC (DInput and XInput) and PlayStation 3.

5. OPERATING INSTRUCTIONS

5.1. Basic Operation

- Once connected, the gamepad functions as a standard input device.
- Use the D-pad or Left Analog Stick for directional movement.
- Use the Right Analog Stick for camera control or aiming, depending on the game.

- Press the Action Buttons (1, 2, 3, 4) for in-game actions.
- Utilize Shoulder Buttons and Triggers for additional actions like firing, jumping, or accelerating.

5.2. Turbo Function

The Turbo function allows a button to be pressed repeatedly as long as it is held down, which can be useful in certain games.

1. To activate Turbo: Press and hold the **TURBO** button, then press the desired action button (e.g., 1, 2, 3, 4, L1, R1, L2, R2). The selected button will now have the turbo function enabled.
2. To deactivate Turbo: Press and hold the **CLEAR** button, then press the action button for which turbo was enabled. Alternatively, press the **TURBO** button twice quickly to clear all turbo settings.

5.3. Vibration Feedback

The Redragon G807 features dual vibration motors that provide tactile feedback during gameplay, enhancing immersion. This function is automatically enabled when supported by the game and platform.



Figure 5.1: Close-up view emphasizing the dual vibration feature of the Redragon G807 Saturn Gamepad, powered by two internal force-feedback motors.

6. FEATURES

- **Wired USB 2.0 Connection:** Ensures stable and low-latency gameplay.
- **Dual Vibration Motors:** Provides immersive force-feedback for a realistic gaming experience.
- **Ergonomic Design:** Comfortable and lightweight for extended gaming sessions.
- **Sensitive Triggers:** Responsive analog triggers for precise control.
- **Durable Construction:** Made with reinforced ABS plastic for longevity.
- **Wide Compatibility:** Supports Windows PC (DInput & XInput), PlayStation 3, and Android.



Figure 6.1: Image showcasing the comfortable and lightweight ergonomic design of the Redragon G807 Saturn Gamepad, also pointing out the internal force-feedback motors and sensitive triggers.

MÁXIMA CALIDAD

Estroctura de plástico ABS reforzado.



LIVIANO, PARA LARGAS JORNADAS DE JUEGO.

Figure 6.2: Image highlighting the maximum quality reinforced ABS plastic structure and lightweight design of the Redragon G807 Saturn Gamepad, suitable for long gaming sessions.



Figure 6.3: Close-up view indicating the durable construction of the Redragon G807 Saturn Gamepad.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the gamepad. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on top of the gamepad.
- **Cable Care:** Do not sharply bend or pull the USB cable. Store it neatly to prevent tangling and damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gamepad not recognized by PC/Console.	Loose USB connection, faulty USB port, driver issue.	<ul style="list-style-type: none"> • Ensure the USB cable is securely plugged into a working USB port. • Try a different USB port. • Restart your PC/console. • For PC, check Device Manager for driver status. Reinstall drivers if necessary.
Vibration not working.	Game does not support vibration, vibration disabled in game settings, driver issue.	<ul style="list-style-type: none"> • Verify that the game you are playing supports vibration feedback. • Check in-game settings to ensure vibration is enabled. • Ensure drivers are correctly installed.
Buttons or analog sticks are unresponsive or "drifting".	Physical wear, debris under buttons, software calibration issue.	<ul style="list-style-type: none"> • Clean around the affected buttons/sticks. • Calibrate the gamepad through your operating system's controller settings (for PC). • If the issue persists, it may indicate hardware wear.

9. SPECIFICATIONS

Feature	Detail
Model Number	G807
Connection Type	Wired USB 2.0
Compatibility	Windows PC (DInput & XInput), PlayStation 3, Android
Vibration	Dual Force-Feedback Motors
Product Dimensions	6 x 4 x 2.45 inches (15.24 x 10.16 x 6.22 cm)
Item Weight	10.2 ounces (289.17 grams)
Material	Reinforced ABS Plastic

10. WARRANTY AND SUPPORT

Redragon products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the official Redragon website or contact their

customer support channels.

Please retain your proof of purchase for any warranty claims.