

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Candy](#) /
- › [Candy FCP602X Built-in Electric Ventilated Oven User Manual](#)

## Candy FCP602X

# Candy FCP602X Built-in Electric Ventilated Oven User Manual

Model: FCP602X

[Introduction](#)   [Safety Information](#)   [Product Overview](#)   [Installation](#)   [Operating Instructions](#)   [Maintenance & Cleaning](#)   [Troubleshooting](#)   [Specifications](#)

## 1. INTRODUCTION

Thank you for choosing the Candy FCP602X Built-in Electric Ventilated Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

## 2. SAFETY INFORMATION

### General Safety:

- Ensure the appliance is correctly installed by a qualified person.
- Do not allow children to operate the oven unsupervised.
- Always use oven mitts when handling hot items.
- Do not store flammable materials in or near the oven.
- Disconnect the appliance from the power supply before cleaning or maintenance.

### Electrical Safety:

- Verify that the voltage and frequency match the ratings on the appliance's data plate.
- Do not use extension cords or multiple adapters.
- Ensure the appliance is properly earthed.

## 3. PRODUCT OVERVIEW

The Candy FCP602X oven features a simple and essential design, crafted to integrate seamlessly into your kitchen. It offers a 65-liter capacity and multiple cooking functions for versatile meal preparation.





**Figure 3.4: Front View.** The Candy FCP602X oven, showcasing its sleek black and stainless steel finish, integrated into a modern kitchen cabinet.



**Figure 3.5: Baking Croissants.** Croissants are shown baking on a rack inside the oven, illustrating its baking function.


The oven comes with 2 wire racks and 1 baking tray (leccarda) as standard accessories. The anti-tip grids ensure stability during cooking and when removing dishes.

## 4. INSTALLATION

---

This oven is designed for built-in installation. Ensure the installation is performed by a qualified technician to comply with local safety standards and regulations.

### Dimensions and Cabinet Requirements

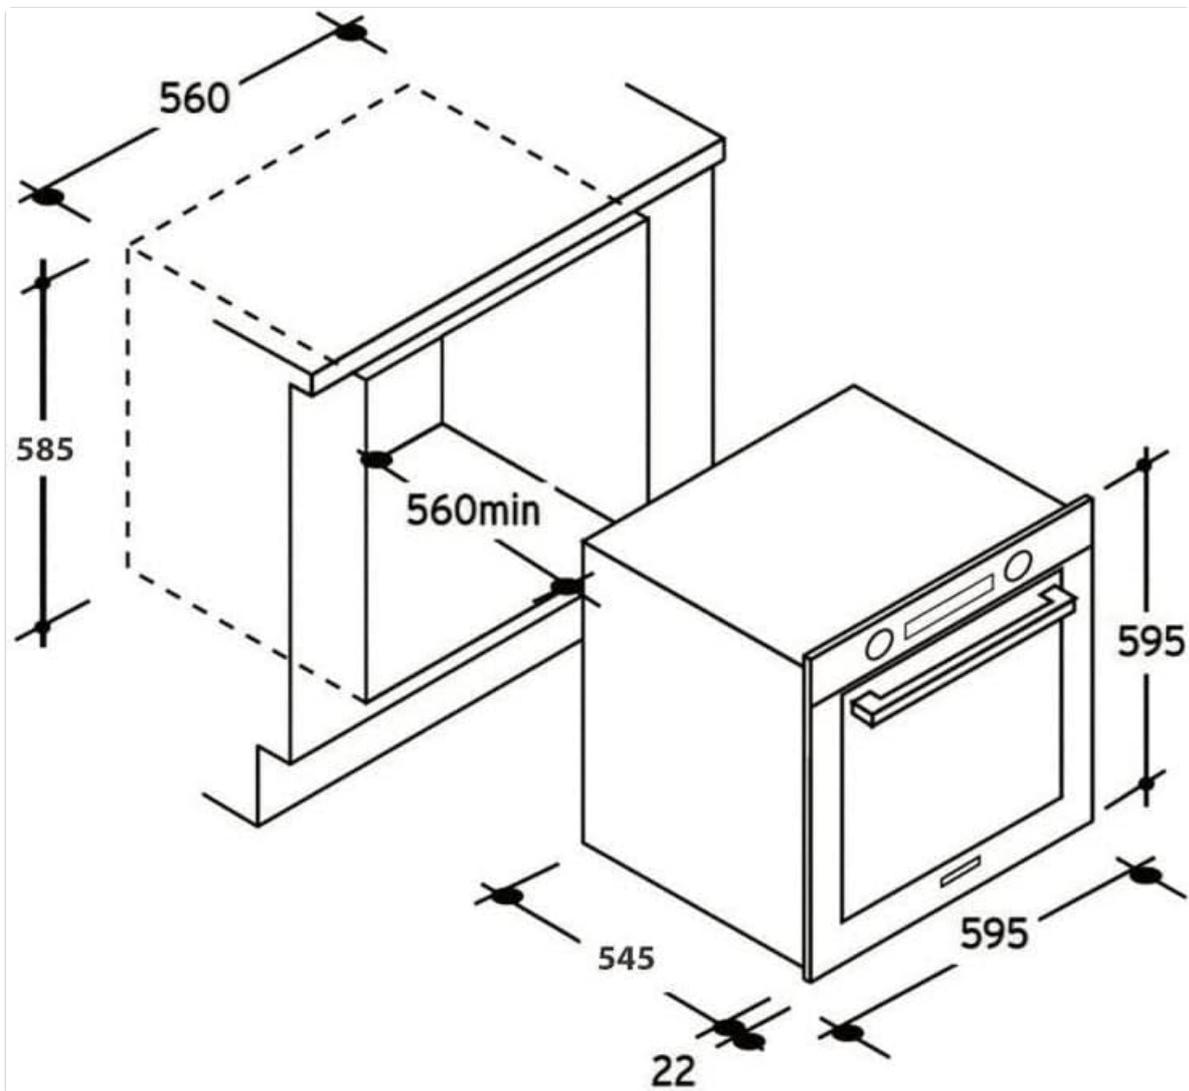

**Figure 4.1: Installation Dimensions.** This diagram illustrates the precise dimensions for the oven (59.5 cm width, 59.5 cm height, 56.8 cm depth) and the required cabinet cutout (56 cm width, 58.5 cm height, 56 cm minimum depth) for proper built-in installation. Refer to the diagram above for detailed measurements. Ensure adequate ventilation around the appliance as specified in the full installation guide provided with the product.

#### Steps for Installation (Summary):

1. Prepare the cabinet opening according to the specified dimensions.
2. Connect the oven to the electrical supply, ensuring proper grounding.
3. Carefully slide the oven into the cabinet opening.
4. Secure the oven to the cabinet using the provided screws.
5. Remove all internal packaging and accessories before first use.

## 5. OPERATING INSTRUCTIONS

The Candy FCP602X oven offers 8 programs designed for various cooking needs. Use the control knobs to select the desired function and temperature.

#### Cooking Functions:

- **Static Function:** Activates both the upper and lower heating elements. Ideal for traditional baking such as chicken, biscuits, and baked apples.
- **Ventilated Function:** Utilizes a fan to distribute heat evenly throughout the oven cavity. Perfect for cooking fish and dishes requiring uniform heat distribution.
- **Grill Function:** Designed for grilling red meats, achieving a perfect golden-brown and crispy exterior.

- **Pizza Function:** Specifically engineered to replicate the cooking conditions of a wood-fired oven, ensuring optimal pizza results.
- **Cook Light Function:** Allows for healthier cooking by reducing the need for excessive oil or fat in your dishes.
- Additional programs are available for diverse culinary requirements. Refer to the full manual for specific temperature and time recommendations for each program.

To select a function, turn the function knob to the desired symbol. To set the temperature, turn the temperature knob. The oven will begin heating once both are set.

## 6. MAINTENANCE & CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

- **Before Cleaning:** Always ensure the oven is cool and disconnected from the power supply.
- **Interior Cleaning:** Use a soft cloth and mild detergent to clean the interior surfaces. For stubborn stains, specialized oven cleaners can be used, following the product instructions carefully.
- **Exterior Cleaning:** Wipe the stainless steel and glass surfaces with a soft, damp cloth and a non-abrasive cleaner. Avoid harsh chemicals that may damage the finish.
- **Accessories:** Remove and clean the wire racks and baking tray with warm soapy water.
- **Light Bulb Replacement:** If the internal light bulb needs replacement, ensure the oven is cool and unplugged. Refer to the full manual for specific instructions on how to access and replace the bulb.

## 7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings.	Check power connection and circuit breaker. Verify function and temperature settings.
Food not cooking evenly.	Incorrect rack position; overloaded oven.	Use recommended rack positions. Avoid overcrowding the oven. Ensure proper preheating.
Oven light not working.	Bulb is faulty or loose.	Replace the light bulb (refer to maintenance section). Ensure it is securely tightened.
Excessive smoke during cooking.	Food residue; excessive fat.	Clean the oven thoroughly. Use a baking tray to catch drips when grilling.

If the problem persists after checking these points, please contact Candy customer support.

## 8. SPECIFICATIONS

Below are the key technical specifications for the Candy FCP602X oven:

- **Brand:** Candy
- **Model Number:** FCP602X (Internal: 33702096)
- **Type:** Built-in Electric Ventilated Oven
- **Capacity:** 65 Liters

- **Dimensions (Product):** 59.5 cm (Width) x 59.5 cm (Height) x 56.8 cm (Depth)
- **Weight:** 27.6 kg
- **Color:** Black and Stainless Steel (Argento/Nero)
- **Heating Method:** Convection
- **Fuel Type:** Electric
- **Energy Class:** A+
- **Programs:** 8 (including Static, Ventilated, Grill, Pizza, Cook Light)

**ENERG** Y IJA  
енергия · ενεργεια IE IA

**CANDY** **FCS 602 X/E**

A+++  
A++  
A+  
A  
B  
C  
D

**A**

0.89



Figure 8.1: Energy Label. The energy efficiency label for the Candy oven, indicating its A+ energy class and consumption values.

## 9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Candy website. For technical support or service, please contact Candy customer service using the contact details provided in your product documentation.