

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Kichler](#) /
- › [Kichler Winslow 44030OZ Chandelier Installation and User Manual](#)

### Kichler 44030OZ

# Kichler Winslow 44030OZ Chandelier User Manual

Model: 44030OZ | Brand: Kichler

## 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Kichler Winslow 44030OZ Chandelier. Please read all instructions carefully before beginning installation and retain this manual for future reference.





Figure 1: Kichler Winslow 5-Light Chandelier (Model 44030OZ)

The Winslow 19.75" 5-light chandelier features a classic design with an Olde Bronze finish and clear seeded glass. It is suitable for various aesthetic environments, including traditional and transitional settings, and is ideal for dining rooms, living rooms, or bedrooms.

## 2. SAFETY INFORMATION

**WARNING: RISK OF ELECTRIC SHOCK. Always disconnect power at the main circuit breaker panel or main fuse box before starting installation or performing any maintenance.**

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC).
- If you are unfamiliar with electrical wiring, consult a qualified electrician.

- Use a non-contact voltage tester to confirm power is off before touching any wires.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components with care to prevent breakage.

### 3. PACKAGE CONTENTS

---

Verify that all parts are present before beginning installation. If any parts are missing or damaged, do not attempt to install the fixture. Contact Kichler customer service for assistance.

- Mounting Strap
- Strap Mounting Screws
- Hex Nuts
- Nipple
- Screw Collar
- Loop
- Canopy
- Wire Nuts
- (5) Glass Shades
- Chain

*Bulb(s) not included. Requires five medium E26 up to 75W equivalent bulbs.*

### 4. SETUP AND INSTALLATION

---

Before installation, ensure you have the necessary tools, including a ladder, wire strippers, screwdriver, and a voltage tester. It is recommended to have an additional person for assistance when lifting the fixture.

#### 4.1 Disconnecting Power and Removing Old Fixture

1. Turn off the electricity at the main circuit breaker panel or fuse box.
2. Use a voltage tester to confirm that the power is completely off at the junction box.
3. Carefully remove the existing light fixture, disconnecting all wires.

Your browser does not support the video tag.

Video 1: Chandelier Installation Guide. This video demonstrates the general steps for installing a Kichler chandelier, including power disconnection and mounting bracket attachment.

#### 4.2 Mounting the Fixture

4. Attach the new mounting bracket to the junction box on your ceiling using the provided screws.
5. Attach the fixture's chain or rod to the mounting bracket.
6. Thread the fixture wires up through the mounting box and chain/rod.

#### 4.3 Electrical Connections

7. Connect the ground wire (usually bare copper or green) from the fixture to the ground wire from the ceiling using a wire nut. Secure the ground wire to the mounting bracket's ground screw.
8. Connect the white (neutral) wire from the fixture to the white (neutral) wire from the ceiling using a wire nut.
9. Connect the black (hot) wire from the fixture to the black (hot) wire from the ceiling using a wire nut.
10. Carefully tuck all connected wires into the junction box, ensuring no wires are pinched.

Your browser does not support the video tag.

Video 2: Kichler Chandelier Installation. This video provides a step-by-step guide for wiring and securing a Kichler chandelier, ensuring proper electrical connections.

#### 4.4 Securing the Canopy and Adding Shades/Bulbs

11. Raise the canopy to the ceiling and secure it with the included mounting hardware (e.g., screw collar ring).
12. Carefully place the clear seeded glass shades onto the fixture.
13. Install five medium E26 base bulbs (not included), up to 75W equivalent, into the sockets.



Figure 2: Detail of Clear Seeded Glass Shades



Figure 3: Bulb Base (E26 Medium) and Dimming Compatibility

#### 4.5 Restoring Power

14. Once installation is complete, turn the electricity back on at the main circuit breaker panel or fuse box.
15. Test the chandelier to ensure it functions correctly.

### 5. OPERATING INSTRUCTIONS

The Kichler Winslow Chandelier is designed for ease of use.

- **Power On/Off:** Operate the chandelier using your standard wall switch.
- **Dimmable Feature:** This fixture is dimmable when used with compatible dimmable bulbs and a compatible wall dimmer switch. Ensure your bulbs are rated for dimming if you intend to use this feature.
- **Bulb Type:** Uses five medium E26 base bulbs, up to 75W equivalent.

## 6. MAINTENANCE

Proper care will ensure the longevity and appearance of your chandelier.

- **Cleaning:** Be certain the electric current is turned off before cleaning. Clean metal components with a soft cloth moistened with a mild liquid soap solution. Wipe clean and buff with a very soft dry cloth.
- **Glass Shades:** The clear seeded glass shades can be cleaned with a soft, damp cloth. Avoid abrasive cleaners that may scratch the glass.
- **Bulb Replacement:** Always turn off power before replacing bulbs. Allow bulbs to cool before handling.

## 7. TROUBLESHOOTING

If your chandelier is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture	Check circuit breaker/fuse. Ensure wall switch is ON.
Light does not turn on	Loose or incorrect wiring	Turn off power. Check all wire connections. Consult an electrician if unsure.
Light does not turn on	Faulty bulb(s)	Replace bulb(s) with new ones of the correct type and wattage.
Flickering light	Loose bulb or wiring	Turn off power. Tighten bulbs. Check wire connections.
Flickering light	Incompatible dimmer switch or bulbs	Ensure dimmer and bulbs are compatible with each other and the fixture.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Kichler

Feature	Detail
Model Number	44030OZ
Color	Old Bronze
Material	Metal, Glass
Style	Industrial
Light Fixture Form	Chandelier
Room Type	Bedroom, Dining Room, Kitchen, Living Room
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Special Features	Dimmable
Light Source	Incandescent (compatible with LED equivalent)
Number of Light Sources	5
Voltage	120 Volts (AC)
Wattage	75 watts (max per bulb)
Bulb Base	E26 Medium
Item Dimensions (L x W x H)	12"L x 19.75"W x 16"H
Item Weight	9.5 Pounds
Required Assembly	Yes



Figure 4: Chandelier Dimensions and Adjustable Height



Figure 5: Interior Hanging Light Size & Placement Guide

## 9. WARRANTY AND SUPPORT

---

This Kichler product comes with a **1-year limited manufacturer warranty**. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official Kichler website.

For additional tips, guidance, and customer care, you may also visit [Kichler.com](https://www.kichler.com).

