

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Escape Platinum](#) /
- › [Escape Platinum SPBT927 Bluetooth Speaker User Manual](#)

## Escape Platinum SPBT927

# Escape Platinum SPBT927 Bluetooth Speaker User Manual

Model: SPBT927

## INTRODUCTION

---

This user manual provides detailed instructions for the operation and maintenance of your Escape Platinum SPBT927 Bluetooth Speaker. This device is a hands-free stereo Bluetooth V3.0 speaker featuring an FM radio, USB music player, and Micro SD card player. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

## PACKAGE CONTENTS

---

Please verify that all items are present in the package:

- Escape Platinum SPBT927 Bluetooth Speaker
- USB Charging Cable
- User Manual (this document)

## PRODUCT FEATURES

---

- Bluetooth V3.0 compliance, Class II
- Operating range: Up to 10 meters (30 feet)
- Integrated FM radio (88-108MHz)
- USB music player functionality
- Micro SD card player functionality
- Hands-free calling support
- Speaker output power: 3W + 3W
- Built-in Lithium rechargeable battery
- Talk time: Up to 10 hours

- Standby time: Up to 240 hours

## CONTROLS AND INDICATORS

The Escape Platinum SPBT927 speaker features intuitive controls located on the front panel for easy access to its various functions.



**Figure 1:** Front view of the SPBT927 speaker, showing the central control panel with buttons and the digital display.

- **Power Button** (⏻): Press and hold to power the speaker on or off. A short press may switch modes.
- **Mode Button (M)**: Press to cycle through available modes: Bluetooth, FM Radio, USB, Micro SD.
- **Play/Pause Button** (▶): In music playback mode, press to play or pause the current track. In FM mode, a short press may initiate auto-scan. During a call, press to answer or end.
- **Volume Up / Next Track Button (+ / ▶)**: Short press to increase volume. Long press to skip to the next track (in music mode) or next FM station.
- **Volume Down / Previous Track Button (- / ◀)**: Short press to decrease volume. Long press to skip to the previous track (in music mode) or previous FM station.
- **Digital Display**: Shows current mode, FM frequency, or track information.



**Figure 2:** The SPBT927 speaker alongside its packaging, illustrating its compact design.

## SETUP

### Charging the Speaker

1. Connect the supplied USB charging cable to the charging port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.

3. The charging indicator light will illuminate, typically red, during charging.
4. Once fully charged, the indicator light will change color or turn off (refer to specific product behavior). A full charge provides up to 10 hours of talk time or 240 hours of standby time.

## Powering On/Off

- **To Power On:** Press and hold the Power button (⏻) for approximately 3 seconds until you hear an audible prompt or see the display light up.
- **To Power Off:** Press and hold the Power button (⏻) again for approximately 3 seconds until the display turns off.

## OPERATING INSTRUCTIONS

---

### Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button (M) until "Bluetooth" or a similar indicator appears on the display. The speaker will enter pairing mode, indicated by a flashing Bluetooth icon or audible prompt.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
3. Search for available devices. You should see "SPBT927" or "Escape Platinum" in the list.
4. Select "SPBT927" to connect. Once paired, the speaker will provide an audible confirmation, and the Bluetooth indicator will become solid.
5. You can now play audio from your device through the speaker. The operating range is up to 10 meters (30 feet).

### FM Radio Operation

1. Power on the speaker and press the Mode button (M) until "FM" or the radio frequency appears on the display.
2. **Auto-Scan:** Press the Play/Pause button (▶) once to initiate an automatic scan for available FM stations. The speaker will scan and save all strong signals.
3. **Manual Tuning/Station Selection:** Use the Previous Track (◀) and Next Track (▶) buttons to navigate through the saved stations or manually tune the frequency.

### USB / Micro SD Card Playback

1. Insert a USB flash drive or a Micro SD card (with pre-loaded audio files) into the respective port on the speaker.
2. The speaker should automatically switch to USB or Micro SD mode. If not, press the Mode button (M) until the correct mode is selected.
3. Use the Play/Pause (▶), Previous Track (◀), and Next Track (▶) buttons to control playback.

### Hands-Free Calling

- When the speaker is connected to your phone via Bluetooth, incoming calls will be routed through the speaker.
- **To Answer a Call:** Press the Play/Pause button (▶) once.
- **To End a Call:** Press the Play/Pause button (▶) once during a call.
- **To Reject a Call:** Press and hold the Play/Pause button (▶) for approximately 2 seconds.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the supplied USB cable.
No sound from speaker.	Volume too low; Device not paired; Incorrect mode selected.	Increase volume on speaker and connected device. Ensure Bluetooth is paired or correct mode (USB/SD/FM) is selected.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 10m). Turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal; Environmental interference.	Reposition the speaker for better reception. Perform an auto-scan again.

## SPECIFICATIONS

Feature	Detail
Model	SPBT927
Brand	Escape Platinum
Bluetooth Compliance	Version 3.0, Class II
Operating Range	Up to 10 meters (30 feet)
Frequency Response	100-20000Hz
Speaker Output Power	3W + 3W
FM Radio Frequency	88-108MHz
Power Supply	Built-in Lithium rechargeable battery

Feature	Detail
Talk Time	Up to 10 hours
Standby Time	Up to 240 hours
Dimensions (L x W x H)	Approx. 0.76D x 2.74W x 0.76H Meters (9" x 2.5" x 2.5")
Item Weight	0.62 Kilograms
Connectivity Technology	Bluetooth, USB
Audio Output Mode	Stereo
Included Components	USB Charging Cable
Mounting Type	Tabletop
Speaker Type	Multimedia
Special Feature	Bluetooth
Recommended Uses	For Smartphones or Tablets
Compatible Devices	Smartphone
Surround Sound Channel Configuration	2.0
Color	Black
Is Waterproof	False
Batteries Included	No (refers to external batteries, internal is built-in)
Batteries Required	No (for operation, as it has built-in)

## WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or the manufacturer directly using the contact information provided with your purchase documentation.

Please retain your proof of purchase for warranty purposes.

