

## Amazon Basics DS-110SAM

# Amazon Basics DS-110SAM Small Slim Desk Drawer Security Safe User Manual

Model: DS-110SAM | 0.1 Cubic Feet

## INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Amazon Basics Small Slim Desk Drawer Security Safe. Please read this manual thoroughly before using the safe to ensure proper function and security. Keep this manual for future reference.

## IMPORTANT SAFETY INFORMATION

- Do not store the emergency override keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is mounted securely to prevent unauthorized removal.
- This safe is designed for security against theft and unauthorized access. It is not fireproof or waterproof. For fire or water protection, consider additional protective measures.
- Keep the keypad dry and clean. Avoid using abrasive cleaners.

## PACKAGE CONTENTS

- Amazon Basics DS-110SAM Security Safe
- Emergency Override Keys (2)
- Mounting Hardware (screws, anchors)
- Instruction Manual (this document)

## SETUP

### 1. Battery Installation

1. Open the safe using one of the emergency override keys. Insert the key into the keyhole located behind the keypad cover, turn it clockwise, and rotate the knob to open the door.

2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

## 2. Setting Your Personal Code

Your safe comes with a factory default code (usually 1-5-9). It is highly recommended to change this immediately.

1. With the safe door open, press the red reset button located on the inside of the door, near the hinges. You will hear a beep.
2. On the keypad, enter your new personal code (3 to 8 digits).
3. Press and **hold** the '#' button to confirm. You will hear a confirmation beep.
4. Test your new code with the door open before closing it. Enter your code, then press '#'. The green light should illuminate, allowing you to turn the knob and retract the bolts.

## 3. Mounting the Safe

For enhanced security, the safe can be mounted to a drawer or other flat surface using the pre-drilled holes and included hardware.



Image: Back of the safe with pre-drilled mounting holes.

1. Choose a suitable location, such as inside a desk drawer, where the safe can be securely fastened.
2. Mark the positions for the mounting holes on the chosen surface using the safe's pre-drilled holes as

a template.

3. Drill pilot holes into the surface.
4. Align the safe with the pilot holes and secure it using the provided screws and anchors. Ensure the safe is firmly attached.

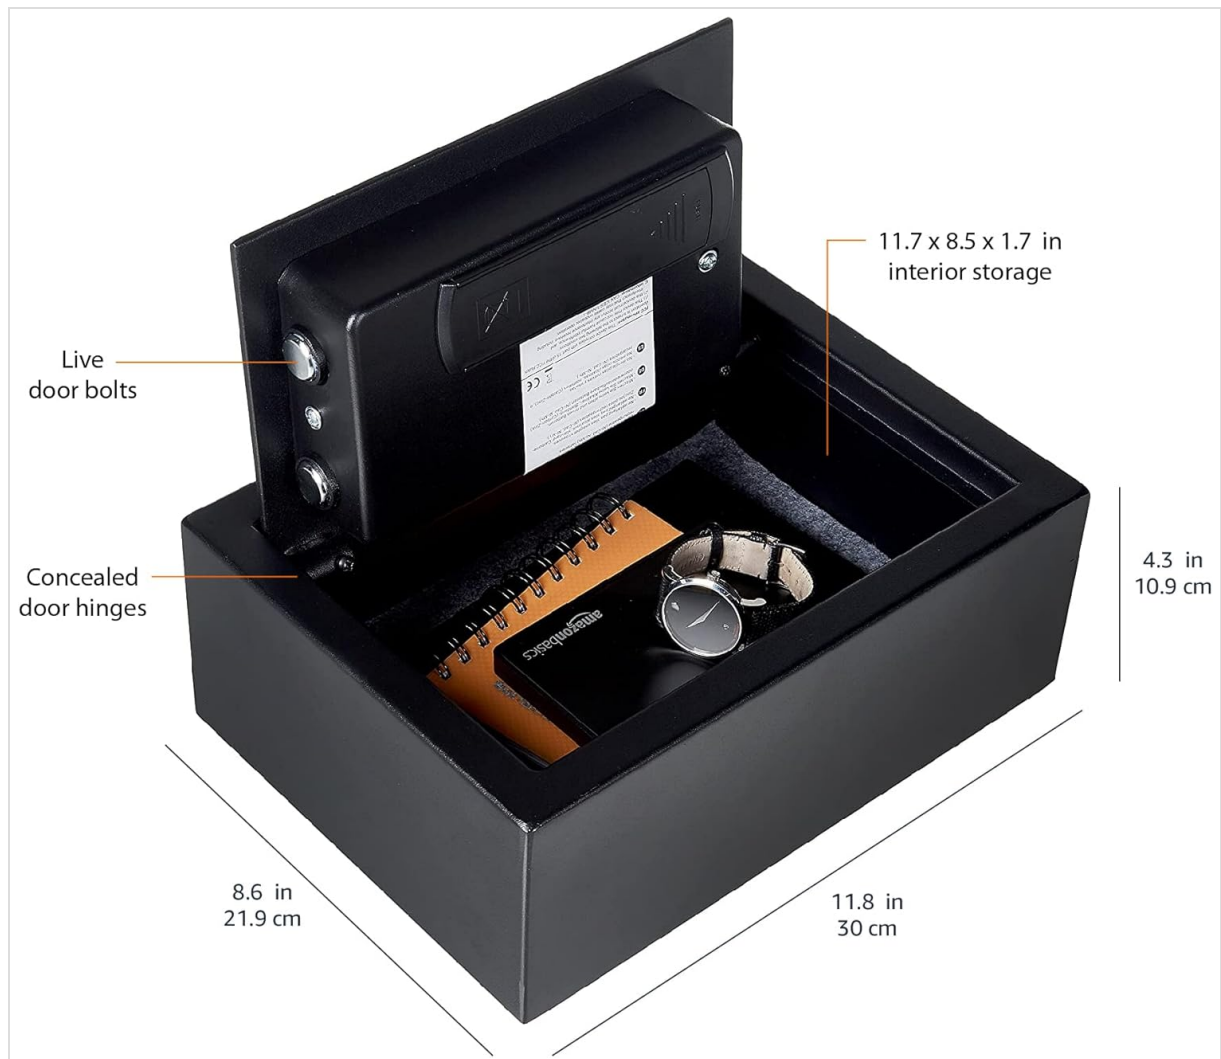 


Image: The safe positioned within a desk drawer, demonstrating its intended use.

## OPERATING THE SAFE



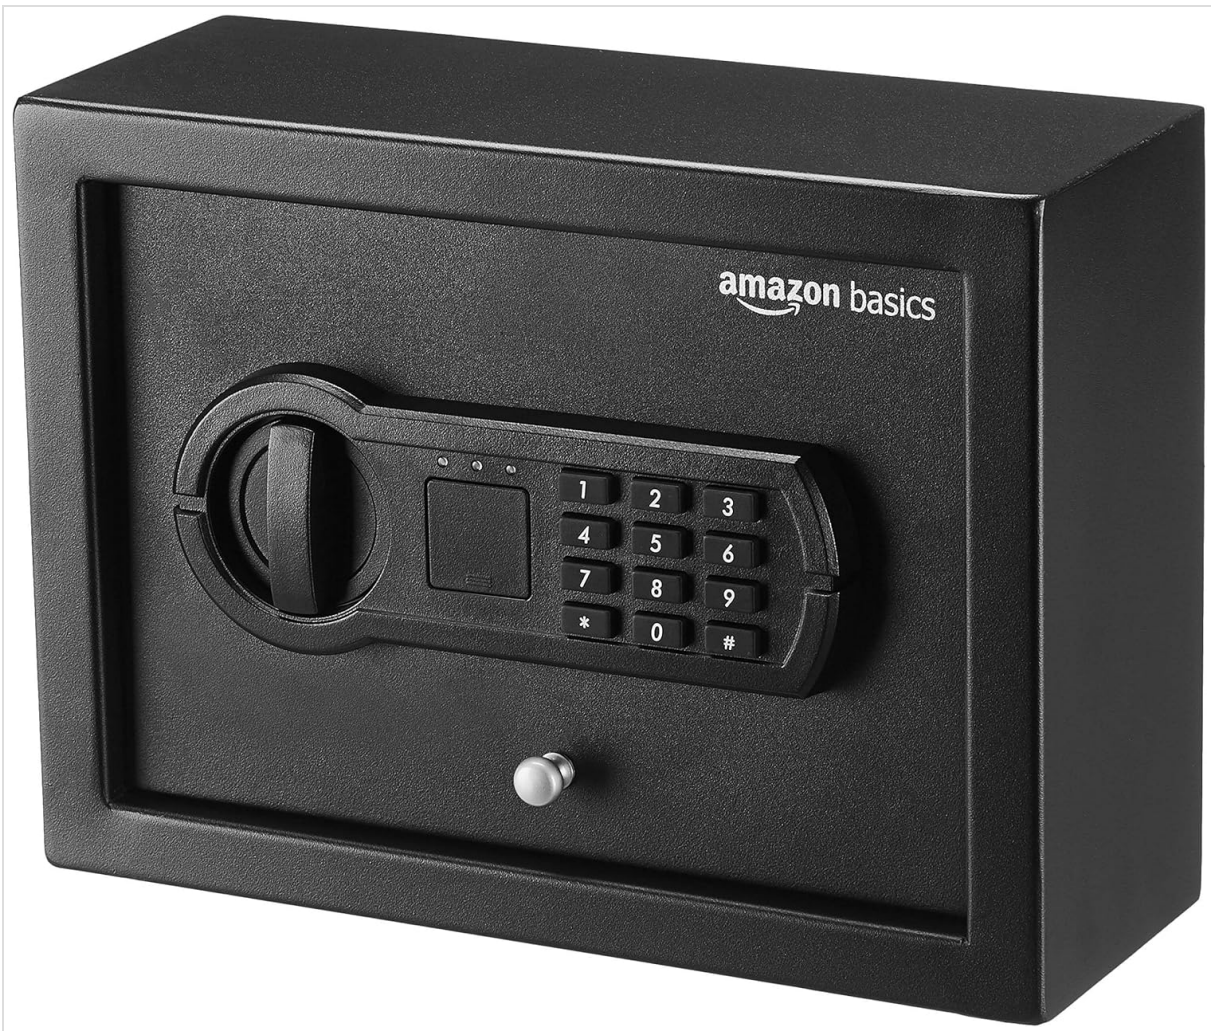


Image: Front view of the safe, highlighting the electronic keypad and locking mechanism.

## 1. Opening with Electronic Keypad

1. Enter your personal code (3 to 8 digits).
2. Press the '#' button. The green light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

## 2. Opening with Emergency Override Key

Use this method if you forget your code or if the batteries are depleted.



Image: Close-up of the keypad with an emergency key in use.

1. Gently remove the keypad cover to reveal the keyhole.
2. Insert one of the emergency override keys into the keyhole.
3. Turn the key clockwise and simultaneously turn the knob to open the safe door.
4. Once open, you can replace the batteries if needed or reset your code.

### **3. Closing and Locking the Safe**

1. Close the safe door.
2. Turn the knob counter-clockwise to engage the locking bolts. The safe is now locked.





Image: Detail of the live-door bolts, which provide security when the safe is locked.

## MAINTENANCE

---

### 1. Battery Replacement

When the batteries are low, the red light on the keypad may flash or the safe may not respond. Replace all 4 AA batteries promptly to ensure continuous operation. Follow the battery installation steps in the Setup section.

### 2. Cleaning

Wipe the safe's exterior with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish or electronic components.

## TROUBLESHOOTING

---

- **Safe does not open with code:**
  - Ensure batteries are fresh and correctly installed.
  - Verify you are entering the correct code and pressing '#' firmly.

- Try using the emergency override key.
- **Keypad is unresponsive:**
  - Replace batteries.
  - Ensure no debris is obstructing the buttons.
- **Door does not close properly:**
  - Check for any obstructions inside the safe or around the door frame.
  - Ensure the locking bolts are fully retracted before attempting to close.

## SPECIFICATIONS

 

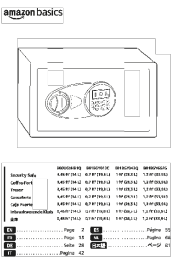 
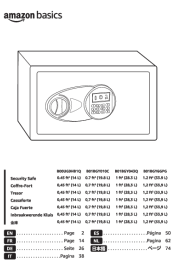 

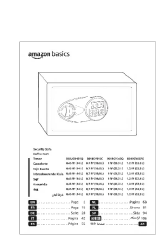 
|                               |  |
|-------------------------------|--|
| Brand                         | Amazon Basics                                    |
| Model Number                  | DS-110SAM  |
| Product Dimensions (Exterior) | 11.8"W x 8.6"D x 4.4"H (30cm x 21.9cm x 11.2cm)  |
| Interior Dimensions           | 11.7"W x 8.5"D x 1.7"H (29.7cm x 21.6cm x 4.3cm) |
| Capacity                      | 0.1 Cubic Feet (2.7 Liters)                      |
| Lock Type                     | Electronic Keypad with Emergency Key             |
| Material                      | Alloy Steel                                      |
| Color                         | Black  |
| Item Weight                   | 11.27 pounds (5.12 kg)                           |
| Batteries Required            | 4 x AA (not included)                            |

## WARRANTY INFORMATION

For information regarding the warranty for your Amazon Basics product, please refer to the documentation included with your purchase or visit the official Amazon Basics website. Warranty terms and conditions may vary.

## CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Amazon Basics safe, please contact Amazon customer support through their official website or the contact information provided with your purchase.
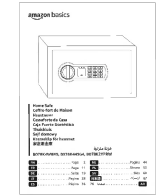
|   |   |
|---|---|
|    | <p><a href="#">Amazon Basics Home Safe User Manual</a></p> <p>Comprehensive user manual for the Amazon Basics Home Safe, detailing setup, operation, security features, and maintenance for model numbers B078K4W8N9, B078K44SG4, and B078K2YPRW.</p>   |
|    | <p><a href="#">Amazon Basics Home Safe User Guide</a></p> <p>Comprehensive guide for setting up and using your Amazon Basics Home Safe, including instructions on opening, setting passwords, master codes, and maintenance.</p>  |
|    | <p><a href="#">Amazon Basics Security Safe User Manual</a></p> <p>Comprehensive user manual for the Amazon Basics security safe, detailing setup, operation, safety, and troubleshooting for models like B00UG9HB1Q, B01BGY010C, B01BGY043Q, and B01BGY6GPG.</p>  |
|  | <p><a href="#">Amazon Basics Security Safe User Manual and Instructions</a></p> <p>Comprehensive user manual for the Amazon Basics Security Safe, covering setup, operation, safety guidelines, troubleshooting, and disposal information. Learn how to secure your valuables with this reliable home safe.</p> |
|  | <p><a href="#">Amazon Basics Electronic Keypad Entry Lever Door Lock: Safety and Use Manual</a></p> <p>Comprehensive safety and use manual for the Amazon Basics Electronic Keypad Entry Lever Door Lock, covering installation, operation, programming, troubleshooting, and specifications.</p>               |
|  | <p><a href="#">Amazon Basics Security Safe User Manual: Setup, Operation, and Maintenance Guide</a></p> <p>Comprehensive user manual for Amazon Basics security safes. Covers setup, operation, security features, troubleshooting, and maintenance. Protect your valuables with Amazon Basics.</p>             |