Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Apple /
- > Apple iPad Pro 12.9 Tablet (Model A1671) User Manual

Apple A1671

Apple iPad Pro 12.9 Tablet (Model A1671) User Manual

Model: A1671 | Brand: Apple

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Apple iPad Pro 12.9 Tablet, Model A1671. The iPad Pro features a 12.9-inch Retina display, an A10X Fusion chip, and supports Wi-Fi and cellular connectivity. It is designed for various tasks, from productivity to entertainment.



Image: Front view of the Apple iPad Pro 12.9, showcasing its large display and the iOS home screen with standard applications like FaceTime, Calendar, Photos, and Mail.

- 1. **Charge the Device:** Before initial use, connect your iPad Pro to a power source using the provided charging cable and adapter. Ensure the battery is sufficiently charged.
- 2. **Power On:** Press and hold the Power button (located on the top right edge) until the Apple logo appears.
- 3. **Initial Configuration:** Follow the on-screen instructions to select your language, region, connect to a Wi-Fi network, set up Touch ID, create a passcode, and sign in with your Apple ID.
- 4. **Cellular Setup (for Cellular models):** If your model supports cellular, insert a nano-SIM card into the SIM tray using the SIM ejector tool. Follow carrier instructions for activation.



OPERATING INSTRUCTIONS

- Basic Navigation: Use touch gestures to interact with the iPad. Tap to select, swipe to scroll, pinch to zoom.
- Home Button: Press the Home button once to return to the home screen. Double-press to open the app switcher.
- Control Center: Swipe down from the top-right corner (or up from the bottom for older iOS versions) to access quick settings like Wi-Fi, Bluetooth, and screen brightness.
- Notifications: Swipe down from the top-center of the screen to view notifications.
- App Store: Download and install applications from the App Store.
- Camera: The iPad Pro features a 12MP rear camera and a 7MP FaceTime HD front camera. Open the Camera app to capture photos and videos.

MAINTENANCE

- Cleaning: Use a soft, lint-free cloth to clean the screen and exterior. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install iOS updates to ensure optimal performance and security. Go to Settings > General > Software Update.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. For long-term storage, charge the device to about 50%.
- Storage Management: Periodically review and delete unnecessary files or apps to free up storage space.





Image: The back of the Apple iPad Pro 12.9, featuring the iconic Apple logo and the rear camera lens.

TROUBLESHOOTING

- **Device Unresponsive:** If the iPad is unresponsive, perform a force restart. Press and hold both the Home button and the Top (Sleep/Wake) button simultaneously until the Apple logo appears.
- Wi-Fi Connectivity Issues: Ensure Wi-Fi is enabled in Control Center or Settings. Try restarting your Wi-Fi router. If issues persist, reset network settings (Settings > General > Transfer or Reset iPad > Reset > Reset Network Settings).
- **Battery Draining Quickly:** Check battery usage in Settings > Battery to identify apps consuming significant power. Reduce screen brightness or disable background app refresh for less critical apps.
- Apps Crashing: Ensure apps are updated to their latest versions. If an app continues to crash, try deleting and reinstalling it.

SPECIFICATIONS

Model Number	A1671
Display	12.9-inch Retina Display, 2732x2048 Resolution (264 ppi), 120Hz Refresh Rate, True Tone
Processor	A10X Fusion chip with 64-bit architecture
Storage	256 GB
RAM	4 GB
Cameras	Rear: 12MP iSight Camera with 4K HD video; Front: 7MP FaceTime HD Camera
Wireless Connectivity	802.11ac Wi-Fi with MIMO, Bluetooth 4.2, LTE support (for Cellular models)
Operating System	iOS 10 (upgradable)
Battery Life	Up to 10 hours (9 hours with cellular data network)
Dimensions	15.5 x 12.5 x 3.5 inches
Weight	1 pound

WARRANTY AND SUPPORT

This product, if purchased as renewed, typically comes with a minimum 90-day supplier-backed warranty. For specific warranty details, please refer to your purchase documentation or contact the seller directly.

For further assistance, visit the official Apple Support website or contact Apple customer service. You can find detailed support resources, FAQs, and contact information at support.apple.com.

© 2023 Apple Inc. All rights reserved. iPad Pro is a trademark of Apple Inc.

Related Documents - A1671

iPad 使用手册 BRN 657 [260 年 9. 月]	iPad (iOS 7) iPad iPad iOS 7 Siri App Store iCloud
THE LIBRARY THE PLANTS From Control of the Contro	<u>iPad Basics: A Comprehensive User Guide</u> Learn the fundamentals of using your iPad with this comprehensive guide covering physical features, iOS navigation, Wi-Fi, Safari, Camera, Mail, Apps, and more. Ideal for new iPad users.
iPad User Guide te Oblikatione	Apple iPad User Guide: Mastering iOS 6 Features and Functionality Comprehensive user guide for Apple iPad devices running iOS 6. Learn to set up, use features like Siri, Camera, Mail, Safari, and manage settings. Includes tips for accessibility and troubleshooting.
Go to the complete Again if had user manual form the part of the complete and the complete	Apple iPad User Manual and Information Coolblue Explore the complete user manual for Apple iPads, covering setup, features like multitasking and Apple Pencil, and privacy settings. Information provided by Coolblue.
iPad User Guide to 05.845/stone	iPad User Guide for iOS 8.4 Software Comprehensive user guide for Apple iPad devices running iOS 8.4 software. Learn how to set up, use, and customize your iPad, including features like Siri, iCloud, FaceTime, Safari, and various apps. Covers troubleshooting and safety information.



iPad User Guide: Everything You Need to Know

Comprehensive user guide for iPad, covering features like multitasking, file management, notes, Apple Pay, FaceTime, iCloud, and basic setup for iOS 11.3.