

[Manuals.plus](#) /

› [Spares2go](#) /

› Spares2go Control Knob Switch for Hotpoint-Ariston Washing Machine/Tumble Dryer (Model 08-HUG-556) Instruction Manual

Spares2go 08-HUG-556

Spares2go Control Knob Switch Instruction Manual

MODEL: 08-HUG-556

Introduction

This manual provides essential information for the installation, operation, and maintenance of your Spares2go Control Knob Switch, Model 08-HUG-556. This replacement part is designed for specific Hotpoint-Ariston washing machines and tumble dryers. Please read these instructions carefully before proceeding with installation or use to ensure proper function and safety.

Safety Information

- **Always disconnect the appliance from the main power supply** before attempting any installation, removal, or maintenance. Failure to do so can result in electric shock or serious injury.
- If you are unsure about any step, it is recommended to seek assistance from **a qualified technician**.
- Wear appropriate **personal protective equipment**, such as gloves, during installation.
- Ensure the replacement part is compatible with your appliance model before installation.
- Keep small parts away from children.

Product Overview

The Spares2go Control Knob Switch (Model 08-HUG-556) is a white replacement timer knob designed to fit various Hotpoint-Ariston washing machines and tumble dryers. It allows users to select different programs and settings on their appliance.



Image: The white control knob switch, displaying its internal mechanism and the central shaft connection point. The outer ring is white, and the inner components are light grey and black, designed for precise control of appliance functions.

Compatibility

This control knob is compatible with a wide range of Hotpoint-Ariston washing machine and tumble dryer models. Please verify your appliance's model number against the following list to ensure compatibility:

MK 5050 S CIS, MVB 91019 S CIS, MVS B 6125 S CIS, MVS B 7105 S CIS, MVS B 7105 X CIS, MVS B 8010 S CIS, MVSC 6105 S CIS, WMF 7080B CIS, WMF 720B CIS, WMF 722 EU, WMF 722B IT, WMF 722BSC EU, WMF 802 IT, WMG 1022B EU, WMG 1043B FR, WMG 1063BX FR, WMG 602 EU, WMG 622B EU, WMG 72 PL, WMG 8237 BS EU, WMG 823B EU, WMG 9018B CIS, WMG 9019B CIS, WMG 922B EU, WMG 962B FR, WML 622 IT, WML 708 CIS, WML 7080 CIS, WML 803B EU, WML 822 B FR, WMSF 602 EU, WMSF 6038 B CIS, WMSF 603B CIS, WMSF 605B CIS, WMSG 600B CIS, WMSG 605B CIS, WMSG 608B CIS, WMSG 622B EU, WMSG 7103 B CIS, WMSG 7105 B CIS, WMSG 7105B UZ, WMSG 7106 B CIS, WMSG 7125 B CIS, WMSG 722BX IT, WMSG 8018B CIS, WMSG 8019B CIS, WMSBL 601 IT, WMUG 5050B UZ, WMUL 5050 CIS.

Installation Instructions

Follow these steps to install the replacement control knob:

1. **Power Disconnection:** Ensure the washing machine or tumble dryer is completely disconnected from the electrical power supply before starting.
2. **Remove Old Knob (if applicable):** Gently pull the old control knob straight off the shaft. If it is stuck, a small amount of force or a prying tool may be needed, but be careful not to damage the appliance panel.
3. **Align New Knob:** Position the new Spares2go control knob over the control shaft. Ensure the shaft and the knob's internal fitting are correctly aligned.
4. **Secure Knob:** Press the new knob firmly onto the shaft until it is securely seated. It should fit snugly and not wobble.
5. **Reconnect Power:** Once the knob is securely installed, reconnect the appliance to the main power supply.
6. **Test Functionality:** Turn the knob to test its movement and ensure it engages correctly with the appliance's internal mechanism.

Operating Instructions

To operate your appliance with the new control knob, simply turn the knob to select the desired program or setting. The knob should turn smoothly and click into place for each selection. Refer to your appliance's main user manual for specific program details and operational procedures.

Maintenance

To maintain the appearance and functionality of your control knob:

- Wipe the knob periodically with a soft, damp cloth.
- Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or material.
- Ensure no liquids seep into the control panel around the knob.

Troubleshooting

If you encounter issues with your control knob, consider the following:

- **Knob is loose or falls off:** Ensure it was pressed firmly onto the shaft during installation. If the shaft itself is damaged, the appliance may require professional repair.
- **Knob does not turn or select programs:** Check if there is any obstruction. If the internal mechanism of the appliance is faulty, the knob alone cannot resolve the issue, and professional service may be needed.

For persistent problems, consult a qualified appliance technician.

Specifications

Brand	Spares2go
Model Number	08-HUG-556
Color	White
Compatibility	Hotpoint-Ariston Washing Machines / Tumble Dryers

Support

For further assistance, technical support, or inquiries regarding this product, please contact Spares2go customer service or a certified appliance repair professional. Always refer to your appliance's original manufacturer manual for detailed service information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078XCZDR6>

More documents and user manuals: <https://manuals.plus/>