

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beautyrest](#) /
- › [Beautyrest Foot Pocket Electric Heated Throw Manual - Model BR54-0857](#)

Beautyrest BR54-0857

Beautyrest Foot Pocket Electric Heated Throw Manual

MODEL: BR54-0857

Brand: Beautyrest

INTRODUCTION

Relax in the warmth and comfort of the Beautyrest plush throw. This heated throw features a foot pocket to provide added warmth where you need it most. It is engineered to emit virtually no electromagnetic field emissions. With 3 heat settings, you can easily find your preferred temperature. The integrated 2-hour auto shut-off timer enhances safety and prevents overuse. This machine washable heated throw is designed to keep you warm and cozy.



Image: Woman using the Beautyrest heated throw with the foot pocket feature.

IMPORTANT SAFEGUARDS AND WARNINGS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

- Use only with a 110-120 VAC 60 Hz wall outlet as provided in the USA and Canada. Do not use with power supplied by an inverter or generator (e.g., in an RV) or a converter outside of the USA and Canada.
- Do not fold the product when in actual use, as this may cause excessive heating.
- Do not use on an infant, a helpless person, or a person insensitive to heat, or a person with poor blood circulation.
- Do not route electrical cords between the mattress and box springs. Ensure cords are not pinched.
- Do not dry clean this product. Cleaning solvents may damage the insulation of the heating element.
- Do not tuck in the wired area or the plug/supply cord.
- Do not tuck the blanket or supply cord into a sofa or other furniture. All portions of the blanket and controller should be visible at all times.
- Do not use this product with dogs, cats, or any other pets. Chewing or scratching can damage the electrical components and void the warranty.
- Do not use pins, as they may damage electric wiring.
- This product is not intended for hotel, motel, or other institutional use.
- Wrapping cords tightly around the controller may damage the cord. Loop cords loosely when storing.
- If improper operation is observed, discontinue use IMMEDIATELY and consult the manufacturer or dealer.
- This item must be washed before returning for any inspection after use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- The product is 100% UL certified for maximum safety.
- Features a 2-hour auto-off for added safety.

SETUP INSTRUCTIONS

1. Never use a control unit with this Warming Throw other than the one supplied or approved by the manufacturer.
2. Ensure the controller's main power cord is disconnected from the wall outlet before connecting or disconnecting the throw from its controller.
3. Plug the 4-prong plug from the controller into the module at the bottom of the Warming Throw. Ensure the plastic lock clicks into place. Do NOT force the plug; it is designed to fit in only one direction. If it does not fit, reverse the plug. To disconnect, press the button on this module.
4. Plug the Warming Throw controller's main power cord into a standard 110-120 volt 60 Hz wall outlet.



Image: The heated throw in use with the controller.

OPERATING INSTRUCTIONS

1. Press the 'ON' switch on the controller to turn on the Warming Throw. The Low heat setting indicator will illuminate, indicating the current heat setting. The controller always starts in the Low setting.
2. To adjust the heat setting, press the button on the right side of the indicator LEDs. The heat settings will cycle through Low (L), Medium (M), High (H), and then back to Low. Select your desired comfort level.
3. The throw features a 2-hour auto shut-off timer for safety. After 2 hours of continuous use, the throw will automatically turn off.
4. To restart after an auto shut-off or power failure, press the 'On' button and then set the controller to your desired heat setting.
5. Always turn the Throw controller OFF when not being used.



Image: Detailed view of the controller and its features.

CARE & CLEANING

The care and cleaning of your warming product is easy and safe as long as you follow these steps. Always disconnect the power cord and the warming product connection cord at the warming product end before washing. Carefully follow all washing instructions or your warming product may shrink.

- DO NOT dry clean your warming product. Dry cleaning solvents may damage the warming product.
- DO NOT use bleach or cleaning fluids.
- DO NOT use a wringer.
- DO NOT iron the warming product.
- DO NOT use mothballs or sprays of any kind.
- DO NOT turn the warming product on until it is completely dry.

Machine Washing:

Wash separately in an automatic washer using slow agitation and normal spin speed:

1. Fill washer with cold or lukewarm water. Add a minimum amount of all-purpose detergent.

2. Agitate to dissolve before adding the blanket.
3. Measure the bedding before washing. Add the blanket and soak for 5 minutes.
4. Agitate for 2 minutes and spin.
5. With the blanket still in the machine, fill for a cool rinse, agitate for 1 minute and spin.

Machine Drying:

1. Preheat the dryer on the low temperature setting for 2 minutes.
2. Dry in an automatic dryer on medium to low temperature and tumble dry for 5 minutes only, or air dry.
3. Remove damp bedding from the dryer, block to its original size, and drape to finish drying.
4. DO NOT USE CLOTHESPINS.
5. DO NOT IRON THIS BLANKET.

Hand Washing:

1. Presoak the warming product for 15 minutes in mild soap and lukewarm water.
2. Gently squeeze the soapsuds through a few times.
3. Rinse in fresh, cold, or lukewarm water.

Hand Drying:

1. Gently stretch/block (re-shape) the blanket back to its original size.
2. Air dry by draping over a clothesline or hanging over a shower rod.
3. DO NOT USE CLOTHESPINS.

TROUBLESHOOTING

If an ERROR is detected (Heat setting LED indicators flash and the heating element does not turn on), follow these steps:

1. Turn off the controller power switch.
2. Unplug the controller power cord from the 120 VAC wall outlet.
3. Be certain that the cord from the controller to the throw is securely connected at the throw module.
4. Plug the controller power cord back into the 120 VAC wall outlet.
5. Turn the power back on to see if the error condition still exists.
6. If the controller display still indicates an error, note which LED indicators are flashing. Turn the controller off and unplug the power cord from the 120 VAC wall outlet.

If the error condition continues, contact Customer Service at 1-866-496-8852 for further technical assistance.

SPECIFICATIONS

Feature	Detail
Model Name	Foot Pocket

Model Number	BR54-0857
Dimensions	50 x 62 inches
Color	Ivory
Material	Plush, Polyester
Power Input	110-120V AC, 60Hz (Max 160W)
Heat Settings	3 (Low, Medium, High)
Auto Shut-off	2 hours
EMF Emissions	Virtually none
Certifications	UL Certified, ETL Intertek Testing Service Certified
Item Weight	3.76 pounds

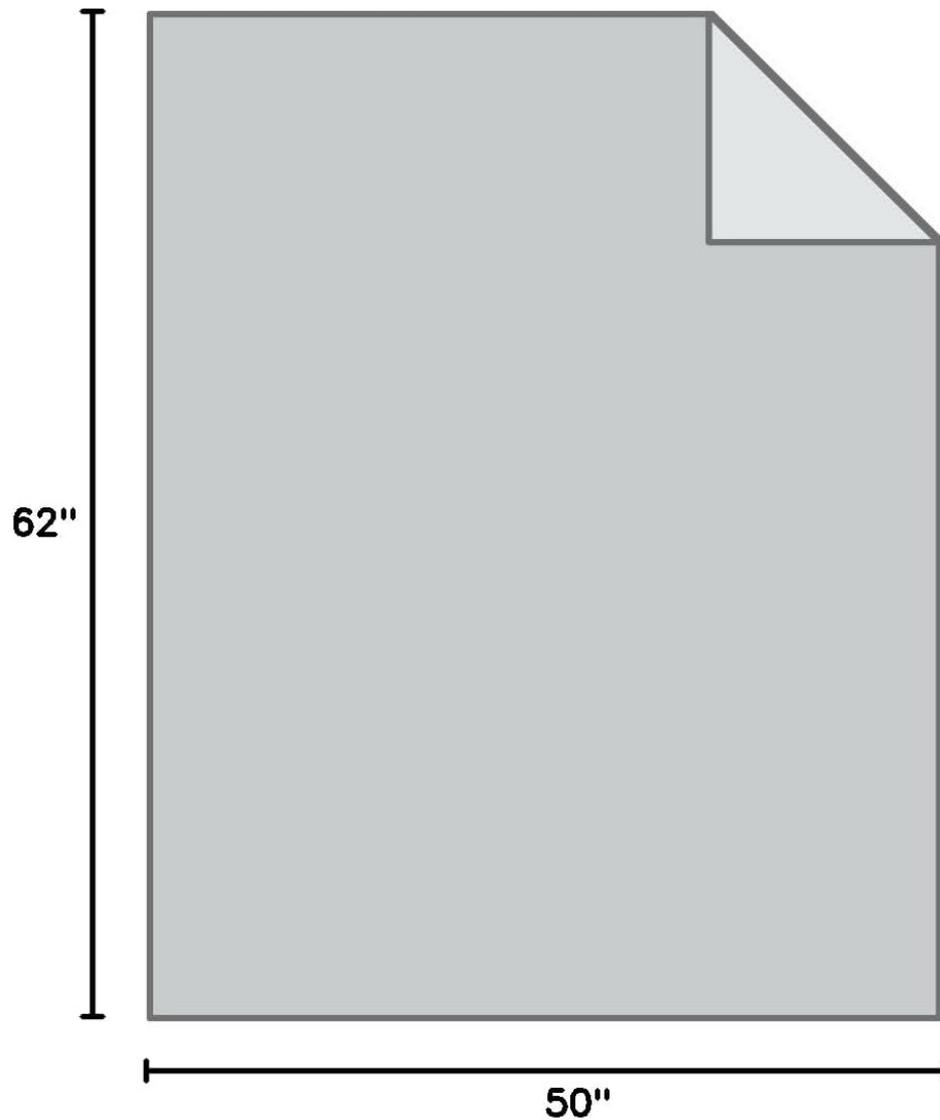


Illustration only - product shape might vary.

Image: Product dimensions diagram.

WARRANTY & SUPPORT

This Beautyrest heated throw is covered by a **5 Year Limited Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty service, technical assistance, or any questions regarding your product, please contact Customer Service:

- **Toll-Free Number:** 1-866-496-8852
- **Manufacturer:** E&E Co. Ltd.
- **Address:** 46875 Northport Loop East, Fremont, CA 94538

DO NOT return this product to the place of purchase for warranty claims. Please contact the manufacturer directly.