

[Manuals.plus](#) /
› [UPBRIGHT](#) /
› UpBright 12V AC Adapter Instruction Manual for Invisible Fence Transmitters ICT-700, ICT-801, ICT-802, ICT-725, ICT-750, ICT100, ICT 100A

UPBRIGHT KA12A120075035U, 04-100-0020-01, AA-1283

UpBright 12V AC Adapter Instruction Manual

Compatible with Invisible Fence Transmitters ICT-700, ICT-801, ICT-802, ICT-725, ICT-750, ICT100, ICT 100A

1. PRODUCT OVERVIEW

This UpBright 12V AC adapter is designed to provide power to various Invisible Fence transmitter models. It ensures a stable and compatible power source for the specified devices.



Figure 1: UpBright 12V AC Adapter. This image shows the compact black power adapter with its attached power cord, neatly coiled.

2. SETUP INSTRUCTIONS

1. **Verify Compatibility:** Ensure your Invisible Fence transmitter model (e.g., ICT-700, ICT-801, ICT-802, ICT-725, ICT-750, ICT100, ICT 100A) is listed as compatible with this adapter.
2. **Connect the Adapter:** Insert the barrel connector end of the AC adapter into the power input port of your Invisible Fence transmitter. Ensure a snug fit.


UpBright AC Adapter Power Supply Compatible with:



Figure 2: Barrel Connector. This image displays the cylindrical barrel connector, which plugs into the device's power port.

3. **Plug into Power Outlet:** Insert the adapter's plug into a standard 110V-120VAC 60Hz wall outlet. For international use, ensure the correct outlet adapter is used if provided.

Come With A Suitable Outlet Adapter (Only One) to Fit
Your Country/Area For International Order

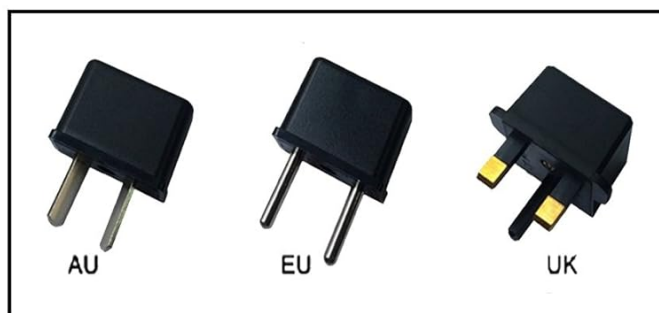

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Figure 3: International Outlet Adapters and Warranty. This image shows examples of AU, EU, and UK plug adapters, alongside a document resembling a product warranty certificate.

4. **Power On:** Once connected, your Invisible Fence transmitter should receive power. Refer to your transmitter's manual for specific power-on procedures.

3. OPERATING INSTRUCTIONS

The UpBright 12V AC adapter operates as a direct power source for your compatible Invisible Fence transmitter. Once properly connected to both the transmitter and a power outlet, it continuously supplies the necessary electrical current.

- No user interaction is required for the adapter's operation beyond initial setup.
- Ensure the adapter is always plugged into a functional power outlet to maintain continuous operation of your transmitter.

4. MAINTENANCE

To ensure the longevity and safe operation of your AC adapter, follow these maintenance guidelines:

- **Keep Dry:** Protect the adapter from moisture, water, and high humidity. Do not operate it with wet hands.
- **Temperature:** Avoid exposing the adapter to extreme temperatures, direct sunlight, or heat sources.
- **Cleaning:** Disconnect the adapter from the power outlet before cleaning. Use a dry, soft cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Cable Care:** Do not bend, twist, or pull the power cord excessively. Avoid placing heavy objects on the cord.
- **Storage:** When not in use for extended periods, store the adapter in a cool, dry place.

5. TROUBLESHOOTING

If you encounter issues with your UpBright AC adapter, consider the following:

- **No Power to Transmitter:**
 - Check if the adapter is securely plugged into both the wall outlet and the transmitter.
 - Verify that the wall outlet is functional by testing it with another device.
 - Ensure the adapter's cord is not damaged or frayed.
- **Intermittent Power:**
 - Ensure all connections are firm and stable.
 - Avoid placing the adapter in areas where it might be easily jostled or disconnected.
- **Adapter Feels Hot:**
 - It is normal for power adapters to feel warm during operation. However, if it is excessively hot to the touch or emitting a burning smell, immediately disconnect it from the power source and discontinue use.
 - Ensure adequate ventilation around the adapter.

If troubleshooting steps do not resolve the issue, refer to the Warranty and Support section.

6. SPECIFICATIONS

Specification	Value
Input Voltage	110V-120VAC, 60Hz (Compatible with 220V-240VAC 50Hz with appropriate plug adapter)
Output Voltage	12 Volts AC (12VAC)
Output Current	750mA - 1000mA (0.75A - 1A)

Specification	Value
Connector Type	Barrel Connector
Compatible Devices	Invisible Fence Transmitters (ICT-700, ICT-801, ICT-802, ICT-725, ICT-750, ICT100, ICT 100A)
Model Numbers	KA12A120075035U, 04-100-0020-01, AA-1283

7. WARRANTY AND SUPPORT

This UpBright product comes with a limited warranty. Please retain your proof of purchase for warranty claims.

- **Refund Policy:** UpBright offers a 30-day refund period from the date of purchase.
- **Exchange Policy:** A 24-month exchange policy is provided for defective units.
- **Customer Support:** For technical assistance, warranty claims, or further inquiries, please contact UpBright customer service through their official channels or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B078XPDZMZ>

More documents and user manuals: <https://manuals.plus/>