

- [Manuals.plus](#) /
- › [PayLessHere](#) /
 - › PayLessHere Hose Reel Cart Instruction Manual (Model: Hose Reel Hold Up To 300 Ft)

PayLessHere Hose Reel Hold Up To 300 Ft

PayLessHere Hose Reel Cart Instruction Manual

Model: Hose Reel Hold Up To 300 Ft

INTRODUCTION

Thank you for choosing the PayLessHere Hose Reel Cart. This heavy-duty metal cart is designed to simplify your garden watering tasks by providing convenient storage and easy mobility for your garden hose. With a capacity to hold up to 300 feet of hose, a functional design including four sturdy wheels, a non-slip handle, and a storage basket, this cart aims to enhance your gardening experience. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.



Image: Woman watering garden with the PayLessHere Hose Reel Cart. This image illustrates the product in use, demonstrating its role in garden watering tasks.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury or damage.

- Ensure all connections are tight before turning on water to prevent leaks and potential water damage.
- Do not exceed the recommended hose capacity of 300 feet.
- Keep children and pets away from the hose reel cart during operation.
- Always drain water from the hose and reel before storing in freezing temperatures to prevent damage.
- Use caution when moving the cart on uneven terrain to prevent tipping.
- Wear appropriate protective gear, such as gloves, during assembly and maintenance.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Hose Reel Cart Frame (main body, handle, base)
- Hose Reel Drum
- Four Wheels
- Crank Handle
- Storage Basket
- Inlet Hose (short connection hose)
- Assembly Hardware (bolts, nuts, washers)
- Instruction Manual

SETUP

Follow these steps to assemble your PayLessHere Hose Reel Cart.

1. **Attach the Wheels:** Securely attach the four wheels to the cart's base using the provided bolts and nuts. Ensure they are tightened to prevent wobbling.
2. **Assemble the Frame:** Connect the handle assembly to the main cart frame. Use the appropriate hardware to ensure a stable connection.
3. **Install the Hose Reel Drum:** Insert the hose reel drum into its designated position on the cart frame. Ensure it rotates freely.
4. **Attach the Crank Handle:** Secure the crank handle to the side of the hose reel drum. This will be used for winding the hose.
5. **Mount the Storage Basket:** Attach the storage basket to the handle section of the cart. This provides convenient storage for gardening tools.
6. **Connect the Inlet Hose:** Attach the short inlet hose to the cart's internal water connection. Ensure a tight, leak-free connection. The other end of this hose will connect to your water source.
7. **Attach Your Garden Hose:** Connect your garden hose to the main reel connection. Wind the hose onto the reel, ensuring it is evenly distributed.

SOLID STEEL STRUCTURE

Easily store and reel in longer , heavier hoses



Brass Fitting Connector

No water leakage

Image: Solid steel structure and brass fitting connector. This image highlights the durable construction and leak-resistant brass connection points, crucial for proper setup.

OPERATING INSTRUCTIONS

Using your hose reel cart is straightforward. Follow these steps for efficient watering.

1. **Connect to Water Source:** Attach the inlet hose (the short hose connected to the cart) to your outdoor faucet. Ensure the connection is secure.
2. **Unwind the Hose:** Pull the desired length of your garden hose from the reel. The cart's design allows for smooth unwinding.
3. **Watering:** Turn on the water at your faucet and begin watering.
4. **Rewind the Hose:** After use, turn off the water at the faucet. Hold the cart steady and use the crank handle to slowly rewind the hose onto the reel. Guide the hose evenly across the drum to prevent tangles and ensure proper storage.
5. **Store the Cart:** Once the hose is fully rewound, you can easily move the cart to your desired storage location using

its four wheels and comfortable handle.

QUICK ROLL UP

No more dragging heavy hoses across your yard



Labor-saving crank

Hundreds of trials make the length of the crank handle effort-saving and artistic

Image: Man using the labor-saving crank. This image demonstrates the ease of winding the hose back onto the reel using the ergonomic crank handle.

CONQUER ANY TERRAIN

Stay in control - glide with two resilient wheels



Stabilize



Stable Smooth



Shock Absorption

Image: Durable wheels for various terrains. This image showcases the robust wheels that provide stability and smooth movement across different outdoor surfaces.

MAINTENANCE

Regular maintenance will extend the life of your hose reel cart.

- **Cleaning:** Periodically clean the cart with a damp cloth to remove dirt and debris. Avoid harsh chemicals that may damage the finish.
- **Lubrication:** Apply a small amount of silicone lubricant to the moving parts of the reel mechanism and wheel axles annually to ensure smooth operation.
- **Connection Check:** Regularly inspect all hose connections and fittings for wear or leaks. Tighten or replace as necessary.
- **Winter Storage:** Before freezing temperatures, completely drain all water from the hose and the reel's internal plumbing. Store the cart in a dry, protected area to prevent damage from ice expansion.
- **Tire Pressure:** Check and maintain appropriate air pressure in the pneumatic tires (if applicable) for optimal

mobility.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Water leakage from connections	Loose fittings, worn washers, damaged hose.	Tighten all connections. Replace worn rubber washers. Inspect hose for damage and replace if necessary. Ensure brass fittings are properly seated.
Difficulty winding/unwinding hose	Hose tangled or kinked, reel mechanism stiff, excessive hose length.	Ensure hose is not tangled before winding. Lubricate reel mechanism. Reduce hose length if it exceeds capacity.
Cart is unstable or tips easily	Uneven ground, heavy hose not evenly distributed, loose wheel bolts.	Operate on level ground. Distribute hose weight evenly on the reel. Tighten all wheel bolts.
No water flow	Faucet off, hose kinked, internal blockage.	Check if the faucet is fully open. Straighten any kinks in the hose. Disconnect hoses and check for blockages in fittings or the reel's internal pipe.

SPECIFICATIONS

Feature	Detail
Brand	PayLessHere
Model Number	Hose Reel Hold Up To 300 Ft
Material	Metal
Color	Green
Item Dimensions (L x W x H)	37 x 24 x 42 inches
Item Weight	33 Pounds
Hose Capacity	Up to 300 feet
Wheels	4, pneumatic
Operation Mode	Manual

PRODUCT PARAMETER

Unit(inch)



Image: Product dimensions. This diagram provides key measurements (length, width, height) of the assembled hose reel cart, useful for planning storage space.

WARRANTY INFORMATION

This PayLessHere Hose Reel Cart is covered by a limited manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. For specific details regarding warranty terms, conditions, and duration, refer to the warranty card included with your product or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, operation, or troubleshooting, or need to make a warranty claim, please contact PayLessHere customer support.

Website: [Visit the PayLessHere Brand Store on Amazon](#)

Email: support@paylesshere.com (placeholder)

Phone: 1-800-XXX-XXXX (placeholder)

© 2026 PayLessHere. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078XR7LMD>

More documents and user manuals: <https://manuals.plus/>