

[Manuals.plus](#) /

› [Pro Breeze](#) /

› Pro Breeze 1m Oscillating Tower Fan PB-F04W User Manual

Pro Breeze PB-F04W

Pro Breeze 1m Oscillating Tower Fan PB-F04W User Manual

Model: PB-F04W | Brand: Pro Breeze

INTRODUCTION

Thank you for choosing the Pro Breeze 1m Oscillating Tower Fan. This powerful 45W fan is designed to provide efficient cooling for your home or office with its 3 speed settings, 7-hour timer, and remote control. Please read this manual carefully before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the fan, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air openings or operate with any openings blocked. Keep free of dust, lint, hair, and anything that may reduce airflow.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always place the fan on a stable, flat, and dry surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

- Pro Breeze 1m Oscillating Tower Fan
- Remote Control
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Pro Breeze Tower Fan.

40" Tower Fan

This high-powered Tower Fan from Pro Breeze delivers ultimate cooling in seconds.



3 Speed
Operation



90°
Oscillation



15 Hour
Timer



Remote
Control




Powerful
45W motor



4 Operating
Modes

30 cm

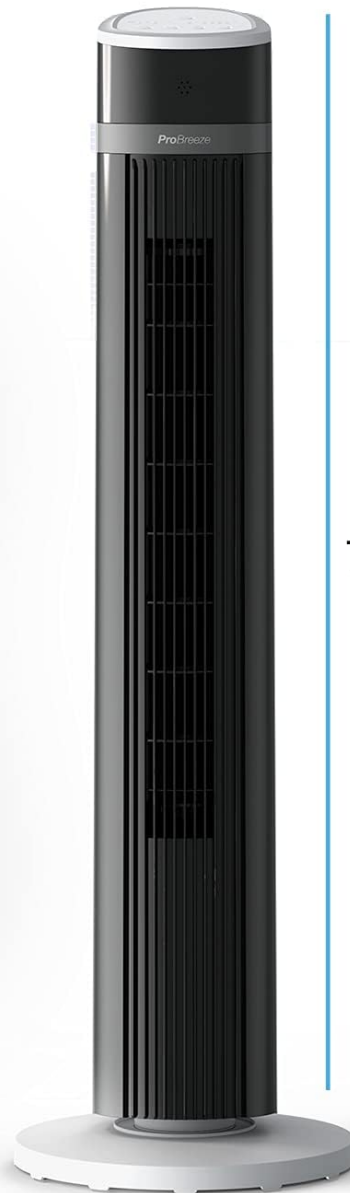

100 cm

Image: Pro Breeze 1m Tower Fan showing its overall design, dimensions (100cm height, 30cm base), and key features including 3 speed operation, 90-degree oscillation, 15-hour timer, remote control, powerful 45W motor, and 4 operating modes.



Image: A tall, black tower fan with a sleek cylindrical design, featuring a white base and a vertical grille for air circulation. The top panel is white with control buttons.

SETUP

1. **Unpack:** Carefully remove the tower fan and all accessories from the packaging.
2. **Base Assembly (if required):** If the base is separate, align the base parts and secure them according to the instructions provided in the box. Ensure the power cord passes through the designated channel in the base.
3. **Placement:** Place the fan on a firm, level surface, ensuring there is at least 30cm of clear space around the fan for optimal airflow.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

The fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel & Remote Control

Simple Controls

The included remote control and easy-to-use control panel allow you to effortlessly control all the operating modes, timers and speed settings.



Image: A close-up view of the fan's top control panel, featuring power, speed, mode, oscillation, and timer buttons. A white remote control is shown next to it, mirroring the fan's functions.



Image: Top view of the tower fan's digital control panel, showing various buttons and LED indicators for fan speed, timer, and oscillation settings.

- **Power Button ():** Press to turn the fan ON or OFF.
- **Speed Button (≡):** Press repeatedly to cycle through 3 fan speeds: Low, Medium, High.
- **Oscillation Button (⌵):** Press to activate or deactivate the oscillation function, providing a wide 80-90 degree air distribution.
- **Timer Button ():** Press to set the automatic shut-off timer. The timer can be set in 1-hour increments up to 7 hours.
- **Mode Button (M):** Press to cycle through different operating modes (e.g., Normal, Natural, Sleep). *Note: The product description mentions 4 operating modes, but specific details are not provided. Refer to the fan's display for active mode.*

Fan Speeds

The fan offers three distinct speed settings to suit your cooling needs.

3 Fan Speeds

3 cooling fan speeds including low, medium and high power will keep you cool in all temperatures.



- 1 Low
- 2 Medium
- 3 High

Image: A visual representation of the three fan speed settings (1: Low, 2: Medium, 3: High) with corresponding indicators on the fan's control panel.

- **Low:** For gentle air circulation.
- **Medium:** For moderate cooling.
- **High:** For maximum cooling power.

Oscillation Function

Activate oscillation to distribute cool air across a wider area.



90° Oscillation

Utilise the wide 90 degrees of oscillation to blow a cool, high-powered breeze across a large area of your room.

Image: An overhead view of the tower fan demonstrating its 90-degree oscillation, with blue air currents spreading across a room where a person is relaxing on a sofa.

- Press the oscillation button to start the fan rotating from side to side.
- Press the button again to stop oscillation at the desired direction.

Timer Function

Set the fan to automatically turn off after a specified period.

Built-in 15 Hour Timer

The built-in 15 hour timer automatically turns off and on around your needs and control. Perfect for overnight use.



Image: A close-up of the fan's control panel with a clock-like graphic indicating the timer function. The timer settings (1h, 2h, 4h, 8h) are visible on the panel. Please note, the product specifications indicate a 7-hour timer.

- Press the timer button repeatedly to select the desired operating time (1-7 hours).
- The corresponding indicator light will illuminate.
- The fan will automatically turn off once the set time has elapsed.

MAINTENANCE

Cleaning

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners or solvents as this may damage the surface.
- Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and outlet grilles.

- Ensure the fan is completely dry before plugging it back in.

Storage

- If the fan will not be used for an extended period, unplug it and clean it thoroughly.
- Store the fan in its original packaging or a suitable box in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the power button on the control panel or remote.
Weak airflow.	Fan speed set too low. Air inlets/outlets blocked.	Increase the fan speed. Ensure grilles are clear of dust and obstructions.
Fan is noisy.	Fan not on a level surface. Foreign object inside.	Place the fan on a stable, flat surface. Unplug and check for any obstructions inside the grilles.
Remote control not working.	Batteries are dead or incorrectly inserted. Remote is too far or not aimed at the fan.	Replace batteries with new ones, ensuring correct polarity. Move closer to the fan and aim the remote directly at the control panel.

SPECIFICATIONS

Brand	Pro Breeze
Model Number	PB-F04W
Power Source	Corded Electric
Wattage	45 Watts
Voltage	220 Volts
Number of Speeds	3
Oscillation	Yes (80-90 degrees)
Timer	Up to 7 hours (in 1-hour increments)
Noise Level	48 Decibels
Product Dimensions (D x W x H)	30D x 30W x 100H centimeters
Item Weight	3.7 Kilograms
Included Components	Remote Control

WARRANTY AND SUPPORT

Pro Breeze products are manufactured to the highest standards. For warranty information or support, please refer to the warranty

card included with your purchase or visit the official Pro Breeze website. Please retain your proof of purchase.