



Manuals.plus /

- › BLACK+DECKER /
- › BLACK+DECKER BXCM1201IN 12-Cup Drip Coffee Maker Instruction Manual

## BLACK+DECKER BXCM1201IN

# BLACK+DECKER BXCM1201IN 12-Cup Drip Coffee Maker Instruction Manual

Model: BXCM1201IN

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your BLACK+DECKER BXCM1201IN 12-Cup Drip Coffee Maker. Please read this manual thoroughly before first use and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

### 3. PRODUCT OVERVIEW AND COMPONENTS

---

The BLACK+DECKER BXCM1201IN Drip Coffee Maker is designed for convenient coffee brewing, featuring a 1.5L capacity and a 900W motor. Key components and features include:

- **1.5L Glass Carafe:** High-temperature resistant carafe with a water level indicator, capable of brewing up to 12 cups of coffee.
- **Permanent Nylon Filter:** Reusable filter for ease of use and reduced waste.
- **Anti-Drip Feature:** Prevents dripping when the carafe is removed during brewing.
- **Auto Keep-Warm Function:** Maintains coffee temperature for up to 2 hours after brewing.
- **Digital Display with 4 Functions:** Allows control over the brewing process, including programming.
- **Removable Water Tank:** Facilitates easy filling and cleaning.
- **Anti-Slip Feet:** Ensures stability during operation.



The BLACK+DECKER BXCM1201IN Drip Coffee Maker, showcasing its sleek black design and glass carafe.



Detailed view of the 1.5L glass carafe, featuring clear measurement markings for precise brewing.



1.5L Glass Carafe

The reusable permanent nylon filter, designed for efficient coffee filtration.



'Keep Warm' Function

The control panel with its digital display and 'Keep Warm' function indicator.



The anti-slip feet located at the base of the coffee maker, providing stability.

## 4. SETUP AND FIRST USE

---

### Before First Use:

1. Unpack the coffee maker and remove all packaging materials.
2. Wash the carafe, filter basket, and permanent filter in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a soft, damp cloth.
4. To clean the internal components, run two full cycles with only water (no coffee grounds). Fill the water tank to the 'MAX' level, place the empty carafe on the warming plate, and press the ON/OFF button. Discard the water after each cycle.

### Preparing for Brewing:

1. Place the coffee maker on a flat, stable surface.
2. Ensure the permanent filter is correctly seated in the filter basket.

3. Fill the carafe with the desired amount of fresh, cold water. The water level indicator on the carafe and the coffee maker will guide you.
4. Pour the water from the carafe into the water tank. Do not exceed the 'MAX' fill line.
5. Add the desired amount of ground coffee into the permanent filter. A general guideline is one level scoop (approximately 7g) per cup, but adjust to your taste.
6. Close the top lid securely.
7. Place the empty carafe onto the warming plate.

## 5. OPERATING INSTRUCTIONS

---

### Brewing Coffee:

1. After preparing the coffee maker as described in Section 4, plug the appliance into a standard electrical outlet.
2. Press the **ON/OFF** button to start the brewing cycle. The indicator light will illuminate.
3. Coffee will begin to drip into the carafe. The anti-drip feature allows you to temporarily remove the carafe during brewing without spillage, but do not remove it for more than 30 seconds to avoid overflow.
4. Once brewing is complete, the coffee maker will automatically switch to the 'Keep Warm' function, maintaining the coffee's temperature for up to 2 hours.
5. After 2 hours, the appliance will automatically shut off.
6. To turn off the coffee maker manually, press the **ON/OFF** button again.

### Using the Digital Display and Program Function:

The digital display allows you to set the current time and program a delayed start for brewing.

1. **Setting the Clock:** With the coffee maker plugged in, press the **HOUR** and **MIN** buttons to set the current time.
2. **Programming a Delayed Brew:**
  - Press the **PROG** button. The display will show 'PROG'.
  - Use the **HOUR** and **MIN** buttons to set the desired start time for brewing.
  - Press the **PROG** button again to confirm the programmed time.
  - Press the **AUTO** button. The 'AUTO' indicator will light up, and the coffee maker will start brewing at the programmed time.

**Your browser does not support the video tag.**

**Video:** Demonstrates the process of adding coffee grounds and water, and operating the digital controls for brewing.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

### Daily Cleaning:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the carafe, filter basket, and permanent filter. Wash them in warm, soapy water. These parts are also top-rack dishwasher safe.
3. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Clean the warming plate with a damp cloth. Do not use abrasive materials.

## Descaling (Mineral Deposit Removal):

Mineral deposits from water can build up in your coffee maker and affect its performance. Descale regularly, depending on water hardness and frequency of use (e.g., every 1-3 months).

1. Fill the water tank with a mixture of white vinegar and cold water (e.g., 1 part vinegar to 2 parts water). Do not exceed the 'MAX' fill line.
2. Place the permanent filter (without coffee grounds) and the empty carafe in position.
3. Start a brewing cycle. Allow half of the mixture to brew through, then turn off the coffee maker and let it soak for at least 15 minutes.
4. Turn the coffee maker back on and allow the remaining mixture to brew through.
5. Discard the vinegar solution and rinse the carafe and filter thoroughly.
6. Run 2-3 full cycles with fresh, cold water only to flush out any remaining vinegar taste.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; ON/OFF button not pressed; water tank empty; programmed brew time not reached.	Ensure power cord is securely plugged in. Press the ON/OFF button. Fill water tank. Check programmed time or start manually.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; coffee grind too coarse/fine.	Adjust the amount of coffee grounds to taste. Use a medium grind for drip coffee makers.
Water overflows from the filter basket.	Too much coffee grounds; filter basket not seated correctly; permanent filter clogged; carafe not on warming plate.	Reduce coffee grounds. Ensure filter basket is properly in place. Clean the permanent filter. Ensure carafe is correctly positioned.
Coffee maker leaks.	Water tank overfilled; carafe not properly placed; loose connections.	Do not exceed 'MAX' fill line. Ensure carafe is centered on the warming plate. Check for any visible damage or loose parts.
Coffee is not hot enough.	Mineral buildup; 'Keep Warm' function not active.	Descale the coffee maker as per cleaning instructions. Ensure the 'Keep Warm' function is active after brewing.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	BLACK+DECKER
Model Name	BXCM1201IN
Coffee Maker Type	Drip Coffee Machine
Power	900W
Voltage	240 Volts
Capacity	1.5 Liters (12-Cup)
Product Dimensions	23D x 18W x 31.5H Centimeters
Color	Black
Special Feature	Removable Tank, Anti-Drip, Auto Keep-Warm
Included Components	Carafe, Filter
Coffee Input Type	Ground Coffee
Item Weight	2 kg 620 g

## 9. WARRANTY AND SUPPORT

---

Your BLACK+DECKER BXCM1201IN Drip Coffee Maker comes with a **2-year warranty** from the date of purchase, covering manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.



The coffee maker prominently displaying its 2-year warranty.

For technical support, service, or warranty inquiries, please contact BLACK+DECKER customer service. Contact details can typically be found on the product packaging or the official BLACK+DECKER website for your region.