

[Manuals.plus](#) /

› [LKPower](#) /

› LKPower AC Adapter Instruction Manual for Philips ShoqBox PSS110 PSS120 MP3 Player

LKPower 180110756

LKPower AC Adapter Instruction Manual

For Philips ShoqBox PSS110, PSS110/00, and PSS120 MP3 Players

INTRODUCTION

This manual provides essential information for the safe and effective use of your LKPower AC Adapter. This adapter is specifically designed to meet the power requirements of Philips ShoqBox PSS110, PSS110/00, and PSS120 MP3 players, allowing you to operate your device or charge its battery from standard electrical power outlets.

The adapter converts alternating current (AC) from the wall outlet into direct current (DC) required by your device. It features over voltage and over heat protection for safe operation.



Figure 1: Front and side view of the LKPower AC adapter. This image displays the adapter's compact design, featuring a standard two-prong plug on one side and the integrated output cable on the other. The adapter's specifications are visible on its surface.

SETUP INSTRUCTIONS

Follow these steps to properly set up your LKPower AC Adapter:

1. **Verify Compatibility:** Ensure your device is a Philips ShoqBox PSS110, PSS110/00, or PSS120 MP3 player. This adapter is specifically designed for these models.
2. **Connect to Power Outlet:** Insert the two-prong plug of the AC adapter firmly into a standard AC 100-240V wall electrical outlet.
3. **Connect to Device:** Plug the output connector of the AC adapter cable into the designated power input port on your Philips ShoqBox MP3 player.



Figure 2: AC adapter connected to a power source and a device. This image illustrates the adapter plugged into a multi-outlet power strip, with its cable extending to connect to an electronic device, demonstrating a typical setup for use.

Once connected, your MP3 player should either power on or begin charging its internal battery, indicated by the device's charging indicator (if applicable).

OPERATING INSTRUCTIONS

The LKPower AC Adapter operates automatically once connected. It is designed for worldwide AC input, supporting voltages from 100V to 240V at 50/60Hz, making it suitable for travel.

- The adapter will supply continuous power to your device when plugged into an active electrical outlet.
- If your device has a rechargeable battery, the adapter will charge the battery while simultaneously powering the device.
- Disconnect the adapter from the wall outlet and your device when not in use for extended periods.

MAINTENANCE

To ensure the longevity and safe operation of your AC adapter, observe the following maintenance guidelines:

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture.
- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Handling:** Avoid bending or crimping the cable excessively, especially near the connectors, as this can cause internal damage.
- **Temperature:** Do not expose the adapter to extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your LKPower AC Adapter, refer to the following common problems and solutions:

- **Device Not Powering On or Charging:**
 - Ensure the adapter is securely plugged into a functional wall outlet. Try a different outlet.
 - Verify that the adapter's output connector is fully inserted into your MP3 player's power port.
 - Confirm that your MP3 player is compatible with this specific adapter model (Philips ShoqBox PSS110, PSS110/00, PSS120).
 - Check the adapter cable for any visible damage or frayed wires. If damaged, discontinue use and replace.
- **Adapter Overheating:**
 - While the adapter has over heat protection, if it feels excessively hot to the touch, immediately disconnect it from the wall outlet and your device.
 - Ensure adequate ventilation around the adapter; do not cover it.
 - If overheating persists, discontinue use and contact support.

SPECIFICATIONS

Key technical specifications for the LKPower AC Adapter:

Brand	LKPower
Model Number	180110756
Compatible Devices	Philips ShoqBox PSS110, PSS110/00, PSS120 MP3 Players
Input Voltage	AC 100-240V
Input Frequency	50/60Hz
Special Features	Over Voltage Protection, Over Heat Protection, Travel-friendly design

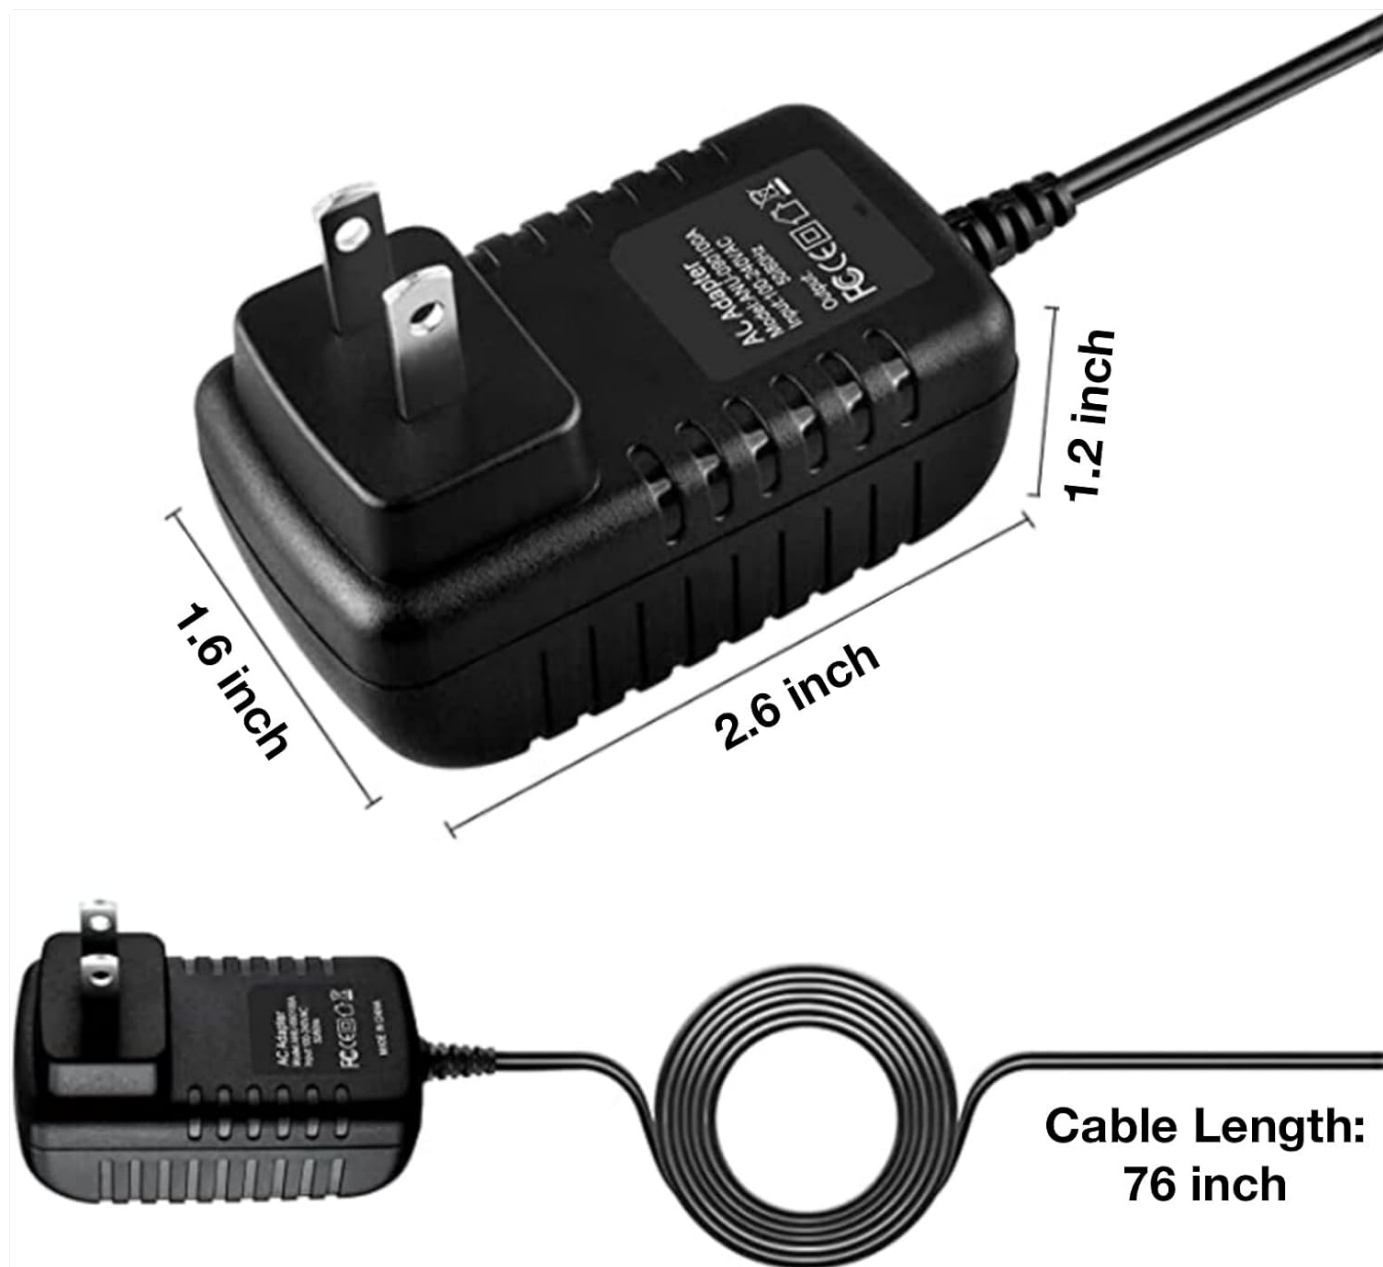


Figure 3: Dimensions of the LKPower AC adapter and cable. This image provides measurements for the adapter body (1.6 inches by 2.6 inches by 1.2 inches) and indicates a cable length of 76 inches, offering a clear understanding of its physical size.

WARRANTY AND SUPPORT

As a replacement part, specific warranty terms may vary. For detailed warranty information, technical assistance, or customer support regarding your LKPower AC Adapter, please contact the retailer from whom you purchased the product or refer to the manufacturer's official website for LKPower.

Ensure you have your purchase details and the product model number (180110756) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078YQKL7P>

More documents and user manuals: <https://manuals.plus/>