

Pride Mobility SC609

Pride Victory 9 3-Wheel Scooter Instruction Manual

Model: SC609

INTRODUCTION

This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your Pride Victory 9 3-Wheel Scooter. Please read this manual thoroughly before operating the scooter to ensure proper understanding and to maximize your safety and the product's longevity.

The Pride Victory 9 is a 3-wheel mobility scooter designed for personal transportation, offering a balance of maneuverability and stability. It features feather-touch disassembly for transport, a comfortable seat, and intuitive controls.

SAFETY INFORMATION

Always prioritize safety when operating your mobility scooter. Adhere to all local traffic laws and regulations. Ensure you are familiar with the controls and capabilities of the scooter before operating it in public areas.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 300 lbs.
- **Speed:** Operate at a safe speed, especially in crowded areas or on uneven terrain. Maximum speed is 5.25 mph.
- **Stability:** Avoid sharp turns at high speeds. Be cautious on inclines and declines.
- **Lighting:** Utilize the long-lasting, maximum-intensity LED headlight for optimal pathway illumination, especially in low-light conditions.
- **Battery:** Use only the specified batteries (2 x 12V) and charger.

SETUP AND ASSEMBLY

The Pride Victory 9 scooter features feather-touch disassembly for convenient transport. Initial assembly is required upon receipt.

Unpacking and Initial Assembly

1. Carefully remove all components from the packaging. Inspect for any shipping damage.
2. Place the rear section of the scooter on a flat, stable surface.

3. Attach the front section (tiller assembly) to the rear section. The auto-connecting front-to-rear harness will engage automatically. Ensure a secure connection.
4. Install the seat. The lightweight eight-position, pinch-less seat with sliders and viscoelastic foam inserts can be adjusted for comfort. Ensure it is locked securely in place.
5. Connect the batteries. The scooter requires two 12V batteries, which are included. Refer to the battery compartment for correct polarity and secure connection.
6. Attach the crush-proof front basket to the front of the tiller.



Image: Fully assembled Pride Victory 9 3-Wheel Scooter in red, showing the seat, tiller, and front basket.



Image: Side view of the Pride Victory 9 3-Wheel Scooter highlighting key features such as the seat, tiller, LED headlight, and feather-touch disassembly points.

OPERATING INSTRUCTIONS

Controls Overview

The tiller houses the primary controls for operating the scooter.



Image: Close-up view of the tiller control panel, showing the easy-grip adjustment knob, battery gauge, and other operational controls.

- **Power On/Off:** Use the key switch or power button located on the tiller to turn the scooter on or off.
- **Speed Control:** Adjust the speed dial to set your desired maximum speed.
- **Direction Control:** Use the delta tiller's ergonomic wraparound handles for forward and reverse movement. Push forward for forward, pull back for reverse.
- **Braking:** The scooter is equipped with electromagnetic brakes that engage automatically when the throttle is released.
- **Battery Gauge:** The back-lit battery gauge on the tiller provides an easy-to-read indication of the remaining battery charge.
- **Headlight:** Activate the long-lasting, maximum-intensity LED headlight for visibility.
- **Tiller Adjustment:** Use the easy-grip tiller adjustment knob to position the tiller for optimal comfort and control.

Driving the Scooter

1. Ensure the seat is securely locked and adjusted to a comfortable position.
2. Turn on the scooter using the key.
3. Set the speed control to a low setting initially, especially when learning to operate.
4. Gently press the throttle lever to begin moving. Release the lever to stop.
5. Steer by turning the tiller handles in the desired direction. The scooter has an 18-inch turn radius.
6. Be aware of your surroundings and maintain a safe distance from obstacles and other people.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Pride Victory 9 scooter.

Battery Care

- **Charging:** Charge the batteries fully after each use. The easy-access tiller-mounted charger port simplifies this process.
- **Charger:** Use only the off-board 3.5A battery charger provided with your scooter.
- **Storage:** If storing the scooter for an extended period, ensure batteries are fully charged and periodically recharge them (e.g., once a month) to prevent deep discharge.

Tire Care

The scooter is equipped with black, non-scuffing solid tires, which require minimal maintenance.

- Regularly inspect tires for wear or damage.
- Keep tires clean to maintain optimal traction.



Image: Close-up of the front wheel and fender, showing the non-scuffing tire.

General Cleaning

- Wipe down the scooter with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Keep all electrical connections dry and clean.

TROUBLESHOOTING

This section provides basic troubleshooting steps for common issues. For more complex problems, contact customer support.

Problem	Possible Cause	Solution
Scooter does not power on.	Battery not charged, loose battery connection, key not fully inserted.	Check battery charge, ensure connections are secure, fully insert key.
Scooter moves slowly or has reduced range.	Low battery charge, worn batteries, excessive weight.	Charge batteries fully, consider battery replacement if old, ensure weight is within capacity.
Unusual noises during operation.	Loose components, motor issue.	Inspect for loose parts. If noise persists, contact support.

SPECIFICATIONS

Detailed technical specifications for the Pride Victory 9 3-Wheel Scooter (Model SC609).

Feature	Detail
Model Number	SC609
Product Dimensions (D x W x H)	43.5" x 22.25" x 35.5"
Item Weight	165 Pounds
Maximum Weight Capacity	300 Pounds
Maximum Speed	5.25 Miles per Hour
Turn Radius	18 Inches
Batteries	2 x 12V (included)

Feature	Detail
Power Source	Battery Powered
Brake Style	Electromagnetic
Wheel Type	Solid, Non-scutting
Required Assembly	Yes
Material Type	Metal Frame
Color	Red (as per product variant)



Image: A table showing detailed specifications including model, tires, speed, weight capacity, and battery information.

WARRANTY INFORMATION

Your Pride Victory 9 3-Wheel Scooter comes with a**5-year extended warranty** from Living Well Stores, which includes batteries. This warranty covers manufacturing defects and ensures peace of mind regarding your product's reliability. For specific terms and conditions of the warranty, please refer to the documentation provided at the time of purchase or contact Living Well Stores directly.



Image: A badge indicating a 5-year warranty from Living Well Stores, including batteries.

CUSTOMER SUPPORT

For technical assistance, parts, or warranty claims, please contact the manufacturer or your authorized dealer.

Manufacturer: Pride Mobility

Seller: Living Well Stores, Inc

Refer to your purchase documentation for direct contact information.



Image: Graphic highlighting Pride Mobility's FDA testing and approval, reliable service resources, and proven performance since 1986.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question