

Kichler 45887NI

Kichler Winslow 30" 4-Light Vanity Light Instruction Manual

Model: 45887NI

Brand: Kichler

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Kichler Winslow 30" 4-Light Vanity Light. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Winslow 30" 4-light vanity light features a classic design with a Brushed Nickel finish and clear seeded glass shades. This transitional bathroom light fixture is suitable for various aesthetic environments, including traditional and transitional settings.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the main circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Use only the bulb type and wattage specified for this fixture.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Please check your local laws before purchasing this product.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Mounting Strap
- Strap Mounting Screws
- Hex Nuts
- Nipple
- Screw Collar
- Loop
- Canopy
- Wire Nuts
- Chain (if applicable, though typically not for vanity lights)
- (4) Clear Seeded Glass Shades
- Mounting Hardware
- *Bulbs are not included.*

4. SPECIFICATIONS

Feature	Specification
Brand	Kichler
Model Name	Winslow 4 Light Bathroom Vanity
Model Number	45887NI
Color	Brushed Nickel
Material	Metal
Style	Industrial
Light Fixture Form	Vanity
Room Type	Bathroom
Product Dimensions	12"L x 30"W x 9.25"H
Power Source	Corded Electric
Installation Type	Wall Mount
Special Feature	Dimmable
Control Method	App (if compatible with smart home systems)
Light Source Type	Incandescent (or LED equivalent)

Finish Type	Brushed
Shade Material	Glass (Clear Seeded)
Number of Light Sources	4
Voltage	120 Volts (AC)
Bulb Base	E26
Wattage	Up to 75 watts equivalent per bulb (300 watts total)
Item Weight	5.5 Pounds

For a complete list of specifications, please refer to the product packaging or the official Kichler website.

5. INSTALLATION INSTRUCTIONS

Before you begin, ensure you have gathered all necessary tools and components. It is recommended to have an additional person for assistance during installation.

5.1 Pre-Installation Steps

1. **Disconnect Power:** Turn off the electrical current at the main circuit breaker panel or main fuse box.
2. **Verify Power is Off:** Use a non-contact voltage tester to confirm that the wiring is safely disconnected from the power source.
3. **Remove Existing Fixture:** Carefully remove any existing light fixture from the wall.
4. **Gather Tools:** Ensure you have a ladder, screwdriver, wire strippers/pliers, and a voltage tester.

5.2 Mounting the Fixture

1. **Attach Mounting Bracket:** Secure the new mounting bracket to the junction box on your wall using the provided strap mounting screws.
2. **Connect Ground Wire:** Connect the fixture's ground wire (usually bare copper or green) to the ground wire from the wall (usually bare copper or green) and to the ground screw on the mounting bracket. Secure with a wire nut.
3. **Connect Supply Wires:** Connect the fixture's white wire to the white supply wire from the wall. Connect the fixture's black wire to the black supply wire from the wall. Secure both connections with wire nuts.
4. **Tuck Wires:** Carefully tuck all connected wires into the junction box, ensuring they are not pinched.
5. **Secure Fixture:** Raise the vanity light fixture and align it with the mounting bracket. Secure the fixture to the mounting bracket using the provided hex nuts or screws.

5.3 Installing Shades and Bulbs

1. **Install Shades:** Carefully attach the four clear seeded glass shades to the fixture.
2. **Install Bulbs:** Insert four medium E26 base bulbs (up to 75W equivalent each) into the sockets. (Bulbs not included).

5.4 Post-Installation

1. **Restore Power:** Turn the electricity back on at the main circuit breaker panel.
2. **Test Fixture:** Turn on the light switch to ensure your new vanity light is functioning correctly.

Installation Video Reference

For a visual guide on installing Kichler vanity fixtures, please refer to the video below. Note that specific steps may vary slightly depending on your exact fixture model.

Your browser does not support the video tag.

Video Description: This official Kichler Lighting video provides a short overview of the vanity light installation process, covering key steps from preparing the wiring to securing the fixture and adding shades. It serves as a helpful visual aid for general installation guidelines.

Product Images



Image Description: An installed Kichler Winslow 30-inch 4-light vanity light in brushed nickel with clear seeded glass shades, positioned above a bathroom mirror and sink.



Image Description: A diagram showing the dimensions of the Kichler Winslow 30-inch vanity light: 30 inches wide, 9.25 inches high, and 6.5 inches deep.



Image Description: A close-up view of the Kichler Winslow 4-light vanity light, highlighting the brushed nickel finish and the clear seeded glass shades with visible air bubbles.

6. OPERATING INSTRUCTIONS

- **Power On/Off:** Operate the light fixture using your standard wall switch.
- **Dimmable Feature:** This fixture is dimmable. To utilize this feature, ensure you use dimmable E26 bulbs and a compatible dimmer switch (sold separately).
- **App Control:** If integrated with a compatible smart home system, the fixture may be controlled via an app.

Refer to your smart home system's instructions for setup.

7. MAINTENANCE

- **Cleaning:** Turn off the electric current before cleaning. Clean metal components with a soft cloth moistened with a mild liquid soap solution. Wipe clean and buff with a very soft dry cloth.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled before replacing. Use only E26 base bulbs, up to 75W equivalent.

8. TROUBLESHOOTING

- **Light does not turn on:**
 - Ensure the power is restored at the circuit breaker.
 - Check that bulbs are correctly installed and not burnt out.
 - Verify all wire connections are secure.
- **Flickering light:**
 - Ensure bulbs are fully tightened.
 - If using a dimmer, ensure it is compatible with your bulbs and fixture.
- For any persistent issues or concerns, consult a certified electrician.

9. WARRANTY INFORMATION

This Kichler Winslow vanity light comes with a **1-year limited warranty**. For specific details regarding warranty coverage and claims, please refer to the warranty documentation included with your product or visit the official Kichler website.

10. SUPPORT

For additional support, product information, or to view other Kichler products, please visit the [official Kichler Store on Amazon](#) or their corporate website.

