

[manuals.plus](#) /

› [Redline](#) /

› [Redline Original Remote Control User Manual for TS-140, TS-150, TS-300, TS-1500, TS-2000, TS-2500, TS-3000, TS-4000, TS-5000 Series Receivers](#)

## Redline TS-1500

# Redline Original Remote Control User Manual

Models: TS-140, TS-150, TS-300, TS-1500, TS-2000, TS-2500, TS-3000, TS-4000, TS-5000 Series

## INTRODUCTION

This manual provides detailed instructions for the Redline original remote control, designed for seamless operation with various Redline TS series satellite receivers and compatible televisions. Please read this manual thoroughly to ensure proper setup and optimal performance of your remote control.



**Image 1:** The Redline Original Remote Control. This image displays the full remote control, featuring a black body with various function buttons, a central navigation pad with an 'OK' button, and numerical keys. The Redline logo is visible at the bottom.

## SETUP

## 1. Battery Installation

The Redline remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 2. Initial Use

This remote control operates using infrared (IR) technology. No pairing is required for the Redline receiver. Simply point the remote control directly at your Redline receiver or compatible television to operate it.

## 3. TV Programming (If Applicable)

This remote control is programmable for TV control. Refer to the specific instructions provided with your Redline receiver or the remote control's packaging for details on how to program the 'TV CONTROL' section buttons for your television model. This typically involves entering a code or using an auto-search function.

## OPERATING INSTRUCTIONS

Familiarize yourself with the various buttons and their functions:

- **Power Button (●):** Turns the receiver or TV on/off.
- **Numerical Buttons (0-9):** Used to directly enter channel numbers or other numerical inputs.
- **SAT Button:** Switches between satellite modes or inputs.
- **TV/Radio Button:** Toggles between TV and Radio channels.
- **MENU Button:** Accesses the main menu of the receiver.
- **OK Button:** Confirms selections or displays channel information.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and lists.
- **VOL +/- Buttons:** Adjusts the volume level.
- **CH +/- Buttons:** Changes the channel up or down.
- **INFO Button:** Displays program information.
- **EPG Button:** Accesses the Electronic Program Guide.
- **TXT Button:** Opens Teletext (if available).
- **AUDIO Button:** Selects audio tracks or languages.
- **SUBTL Button:** Activates or deactivates subtitles.
- **RECALL Button:** Switches to the previously viewed channel.
- **FAV Button:** Accesses your list of favorite channels.
- **IPTV Button:** Directly accesses IPTV functions (if supported by your receiver).
- **EXIT Button:** Exits current menu or screen.
- **Media Control Buttons (<<, <, ||, >, >>, SLOW):** Controls media playback functions such as rewind, play/pause, fast forward, next track, previous track, and slow motion.

- **TV CONTROL Section (VOL+, VOL-, AV, OK, ^, v, <, >, Power):**These buttons are designed to control a paired television. Their functionality depends on successful TV programming.

For specific functions related to your Redline receiver model, refer to your receiver's user manual.

## MAINTENANCE

### Cleaning the Remote Control

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface and internal components.

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

- **Remote control not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the receiver/TV.
  - Make sure you are within the operating range (up to 10 meters).
  - Point the remote control directly at the IR sensor of your device.
- **Some buttons not working:**
  - Clean the remote control, especially around the non-working buttons, to remove any dirt or debris that might be preventing contact.
  - If only TV control buttons are not working, ensure the remote is correctly programmed or compatible with your specific TV model. Refer to the 'TV Programming' section.

## SPECIFICATIONS



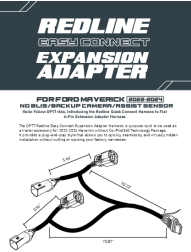

Feature	Detail
Brand	Redline
Model	TS-1500 (Compatible with TS-140, TS-150, TS-300, TS-1500, TS-2000, TS-2500, TS-3000, TS-4000, TS-5000 series)
Compatible Devices	Television, Redline Satellite Receivers
Connectivity Technology	Infrared (IR)
Controller Type	Button control

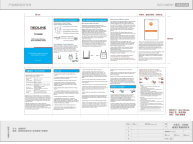

Maximum Range	10 Meters
Batteries Required	Yes (2x AAA, not included)
Dimensions (Package)	13 x 6 x 1.2 cm
Weight (Package)	20 g

## WARRANTY AND SUPPORT

Specific warranty information for this product is typically provided at the point of purchase or with the original product packaging. For technical support or warranty claims, please contact your retailer or the official Redline customer service channels.

## Related Documents - TS-1500

	<p><a href="#">Redline TS720W WiFi Extender Quick Installation Guide</a></p> <p>This guide provides instructions for setting up and using the Redline TS720W Wall-plug WiFi Extender to improve WiFi coverage. It covers both WPS quick setup and manual setup via a mobile device.</p>
	<p><a href="#">Redline RV5 Android TV Box User Manual</a></p> <p>This user manual provides comprehensive instructions and specifications for the Redline RV5 Android TV Box, covering setup, features, troubleshooting, and FCC compliance.</p>
	<p><a href="#">Redline Easy Connect Expansion Adapter for 2022-2024 Ford Maverick Installation Guide</a></p> <p>Step-by-step installation guide for the Redline Easy Connect Expansion Adapter Harness for 2022-2024 Ford Maverick models without Co-Pilot360. Features plug-and-play installation for trailer wiring, replacing factory harnesses without cutting or splicing.</p>
	<p><a href="#">Redline S Series Digital Satellite Receiver User Manual</a></p> <p>User manual for the Redline S Series Digital Satellite Receiver, covering safety instructions, general information, device connections, installation, channel management, preferences, general settings, and technical specifications.</p>

	<p><a href="#">REDLINE TS1200W AC1200 High Power Dual Band WiFi Extender Quick Installation Guide</a></p> <p>This guide provides instructions for setting up and using the REDLINE TS1200W AC1200 High Power Dual Band Wall Plug WiFi Extender. Learn how to extend your WiFi coverage, understand indicator lights, troubleshoot common issues, and follow important precautions for optimal performance.</p>
	<p><a href="#">Redline Wireless Router Quick Installation Guide</a></p> <p>A quick installation guide for the Redline Wireless Router, covering setup in Router Mode (PPPOE), Access Point Mode, and WISP Mode. Includes hardware connection details and configuration steps.</p>

Documents - Redline – TS-1500

no relevant documents