

TOTAL TSTLI2001

TOTAL Cordless Electric Mini Hedge Trimmer

MODEL: TSTLI2001

Introduction

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your TOTAL Cordless Electric Mini Hedge Trimmer, model TSTLI2001. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before operating the tool.
- Wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Keep hands and feet away from the cutting blades.
- Ensure the work area is clear of obstacles and bystanders.
- Do not operate the tool in wet conditions or near flammable liquids or gases.
- Store the tool in a dry, secure place out of reach of children.
- Disconnect the battery pack before performing any maintenance or cleaning.

Product Overview

The TOTAL Cordless Electric Mini Hedge Trimmer is designed for light pruning and shaping of hedges and shrubs. It features a compact design and a powerful 20V motor for efficient operation.



Figure 1: Main view of the TOTAL Cordless Electric Mini Hedge Trimmer. This image shows the teal and grey tool with its long hedge trimmer blade attached, and a 20V battery inserted into the handle.

Components:

- Main Unit (Motor Housing and Handle)
- Hedge Trimmer Blade (200mm length)
- Scissor Attachment (100mm width)
- Safety Guard
- Power Button / Trigger
- Battery Compartment (Battery and charger sold separately)



Figure 2: The mini hedge trimmer shown with both the hedge trimmer blade attached and the separate scissor attachment. The scissor attachment is black with two serrated blades.

Setup

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Battery Installation:**
 - Ensure the battery (P20S series, sold separately) is fully charged before first use.
 - Align the battery pack with the battery compartment at the rear of the handle.
 - Slide the battery into place until it clicks securely.



Figure 3: Close-up view of the handle and battery slot area of the hedge trimmer, showing where the 20V battery is inserted.

3. Blade Attachment:

- Ensure the battery is removed before attaching or changing blades.
- To attach the hedge trimmer blade (200mm), align the blade with the drive shaft and slide it into position until it locks.
- To attach the scissor attachment (100mm), follow similar alignment and locking procedures.
- Always ensure the blade is securely fastened before operation.

Operating Instructions

1. Pre-Operation Check:

- Verify the battery is fully charged and securely installed.
- Check that the blade is clean, sharp, and properly attached.
- Inspect the work area for any debris or hidden objects that could interfere with cutting.

2. Starting the Tool:

- Grip the handle firmly with both hands.
- Press the safety lock button (if present) and then squeeze the trigger to start the motor.



Figure 4: Close-up view of the red power button and trigger mechanism on the handle of the hedge trimmer.

3. Cutting Technique:

- Maintain a steady and controlled movement.
- For hedges, use a sweeping motion, cutting small amounts at a time.
- The tool operates at a no-load speed of up to 1200 RPM.
- The hedge trimmer blade has a cutting length of 200mm.
- The scissor attachment provides a cutting width of 100mm for grass and smaller plants.

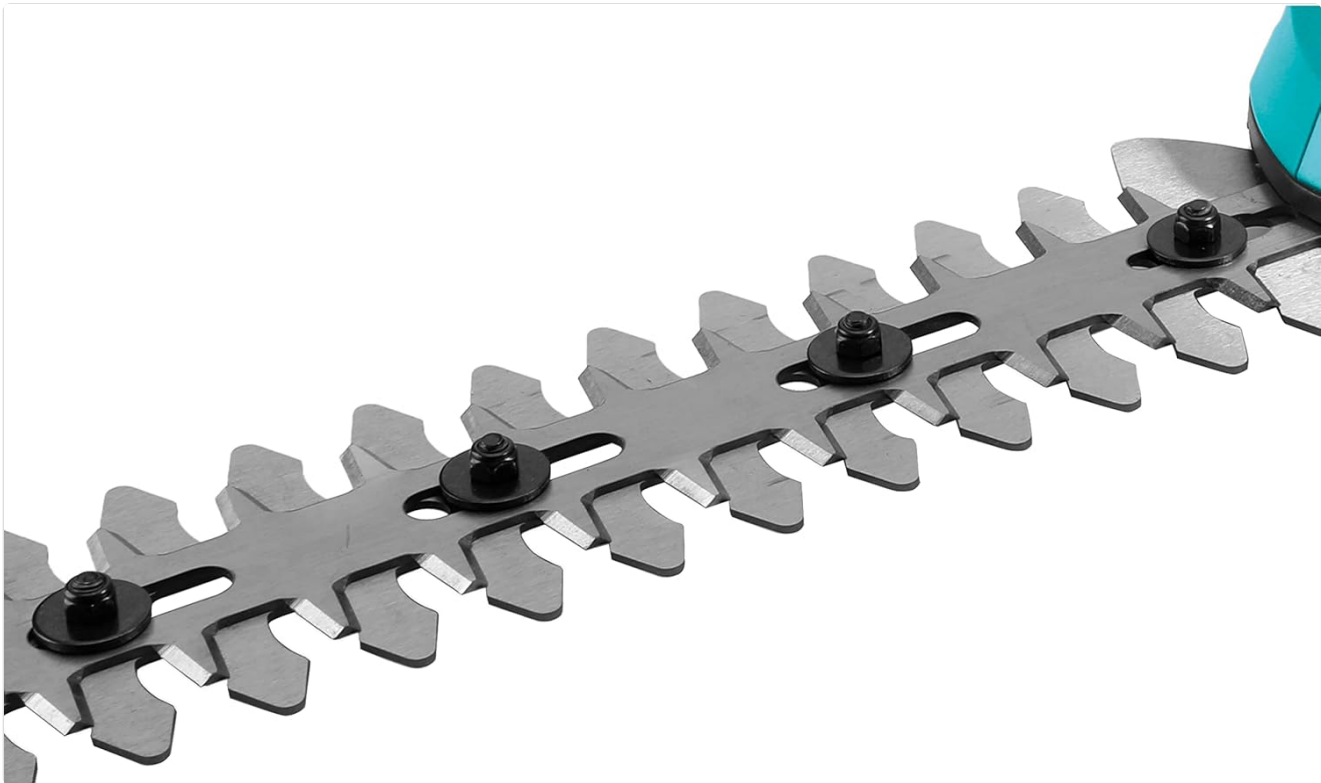


Figure 5: Detailed close-up of the stainless steel blade teeth of the hedge trimmer, showing their sharp, interlocking design.

4. **Stopping the Tool:** Release the trigger to stop the motor.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your hedge trimmer.

- **Cleaning:** After each use, remove the battery and clean the blades and housing with a dry cloth. Remove any sap or debris from the blades.
- **Blade Care:** Periodically lubricate the blades with a light machine oil to prevent rust and ensure smooth operation. Sharpen blades as needed by a qualified professional.
- **Storage:** Store the tool in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure the blade guard is in place when storing.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Tool does not start.	Battery not charged or not properly inserted.	Charge battery fully. Ensure battery is clicked into place.
Blades are not cutting effectively.	Blades are dull or dirty.	Clean blades. Sharpen or replace blades if necessary.
Excessive vibration during operation.	Blade not properly secured or damaged.	Check blade attachment. Inspect blade for damage and replace if needed.

Specifications

Feature	Detail
Model Number	TSTLI2001
Power Source	Battery Powered (20V)
No-Load Speed	1200 RPM
Hedge Trimmer Blade Length	200 mm
Scissor Attachment Cutting Width	100 mm
Distance Between Teeth	8 mm
Weight	1.17 kg
Material	Stainless Steel (Blade), Other (Housing)
Dimensions (L x W x H)	36.5 x 11.5 x 15 cm


Warranty and Support

Specific warranty information for the TOTAL Cordless Electric Mini Hedge Trimmer (Model TSTLI2001) is not provided in this manual. Please refer to the product packaging or contact TOTAL customer service for details regarding warranty coverage and support options.


For technical assistance or spare parts, please visit the official TOTAL Tools website or contact your local distributor.

Related Documents

	TOTAL 20V Battery Brush Cutter User Manual and Safety Guide Comprehensive user manual for the TOTAL 20V Battery Brush Cutter (Model TSTLI20018), covering safety instructions, operation, maintenance, technical data, and environmental information.
	TOTAL TG103512, UTG103512 Grass Trimmer User Manual & Safety Guide Comprehensive guide for TOTAL Grass Trimmer models TG103512 and UTG103512, covering safety instructions, technical specifications, parts list, and assembly details. Learn how to safely operate and maintain your TOTAL grass trimmer.

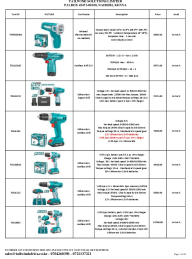 
	TOTAL Battery Hammer Drill TRHLI1601 User Manual and Safety Guide Comprehensive safety instructions, technical specifications, setup guide, work tips, maintenance, and environmental information for the TOTAL 20V Battery Hammer Drill, model TRHLI1601.
	TOTAL Power Tools Catalog - Tailwind Solutions Limited Explore the comprehensive catalog of TOTAL power tools and accessories offered by Tailwind Solutions Limited in Nairobi, Kenya. Find detailed specifications, model numbers, and pricing for a wide range of tools.

 Documents - TOTAL – TSTLI2001

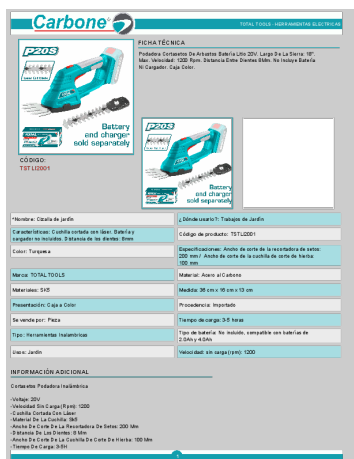


[pdf]

Ficha técnica de productos tstli2001 cortasetos podadora in carbone data shopify |||
TOTAL TOOLS - HERRAMIENTAS ELECTRICAS FICHA TCNICA Podadora
 Cortasetos De Arbustos Batera Litio 20V. Largo De La Sierra: 18 . Max. Velocidad:
 1200 Rpm. Distancia Entre Dientes 8Mm. No Incluye Batera Ni Cargador. Caja Color.
 CDIGO: **TSTLI2001** *Nombre: Cizalla de jardn Caractersticas: Cuchilla cortad...
 lang:es score:25 filesize: 577 K page_count: 2 document date: 0000-00-00

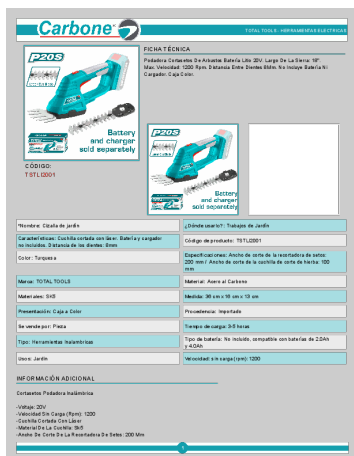 

[pdf]

Ficha técnica de productos tstli2001 cortasetos podadora in carbone data shopify |||
TOTAL TOOLS - HERRAMIENTAS ELECTRICAS FICHA TCNICA Podadora
 Cortasetos De Arbustos Batera Litio 20V. Largo De La Sierra: 18 . Max. Velocidad:
 1200 Rpm. Distancia Entre Dientes 8Mm. No Incluye Batera Ni Cargador. Caja Color.
 CDIGO: **TSTLI2001** *Nombre: Cizalla de jardn Caractersticas: Cuchilla cortad...
 lang:es score:25 filesize: 577.03 K page_count: 2 document date: 0000-00-00

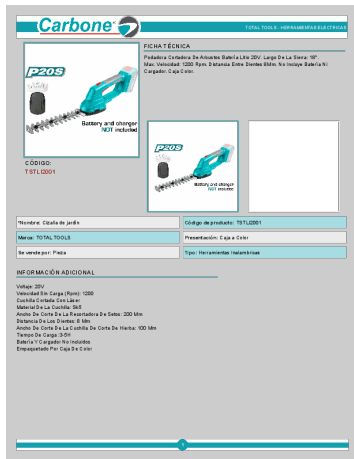 

[pdf]

Ficha técnica de productos tstli2001 podadora cizalla ja carbone data shopify |||

TOTAL TOOLS - HERRAMIENTAS ELECTRICAS FICHA TCNICA Podadora Cortadora De Arbustos Batera Litio 20V. Largo De La Sierra: 18 . Max. Velocidad: 1200 Rpm. Distancia Entre Dientes 8Mm. No Incluye Batera Ni Cargador. Caja Color. CDIGO: **TSTLI2001** *Nombre: Cizalla de jardn Marca: TOTAL TOOLS Se vende por:...

lang:es score:25 filesize: 369.88 K page_count: 2 document date: 0000-00-00



[pdf] Catalog

01 catalogo total 22 impresion v2 cdn millasur sites default files |||

W W W.TOTALTOOLS.ES MS DE 60 MQUINAS CON UNA MISMA BATERA MQUINAS BATERA P20S TDLI12325 95,59 ... je 20 V Peine corte 450 mm Velocidad sin carga 1400 rpm Distancia entre dientes 18 mm Peso 3,65 Kg **TSTLI2001** 18 254,10 DESBROZADORA Voltaje 40 V 20 V 20 V Velocidad sin carga 0-7500 rpm Ancho de ...

lang:es score:11 filesize: 56.93 M page_count: 36 document date: 2022-04-07



[pdf]

web folleto total millasur 2022 noviembre 0 cdn sites default files descargas |||

W W W.TOTALTOOLS.ES MS DE 60 MQUINAS CON UNA MISMA BATERA MQUINAS BATERA P20S TDLI12325 95,59 ... je 20 V Peine corte 450 mm Velocidad sin carga 1400 rpm Distancia entre dientes 18 mm Peso 3,65 Kg **TSTLI2001** 18 254,10 DESBROZADORA Voltaje 40 V 20 V 20 V Velocidad sin carga 0-7500 rpm Ancho de ...

lang:es score:11 filesize: 16.43 M page_count: 36 document date: 2022-11-21

TOTAL

产品中文名称: TSTLI2001	额定电压: 20V
第一、安全警告及注意事项:	第二、使用步骤:
1. 使用前请仔细阅读说明书, 并妥善保管。	1. 使用前请检查产品是否有损坏, 如有损坏, 请勿使用。
2. 使用过程中, 请勿触摸刀片。	2. 使用前请检查刀片是否锋利, 如有钝化, 请及时更换。
3. 使用过程中, 请勿将刀片接触到皮肤或衣物。	3. 使用前请检查刀片是否安装正确, 如有错误, 请及时调整。
4. 使用过程中, 请勿将刀片接触到电线或水源。	4. 使用过程中, 请勿将刀片接触到电线或水源。
5. 使用过程中, 请勿将刀片接触到易燃物。	5. 使用过程中, 请勿将刀片接触到易燃物。
特别提示: 本产品为锂电池供电, 请勿在充电时使用。	特别提示: 本产品为锂电池供电, 请勿在充电时使用。

特别注意: 此页内容不印刷

[pdf]

TSTLI2001 BG Print CN Документ 1 28 MB Акумулаторен тример за трева и жив плет TOTAL 20 V

без батерия ➡ онлайн на Хит Цена — itt shop bg 0181866 Инструкция TL resources |||

...

lang:es score:9 filesize: 27.94 M page_count: 13 document date: 2021-11-30