

Soleus Air HC8-15-30

Soleus Air Ceramic 1,500 Watt Heater Instruction Manual

Brand: Soleus Air | **Model:** HC8-15-30



1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, setup, maintenance, and troubleshooting of your Soleus Air Ceramic 1,500 Watt Heater. Designed for home and office use, this heater features two heat settings and manual controls for comfortable warmth. It incorporates essential safety features including overheating and tip-over protection.





Figure 1: Soleus Air Ceramic 1,500 Watt Heater. This image displays the heater's sleek black and silver tower design with its protective metal grille.

2. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always ensure the heater is placed on a stable, level surface.

Safety Features:

- **Overheat Protection:** The heater is equipped with an overheat protection sensor that automatically monitors the internal temperature. If an unsafe temperature is detected, the unit will automatically turn off to prevent overheating.
- **Tip-Over Protection:** An automatic fail-safe mechanism cuts power to the unit if it is accidentally tipped over, enhancing safety.

OVERHEAT SAFETY PROTECTION

1500 W

SOLEUS AIR®

Figure 2: Overheat Safety Protection. This image highlights the heater's built-in overheat protection feature, which automatically shuts off the unit if it detects an unsafe internal temperature.



TIP-OVER SAFETY PROTECTION



Figure 3: Tip-Over Safety Protection. This image illustrates the heater's tip-over safety feature, which automatically powers down the unit if it is accidentally knocked over.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Soleus Air Ceramic Heater:

- **Control Knobs:** Located on the top of the unit, these control the power, heat settings, and oscillation.
- **Air Outlet Grille:** The front grille through which heated air is expelled.
- **Air Intake Filter:** Located at the rear, this allows air to be drawn into the unit.
- **Base:** Provides stability for the tower heater.
- **Power Cord:** Connects the heater to an electrical outlet.



CERAMIC TOWER HEATER



Figure 4: Heater Controls and Grille. This image provides a closer look at the manual control knobs located on the top of the heater and the front air outlet grille.

4. SETUP INSTRUCTIONS

Follow these steps to set up your heater:

- 1. Unpack:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
- 2. Placement:** Place the heater on a firm, level surface. Ensure there are no obstructions within 3 feet (0.9 m) of the front, sides, and rear of the heater to allow for proper airflow and prevent fire hazards. Do not place on soft surfaces like rugs or carpets that may block air intake.
- 3. Power Connection:** Plug the power cord directly into a 120V AC, 60Hz wall outlet. Ensure the outlet is in good condition and not loose. Do not use extension cords or power strips.

5. OPERATING INSTRUCTIONS

Your Soleus Air Ceramic Heater features simple manual controls for ease of use.

Control Knobs:

- **Power/Heat Setting Knob:** This knob controls the power and selects the heat output.

- Turn to **OFF** to power off the unit.
- Turn to **FAN ONLY** for air circulation without heat.
- Turn to **LOW (1000W)** for a lower heat output.
- Turn to **HIGH (1500W)** for maximum heat output.

- **Oscillation Knob:** This knob controls the oscillation function.

- Turn to **ON** to activate the 90-degree left-to-right oscillation, distributing heat across a wider area.
- Turn to **OFF** to stop oscillation and direct heat in a fixed direction.

Operating Steps:

1. Ensure the heater is plugged into a suitable electrical outlet.
2. Turn the Power/Heat Setting knob to your desired heat level (LOW or HIGH). The heater will begin to emit warm air.
3. If you wish to distribute heat across a wider area, turn the Oscillation knob to ON. The heater will begin to rotate from side to side.
4. To turn off the heater, turn the Power/Heat Setting knob to OFF. Unplug the unit from the wall outlet when not in use for extended periods.

2 HEAT SETTINGS



WIDE-RANGING HEAT
SWEEPS AROUND



Figure 5: Heat Settings and Oscillation. This image visually represents the two available heat settings and the 90-degree oscillation feature, allowing for broad heat distribution.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your heater.

- **Before Cleaning:** Always turn off the heater and unplug it from the electrical outlet. Allow the heater to cool down completely before attempting any cleaning.
- **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners, waxes, or polishes as they may damage the finish.
- **Air Intake/Outlet:** Use a vacuum cleaner with a brush attachment to remove dust and lint from the air intake and outlet grilles. Do not allow water to drip into the heater's interior.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Cord Care:** Do not wrap the power cord tightly around the heater. Avoid placing heavy objects on the cord.

7. TROUBLESHOOTING GUIDE

If your heater is not operating correctly, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	<ul style="list-style-type: none">Not plugged in securely.Power outlet is not functioning.Overheat protection activated.Tip-over protection activated.	<ul style="list-style-type: none">Ensure the power cord is firmly plugged into a working 120V AC outlet.Test the outlet with another appliance.Unplug the heater, allow it to cool for 30 minutes, then plug it back in.Ensure the heater is on a stable, level surface. If it was tipped, place it upright and it should reset.
Heater produces no heat.	<ul style="list-style-type: none">Heat setting is on "FAN ONLY".Overheat protection activated.	<ul style="list-style-type: none">Turn the Power/Heat Setting knob to LOW or HIGH.Unplug the heater, allow it to cool for 30 minutes, then plug it back in. Ensure air intakes are not blocked.
Heater suddenly turns off.	<ul style="list-style-type: none">Overheat protection activated.Tip-over protection activated.Power surge or circuit breaker tripped.	<ul style="list-style-type: none">Unplug the heater, allow it to cool for 30 minutes, and check for any obstructions to airflow.Ensure the heater is upright on a stable surface.Check your household circuit breaker and reset if necessary. Avoid plugging other high-wattage appliances into the same circuit.

8. PRODUCT SPECIFICATIONS

Key technical specifications for the Soleus Air Ceramic 1,500 Watt Heater:

- Brand:** Soleus Air
- Model Number:** HC8-15-30
- ASIN:** B0791WRNFH
- Heat Output:** 1500 Watts (High), 1000 Watts (Low)
- Number of Speeds:** 2 (Heat settings)
- Amperage:** 12 Amps
- Fuel Type:** Electric
- Form Factor:** Tower
- Color:** Black
- Product Dimensions (D x W x H):** 6" x 15" x 20"
- Item Weight:** 5.69 pounds
- Special Features:** Manual Thermostat, Overheat Protection, Tip-Over Protection, 90-degree Oscillation
- Indoor/Outdoor Usage:** Indoor

- **Recommended Uses:** Home (Bedroom, Home Office, Living Room)

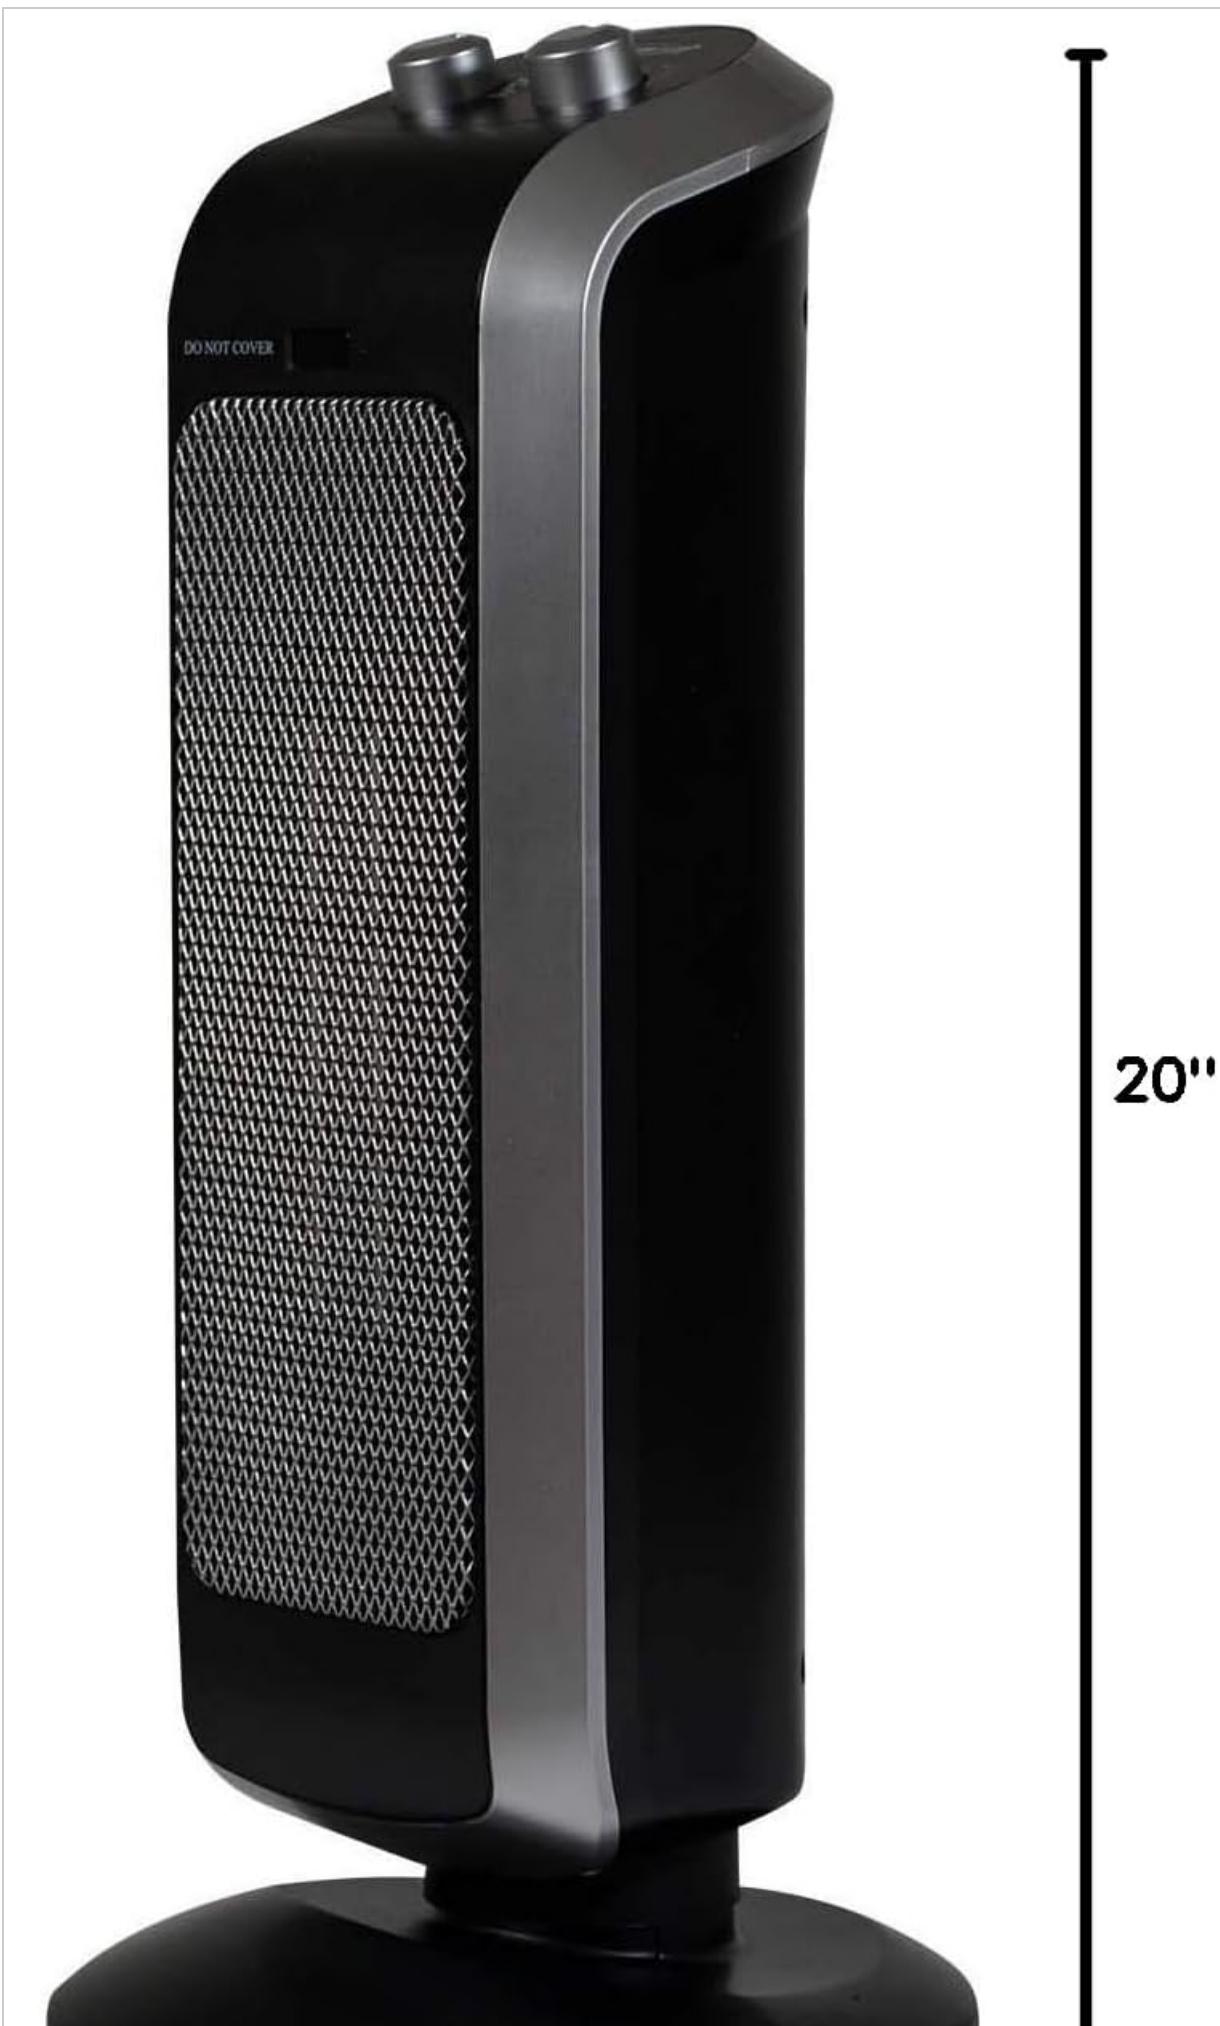




Figure 6: Product Dimensions. This image provides a visual representation of the heater's dimensions, indicating its depth, width, and height.

9. WARRANTY INFORMATION

Specific warranty details for the Soleus Air Ceramic 1,500 Watt Heater are typically provided with the product packaging or can be obtained directly from the manufacturer or authorized retailer at the time of purchase. Please refer to the warranty card included with your product or visit the official Soleus Air website for the most current warranty policy and registration information.


10. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Soleus Air Ceramic Heater, please contact Soleus Air customer service. You may find contact information on the official Soleus Air website or through the retailer where the product was purchased.

Visit the official Soleus Air Store: [Soleus Air Store on Amazon](#)

© 2025 Soleus Air. All rights reserved. Information subject to change without notice.

Related Documents

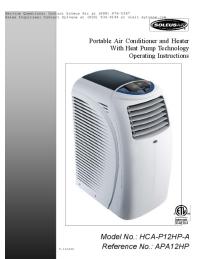 Portable Air Conditioner and Heater With Heat Pump Technology Operating Instructions Model No.: HCA-P12HP-A Reference No.: APA12HP	<p>Soleus Air HCA-P12HP-A Portable Air Conditioner and Heater Operating Instructions</p> <p>Operating instructions for the Soleus Air HCA-P12HP-A portable air conditioner and heater with heat pump technology. Includes installation, operation, and maintenance guidelines.</p>
 Portable Air Conditioner and Heater With Heat Pump Technology PH3-12R-03 Operating Instructions Model No.: PH3-12R-03	<p>Soleus Air PH3-12R-03 Portable Air Conditioner and Heater Operating Instructions</p> <p>Comprehensive operating instructions for the Soleus Air PH3-12R-03 Portable Air Conditioner and Heater with Heat Pump Technology, covering installation, operation modes, maintenance, and warranty.</p>

 <p>Portable Air Conditioner and Heater With Heat Pump Technology Operating Instructions Model No.: PH3-12R-03 Reference No.: KY2-34</p>	<p><u>Soleus Air Portable Air Conditioner and Heater with Heat Pump Technology Operating Instructions</u></p> <p>Operating instructions for the Soleus Air Portable Air Conditioner and Heater with Heat Pump Technology, Model No. PH3-12R-03. Includes package contents, specifications, installation, operating modes, and maintenance.</p>
 <p>Portable Air Conditioner, Dehumidifier, Heater and Fan utilizing Heat Pump Technology Model # PH1-14R-03 Model # PH1-12R-03 Please read owner's manual carefully before operating unit</p>	<p><u>Soleus Air Portable Air Conditioner, Dehumidifier, Heater & Fan Owner's Manual</u></p> <p>Comprehensive owner's manual for the Soleus Air PH1-14R-03 and PH1-12R-03 portable air conditioner, dehumidifier, heater, and fan. Includes installation, operation, maintenance, troubleshooting, and warranty information.</p>