

Optimus H-7319

Optimus H-7319 17-inch Oscillating Tower Heater with Remote Instruction Manual

Model: H-7319 | Brand: Optimus

- Introduction
- Safety Information
- Product Features
- Setup
- Operating
- Instructions
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

Thank you for choosing the Optimus H-7319 17-inch Oscillating Tower Heater. This electric space heater is designed to provide efficient and customizable warmth for indoor spaces such as bedrooms, home offices, and study rooms. Featuring digital temperature control, multiple heat settings, and a motorized oscillating base, it offers comfort and convenience. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this heater.
- Do not use this heater outdoors.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock

or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- This heater includes an internal heat limiting thermostat and a thermal cut-off safety device. If the unit shuts down, unplug it, wait 5-10 minutes, then plug in and turn ON.
- The unit features a tip-over switch that automatically cuts off power if the heater is accidentally knocked over.

3. PRODUCT FEATURES

- **Adjustable Thermostat Temperature Control (50-95°F) & LED Temperature Read-Out:** Precisely set your desired room temperature with a clear digital display.
- **1 to 8 Hours Timer Control:** Program the heater to operate for a specific duration, enhancing energy efficiency and convenience.
- **2 Heat Settings (750 and 1500 watts):** Choose between low (750W) and high (1500W) heat output to suit your comfort needs.
- **Motorized Oscillating Base Rotates a Full 75 Degrees:** Distributes warmth evenly across a wider area.
- **Internal Heat Limiting Thermostat with Thermal Cut-Off Safety Device:** Provides protection against overheating.
- **Space Saving Housing:** The tower design is compact and fits easily into various room layouts.
- **Remote Control:** Adjust settings conveniently from a distance.

With Remote Control



Image Description: A close-up view of the Optimus H-7319 tower heater alongside its remote control. The heater's digital display shows "86" degrees Fahrenheit, with icons for oscillation and fan speed. The remote control features buttons for power, temperature adjustment, oscillation, and timer settings.

Motorized Oscillation Base



Image Description: A visual demonstrating the motorized oscillation feature of the Optimus H-7319 heater. The heater is shown rotating on its base, with a yellow arrow indicating the 75-degree oscillation range. A magnified inset shows the 'OSC.' button on the control panel.

4. SETUP

The Optimus H-7319 tower heater comes fully assembled and ready for use. No additional assembly is required.

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from walls, furniture, curtains, and other combustible materials. Do not place it on soft surfaces like rugs or carpets that could block air vents.
3. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz electrical outlet. Do not use extension cords or power strips.

5. OPERATING INSTRUCTIONS

Control Panel & Remote Control

The heater can be operated using the control panel on the top of the unit or the included remote control. The functions are identical.

Electronic Digital Thermostat and Temperature Control



Image Description: A detailed view of the Optimus H-7319 heater's digital control panel. The LED display shows "86" degrees Fahrenheit. Buttons for Power, Oscillation (OSC), Timer, and Temperature (TEMP) are visible, along with up/down arrows for adjustments.

1. **Power ON/OFF:** Press the **POWER** button once to turn the heater ON. Press it again to turn the heater OFF.
2. **Heat Settings (Low/High):**
 - When the heater is ON, press the **TEMP** button to cycle between Low (750W) and High (1500W) heat settings. The LED display will indicate the current setting.

2 Heat Setting (750W, 1500W)



Image Description: A close-up of the Optimus H-7319 heater's digital display, showing "86" degrees Fahrenheit and indicating the "HI" (High) heat setting. The control panel buttons for Power, Oscillation, Timer, and Temperature are also visible.

3. Adjusting Temperature (Thermostat):

- Use the **Up (▲)** and **Down (▼)** arrow buttons to set the desired temperature between 50°F and 95°F. The heater will automatically maintain this temperature.

4. Oscillation Function:

- Press the **OSC** button to activate the motorized oscillation, which rotates the heater 75 degrees to distribute heat. Press again to stop oscillation.

5. Timer Function:

- Press the **TIMER** button to set the auto-off timer. Each press will cycle through 1, 2, 4, or 8 hours. The corresponding indicator light will illuminate.



Image Description: A close-up of the Optimus H-7319 heater's control panel, highlighting the Timer button and the digital display showing "8" for 8 hours. This image illustrates the 1 to 8 hours timer control feature.

6. MAINTENANCE

Proper maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. Ensure no water enters the interior of the heater.

- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. Do not use the heater if the cord is frayed or damaged.

7. TROUBLESHOOTING

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn ON.	No power to the unit, or unit is unplugged.	Ensure the heater is securely plugged into a working electrical outlet. Check the circuit breaker.
Heater shuts off unexpectedly.	Overheating safety feature activated, or tip-over switch activated.	Unplug the heater, wait 5-10 minutes for it to cool down, then plug it back in and turn ON. Ensure the heater is on a stable, level surface and not obstructed.
Heat output is low.	Heater is set to Low heat setting, or thermostat is set too low.	Increase the heat setting to High (1500W) or adjust the thermostat to a higher temperature.
Oscillation is not working.	Oscillation function is not activated.	Press the OSC button to activate oscillation.

Tip-over Switch



Image Description: A series of images illustrating the tip-over safety switch of the Optimus H-7319 heater. The heater is shown upright, then tilting, and finally lying on its side, with a red arrow indicating the "Cut Off" action. This demonstrates how the unit automatically shuts off if knocked over.

8. SPECIFICATIONS

Feature	Detail
Brand	Optimus

Feature	Detail
Model Number	H-7319
Special Feature	Oscillating
Color	White
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Product Dimensions	7.1"D x 7.1"W x 17.3"H
Item Weight	5.8 pounds
Recommended Uses	Home, Bedroom, Home Office, Study Room
Mounting Type	Floor Mount
Fuel Type	Electric
Number of Speeds	2
UPC	630326173197
Included Components	Heater

9. WARRANTY AND SUPPORT

This Optimus H-7319 heater comes with a **3-year manufacturer's warranty**. For warranty claims, technical support, or any questions regarding your product, please contact Optimus customer service. Refer to the product packaging or the official Optimus website for the most current contact information.

© 2026 Optimus. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0792TB9ZF>

More documents and user manuals: <https://manuals.plus/>