

- Manuals.plus /
- › Fotopro /
- › Fotopro 59-inch Camera Tripod Instruction Manual

Fotopro CSTRDG14ZPAABK

Fotopro 59-inch Camera Tripod Instruction Manual

Model: CSTRDG14ZPAABK

PRODUCT OVERVIEW

The Fotopro 59-inch Camera Tripod is a versatile and portable aluminum tripod designed for use with various devices, including iPhones, smartphones, cameras, Canon cameras, and action cameras. It features a 3-way head for flexible positioning, adjustable legs for varying heights, and a Bluetooth remote for convenient remote shooting.



Image: The Fotopro 59-inch Camera Tripod, showcasing its compact and portable design.

PACKAGE CONTENTS

- Fotopro 59-inch Camera Tripod
- Adjustable Phone Clip
- Bluetooth Remote Shutter
- Carrying Case

SETUP INSTRUCTIONS

1. Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Gently spread the tripod legs outwards until they are fully extended and stable.
3. Locate the quick locking system on each leg. Flip open the locks to extend the leg sections.

4. Extend each leg section to your desired height. Ensure all locks are securely closed after adjustment to maintain stability.



Image: Illustration of the tripod legs extended to different heights, demonstrating the adjustable sections.

2. Attaching Your Device

The tripod supports various devices using either the 1/4" screw quick-release plate or the adjustable phone clip.

- **For Cameras (DSLR, Video, Action Cameras):**

- a. Ensure the quick-release plate is detached from the tripod head.
- b. Screw the 1/4" screw on the quick-release plate into the tripod mount on the bottom of your camera. Tighten securely.
- c. Slide the quick-release plate with your camera back into the tripod head until it clicks into place.

- **For Smartphones (iPhone, Android):**

- a. Attach the adjustable phone clip to the tripod head using the 1/4" screw.

- b. Open the phone clip and carefully insert your smartphone. Ensure the phone is centered and securely held by the clip.

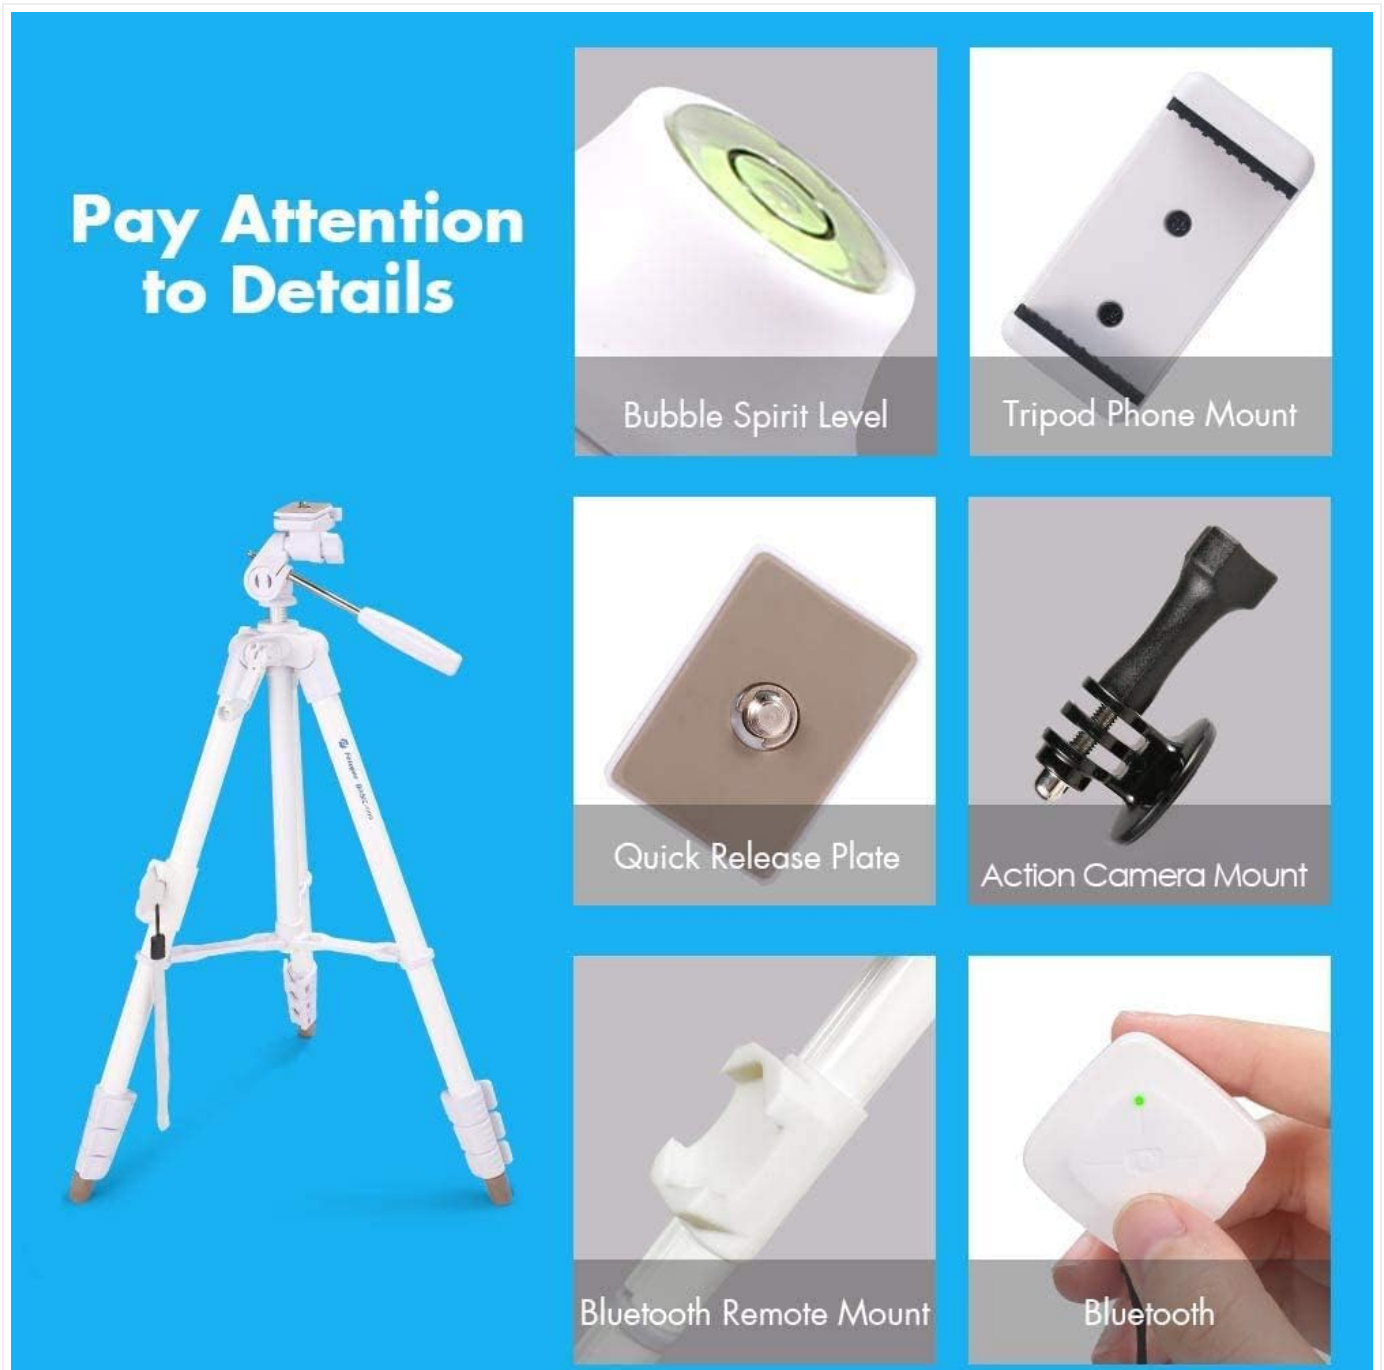


Image: Detailed view of the tripod head, showing the quick release plate, phone mount, and action camera mount for various device attachments.

3. Pairing the Bluetooth Remote

1. Turn on the Bluetooth remote shutter.
2. Enable Bluetooth on your smartphone.
3. Search for available devices and select the remote shutter (usually named "AB Shutter3" or similar).
4. Once paired, you can use the remote to trigger your phone's camera shutter from a distance (up to 10m wireless range). No app download is required.



Image: A person using the Bluetooth remote to capture a photo with a smartphone mounted on the Fotopro tripod.

OPERATING INSTRUCTIONS

1. Adjusting Height and Angle

- **Height Adjustment:** The tripod features 4-section adjustable legs, allowing a height range from 19.29 inches (folded) to 60.62 inches (fully extended). Use the quick locking system on each leg to extend or retract sections.
- **3-Way Head:** The integrated 3-way head allows for precise adjustments:
 - **360-degree Horizontal Rotation:** Loosen the horizontal lock to pan your device smoothly across a full 360 degrees.
 - **90-degree Vertical Tilt:** Adjust the vertical tilt to capture shots from various upward or downward angles.
 - **Bubble Level:** Use the built-in bubble level to ensure your device is perfectly balanced and level for accurate shots.

Any Angle as You Wish

Supports 360° horizontally moving
and 180° vertically moving, suits you needs better



Image: A visual representation of the tripod head's flexibility, allowing for 360-degree horizontal and 180-degree vertical adjustments.

2. Device Compatibility

The Fotopro tripod is compatible with a wide range of devices, with a maximum load capacity of 2KG (4.4 lbs). The adjustable phone clip accommodates phones with widths between 2.1 and 3.5 inches.

Widely Applicable to Most Cameras

- Max Load: **4.4lbs**
- Phone Mount Range: **2.1-3.5 inches**



DSLR cameras



Videos cameras



Action Camera



iPhone X



Galaxy S9



Huawei P20

Image: Icons illustrating the broad compatibility of the tripod with various cameras and smartphones.

MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth after each use. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Avoiding Sand/Dust:** When using the tripod in sandy or dusty environments, take extra care to prevent particles from entering the leg locking mechanisms. Sand can cause stiffness or damage to the joints. If sand enters the joints, gently clean with compressed air or a soft brush.
- **Storage:** Store the tripod in its carrying case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Device Not Securely Held:**
 - Ensure the quick-release plate screw or phone clip is tightened firmly.
 - If using a phone clip and the phone feels loose, a small piece of paper or thin material can be placed between the phone and the clip to create a tighter fit.
- **Legs Not Extending/Retracting Smoothly:**
 - Check that all quick locks are fully open before attempting to extend or retract legs.
 - Inspect for any debris (e.g., sand) in the leg joints. Clean as described in the Maintenance section.
- **Bluetooth Remote Not Pairing:**
 - Ensure the remote is charged and turned on.
 - Verify Bluetooth is enabled on your smartphone and that the remote is within the 10m operating range.
 - Try unpairing and re-pairing the remote in your phone's Bluetooth settings.

SPECIFICATIONS

Feature	Detail
Brand	Fotopro
Model Number	CSTRDG14ZPAABK
Material	Aluminum
Item Weight	980 Grams (2.16 lbs)
Weight Limit	4.4 Pounds (2 KG)
Minimum Height	18.89 Inches
Maximum Height	60.62 Inches
Folded Size	18.89 Inches
Number of Leg Sections	4
Head Type	3-Way Pan Head
Compatible Devices	Cameras, Smartphones, Action Cameras
Phone Mount Range	2.1 - 3.5 inches

SUPPORT

For any questions, concerns, or assistance with your Fotopro 59-inch Camera Tripod, please contact Fotopro customer support. Refer to the product packaging or the official Fotopro website for contact details.

OFFICIAL PRODUCT VIDEO



Video: Official product overview of the Fotopro 59-inch Camera Tripod, demonstrating its features and ease of use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0792WKSPQ>

More documents and user manuals: <https://manuals.plus/>