

Zyliss E900036

Zyliss E900036 Dial and Slice Cheese Slicer Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Zyliss E900036 Dial and Slice Cheese Slicer. The slicer is designed for precise cheese slicing with adjustable thickness settings, suitable for various cheese types. Please read these instructions carefully before first use and retain them for future reference.

Key Features:

- Adjustable slicing grades via a dial selector.
- Suitable for various cheese types, including Parmesan, Cheddar, Gouda, and Edam.
- Durable stainless steel blade.
- Dishwasher-safe for easy cleaning.

SETUP

The Zyliss Dial and Slice Cheese Slicer requires no assembly. Follow these steps before initial use:

1. Carefully remove the slicer from its packaging.
2. Inspect the slicer for any signs of damage. If damaged, do not use and contact customer support.
3. Wash the slicer thoroughly with warm, soapy water or place it in a dishwasher before its first use. Rinse and dry completely.



Image: Proper grip for handling the Zyliss cheese slicer.

OPERATING INSTRUCTIONS

The Zyliss Dial and Slice Cheese Slicer allows you to easily adjust slice thickness for various culinary needs.

1. **Adjusting Thickness:** Locate the dial selector on the side of the slicer. Rotate the dial to select your desired slice thickness. The slicer offers a range of settings to accommodate different preferences, from thin shavings to thicker slices.
2. **Slicing Cheese:** Place the block of cheese on a clean, stable cutting surface. Hold the cheese firmly with one hand. With the other hand, grip the slicer handle. Position the blade end of the slicer against the edge of the cheese block. Apply gentle, even pressure and pull the slicer across the cheese to create a uniform slice. Repeat as needed.
3. **Recommended Cheeses:** This slicer is effective for a wide range of cheeses, including hard cheeses like Parmesan, semi-hard cheeses like Cheddar, Gouda, and Edam. For best results, ensure cheese is chilled.



Image: The slicer producing thin cheese slices from a block.



Image: Detailed view of the slicer's blade engaging with cheese.



Image: The cheese slicer used in a kitchen setting, with sliced cheese ready for a burger.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your Zyliss cheese slicer.

- **Dishwasher Safe:** The Zyliss Dial and Slice Cheese Slicer is designed to be dishwasher safe. Place it on the top rack for best results.
- **Hand Washing:** If hand washing, use warm water with a mild dish soap. Use a soft brush or sponge to clean the blade and all surfaces. Rinse thoroughly under running water to remove all soap residue.
- **Drying:** Dry the slicer completely with a soft cloth before storing to prevent water spots or mineral buildup.
- **Storage:** Store the slicer in a dry place. The blade closes flush with the edge of the tool for safe storage.



Image: The cheese slicer positioned in a dishwasher for cleaning.

TROUBLESHOOTING

If you encounter issues with your cheese slicer, consider the following:

- **Uneven Slices:** Ensure the dial selector is set to your desired thickness and that you are applying consistent, even pressure across the cheese block.

- **Cheese Sticking to Blade:** Make sure the blade is clean and free of residue. Using cheese that is too soft or warm can also cause sticking; try chilling the cheese further.
- **Difficulty Slicing:** For very hard cheeses, ensure the blade is clean and sharp. While the slicer is designed for various cheeses, extremely hard or crumbly varieties may require more careful handling.

SPECIFICATIONS

Attribute	Detail
Brand	Zyliss
Model Number	E900036
Product Dimensions	14.57"L x 4.72"W x 1.57"H (37cm L x 12cm W x 4cm H)
Material	Plastic (body), Stainless Steel (blade)
Color	White
Item Weight	2.59 ounces (73.4 grams)
Operation Mode	Manual
Care Instructions	Dishwasher Safe



Image: Dimensions of the Zyliss cheese slicer.

WARRANTY AND SUPPORT

The Zyliss Dial and Slice Cheese Slicer is guaranteed for 5 years from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, spare parts, or any product-related inquiries, please contact Zyliss customer service. Refer to the official Zyliss website or the product packaging for the most current contact information and detailed warranty terms.

Manufacturer: DKB Household UK Ltd

