

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CHACON](#) /

› [CHACON Set of 4 Remote Switches with Remote Control User Manual](#)

**CHACON 5411478546627**

# CHACON Set of 4 Remote Switches with Remote Control User Manual

Model: 5411478546627

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your CHACON Set of 4 Remote Switches with Remote Control. Please read this manual thoroughly before installation and operation, and retain it for future reference. This product allows you to remotely control electrical lights and appliances plugged into the receiver outlets.

## PACKAGE CONTENTS

---

Verify that all components are present in the package:

- 4 x Remote-controlled electrical outlets (Type C, EU 2-pin)
- 1 x Remote control
- 1 x CR2032 battery (pre-installed in remote control)



Image: The complete CHACON set, showing four white remote-controlled outlets and one white remote control with grey buttons.

## SETUP AND INSTALLATION

---

The CHACON remote switches are designed for easy, wireless installation.

1. **Insert Battery into Remote Control:** The CR2032 battery is typically pre-installed. If not, open the battery compartment on the back of the remote control and insert the CR2032 battery with the positive (+) side facing up.
2. **Plug in the Receiver Outlet:** Plug one of the remote-controlled outlets into a standard Type C (EU 2-pin) wall socket. Ensure it is securely seated.

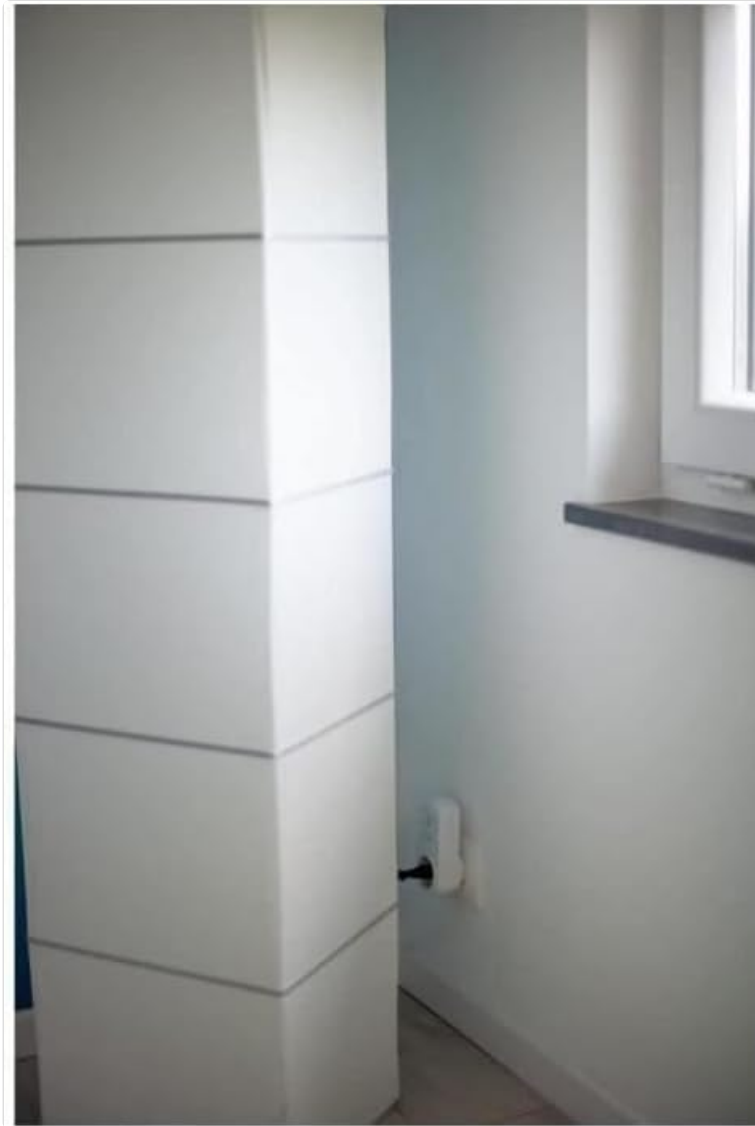 


Image: A white CHACON remote-controlled outlet plugged into a wall socket, partially obscured by furniture.

### 3. Pairing the Remote Control with Outlets:

- Plug the receiver outlet into a wall socket. The indicator light on the outlet may flash briefly.
- Within 5 seconds of plugging in the outlet, press the desired 'ON' button (e.g., '1 ON') on the remote control.
- The outlet's indicator light should stop flashing and remain solid or turn off, indicating successful pairing.
- Repeat this process for each of the four receiver outlets, assigning them to different 'ON'/'OFF' buttons (1-4) on the remote control.

### 4. Connect Appliance: Plug the appliance you wish to control into the remote-controlled outlet.

## OPERATING INSTRUCTIONS

---

Once set up, operating the remote switches is straightforward.

1. **Turning On an Appliance:** Press the corresponding 'ON' button (e.g., '1 ON') on the remote control for the desired outlet. The appliance connected to that outlet will turn on.
2. **Turning Off an Appliance:** Press the corresponding 'OFF' button (e.g., '1 OFF') on the remote control for the desired outlet. The appliance connected to that outlet will turn off.



Image: A hand holding the CHACON remote control, pointing it towards a floor lamp, demonstrating the remote operation.

The remote control operates on a frequency of 433.92 MHz and has a transmission distance of up to 25 meters in an open, free field environment. Obstacles such as walls and furniture may reduce this range.

## MAINTENANCE

---

To ensure the longevity and proper functioning of your CHACON remote switches, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control and outlets with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If the remote control's range decreases or it stops responding, replace the CR2032 battery. Open the battery compartment on the back of the remote, remove the old battery, and insert a new CR2032 battery with the positive (+) side facing up.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

## TROUBLESHOOTING

---

If you encounter issues with your CHACON remote switches, refer to the following troubleshooting steps:

- **Appliance does not turn on/off:**
  - Ensure the appliance is properly plugged into the remote outlet and is switched on (if it has its own power

switch).

- Verify the remote outlet is securely plugged into the wall socket and receiving power.
  - Check the remote control battery. Replace it if necessary.
  - Ensure you are within the effective transmission range (25m free field) and there are no significant obstructions.
  - Re-pair the remote control with the specific outlet following the 'Pairing the Remote Control with Outlets' steps in the Setup section.
- **Remote control not responding:**
    - Replace the remote control battery.
    - Ensure there are no other devices operating on the same 433.92 MHz frequency causing interference.

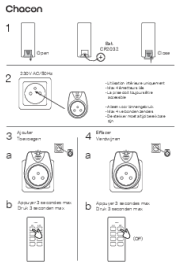 

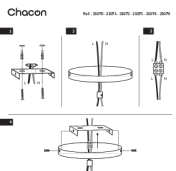 



SPECIFICATIONS

Feature	Detail
Brand	CHACON
Model Number	5411478546627
Part Number	54662
Compatible Devices	Units with 2 pin Type C socket from EU
Included Components	4 Outlets + Remote Control + CR2032 Battery
Voltage	230 Volts
Max Wattage	3680 Watts
Amperage	16 Amps
Frequency	433.92 MHz
Transmission Distance	25 m (free field)
Battery Type (Remote)	CR2032 Lithium Ion
Material	Plastic
Color	White

WARRANTY AND SUPPORT

This CHACON product comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or further assistance, please contact your retailer or the CHACON customer service department. Please have your proof of purchase and product model number (5411478546627) available when contacting support.

 <p>Chacon</p> <p>1. 2. 3. 4. a. b.</p>	<p><a href="#">Chacon Remote Control Socket User Manual and Specifications</a></p> <p>User manual and technical specifications for Chacon remote control sockets, including setup, usage, and safety information. Covers models 54661, 54662, 54663, and 54664.</p>
 <p>Chacon</p>	<p><a href="#">Chacon 32175-32176 Installation Guide and Instructions</a></p> <p>Step-by-step installation instructions for the Chacon 32175-32176 electrical accessory, including assembly diagrams described textually, manufacturer details, and recycling information. This guide is designed for clarity and accessibility.</p>
 <p>Chacon</p>	<p><a href="#">Chacon Lighting Fixture Installation Guide (Models 21070-21079)</a></p> <p>Concise installation instructions for Chacon lighting fixtures, covering wiring, mounting, and product information. Includes steps, reference numbers, and environmental responsibility details.</p>
 <p>Chacon</p>	<p><a href="#">Chacon 32180-32181 Lamp Holder Installation Guide</a></p> <p>Step-by-step instructions for installing the Chacon 32180-32181 lamp holder. Includes wiring guidance and product information.</p>
 <p>Chacon</p>	<p><a href="#">Chacon Wi-Fi Timer User Manual (53022/53023)</a></p> <p>User manual for the Chacon Wi-Fi Timer plug (models 53022 and 53023), detailing setup, usage, troubleshooting, and technical specifications. Compatible with My Chacon and DiO one apps, and voice control via Google Home and Amazon Alexa.</p>
 <p>CHACON</p> <p>Manual de instalação e utilizador Videoparteiro (ver modelos 34801, 34802)</p>	<p><a href="#">Manual de Instalação e Utilizador do Vídeoparteiro CHACON (Modelos 34801, 34802)</a></p> <p>Guia completo para a instalação e utilização do vídeoparteiro CHACON, incluindo especificações técnicas, resolução de problemas e notas de segurança.</p>