

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [Nespresso Lattissima EN560.B by De'Longhi User Manual](#)

## De'Longhi EN 560.B

# Nespresso Lattissima EN560.B by De'Longhi User Manual

Single Serve Capsule Coffee Machine with Automatic Frothed Milk

## PRODUCT OVERVIEW

---

The De'Longhi Nespresso Lattissima EN560.B is a sophisticated single-serve capsule coffee machine designed to deliver a variety of coffee and milk-based beverages with ease. Featuring a patented system for automatic milk frothing, it allows you to prepare espresso, lungo, creamy latte, cappuccino, latte macchiato, and hot milk at the touch of a button. Its compact design and quick heat-up time make it a convenient addition to any kitchen.



Image: The Nespresso Lattissima EN560.B machine in black, showcasing its sleek design, milk frother, and a prepared latte macchiato. Various Nespresso capsules are displayed in the foreground.

### Key Features:

- Patented system for one-touch cappuccino and latte macchiato.
- Six tactile buttons for various drink selections: Espresso, Lungo, Creamy Latte, Cappuccino, Latte Macchiato, and Hot Milk.
- Personalization and memorization of drink settings (milk and coffee quantity).

- Rapid heat-up time of approximately 25 seconds.
- Automatic shut-off after 9 minutes of inactivity for energy saving.
- Removable milk frother with adjustable milk foam dial.

## SETUP AND FIRST USE

---

Before using your Nespresso Lattissima EN560.B for the first time, please follow these steps carefully to ensure optimal performance and safety.

1. **Unpacking:** Carefully remove all packaging materials and place the machine on a stable, flat surface.

2. **Water Tank Preparation:**

- Remove the water container from the back of the machine by lifting it upwards.
- Fill the water tank with fresh, potable water up to the MAX level.
- Replace the water tank securely back into its position.

3. **Power Connection:** Plug the machine into a grounded electrical outlet.

4. **Initial Rinse Cycle:**

- Place a container (minimum 500ml capacity) under the coffee outlet.
- Press the Lungo button. The machine will begin to heat up (approx. 25 seconds).
- Once heated, water will dispense. Repeat this process 3 times to thoroughly rinse the internal system.

5. **Milk Frother Attachment (if using milk recipes):**

- Ensure the milk frother is clean.
- Slot the milk frother into the right-hand side of the machine until it clicks into place.
- Fill the milk carafe with fresh, cold milk up to the desired level (do not exceed MAX line).



Image: A side view of the Nespresso Lattissima EN560.B machine, highlighting the transparent water tank on the left and the detachable milk frother on the right, ready for use.

## OPERATING INSTRUCTIONS

---

Your Lattissima EN560.B offers a variety of coffee and milk recipes. Follow these steps to prepare your desired beverage.

### Preparing a Coffee (Espresso or Lungo):

1. Ensure the water tank is filled.
2. Lift the lever on the top of the machine.
3. Insert a Nespresso Original capsule into the capsule slot.
4. Push the lever down to close.
5. Place your cup under the coffee outlet.
6. Press either the **Espresso** or **Lungo** button. The machine will heat up and then dispense your coffee.

# COFFEE AND MILK RECIPES AT A FINGER TOUCH



Image: A detailed cross-section of a Nespresso capsule, illustrating the finely ground coffee sealed within its aluminum casing, designed to preserve freshness and aroma.

*Note:* Nespresso pods are filled with freshly roasted ground coffee and hermetically sealed with aluminum to protect the high-quality aroma and freshness over time. Using compatible third-party capsules may affect performance or coffee quality.

## **Preparing a Milk-Based Coffee (Cappuccino, Latte Macchiato, Creamy Latte, Hot Milk):**

1. Ensure the water tank is filled and the milk frother is attached and filled with cold milk.
2. Lift the lever, insert a Nespresso Original capsule (for coffee-based drinks), and close the lever.
3. Place your cup under the milk frother spout and coffee outlet.
4. Select your desired milk-based drink button (e.g., **Cappuccino**, **Latte Macchiato**).
5. The machine will automatically froth and dispense milk, followed by coffee (if applicable).



Image: An overhead view of the Nespresso Lattissima EN560.B's control panel, clearly showing the power button, descaling and rinse indicators, and the six tactile buttons for various coffee and milk recipes.

## Customizing Drink Volume:

You can personalize the quantity of milk and coffee for each drink. To do this:

- Start preparing your desired drink as usual.
- While the machine is dispensing, press and hold the button for the drink you are making.
- Release the button when the desired volume is reached. The machine will memorize this new setting for future preparations of that specific drink.
- The milk frother also has a dial on top to adjust the amount of milk dispensed.

# WELCOME SET INCLUDED

7 capsules, covering different coffee styles  
from espressos to lungos

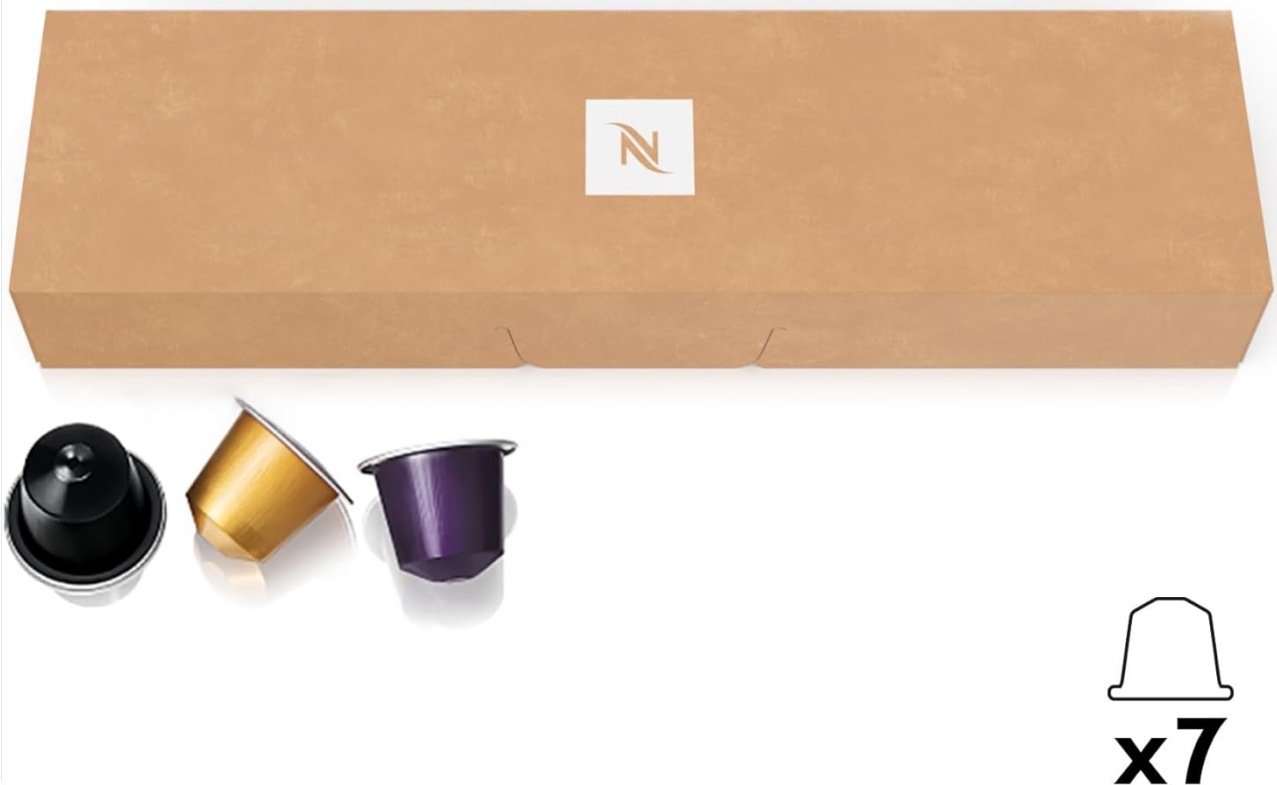


Image: An illustration demonstrating various cup options and sizes for Nespresso coffees, emphasizing that different beverages can be prepared in suitable cup volumes.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your Nespresso Lattissima EN560.B, especially for milk components.

### Daily Cleaning:

- **Pod Capture Compartment and Drip Tray:** These are removable and can be cleaned with warm soapy water or in a dishwasher.
- **Milk Frother:** The milk frother has several components that can be removed by twisting. All these components are dishwasher safe. For best results and to prevent rancid milk taste, perform a steam wash (if available on your model) for 10-15 seconds before and after each use, and regularly wash with soap.
- **Exterior:** Wipe the exterior of the machine with a damp cloth or an antibacterial wipe.
- **Drip Tray:** Even several minutes after use, a few drops of water may come out of the coffee part. Remember to leave the drip tray open to collect these drops.

## Descaling:

Limescale buildup can affect machine performance, even with filtered water. It is recommended to descale your machine every 4-5 months if used frequently (e.g., five times per day).

1. Empty the water tank and the drip tray.
2. Lift the flap at the front under the milk frother to reveal a removable pipe.
3. Fit this pipe into the milk frother outlet.
4. Add the recommended Nespresso descaling solution (or a suitable descaling agent) to the water tank, diluted as per product instructions.
5. Place a large container (at least 1 liter) under the coffee and milk spouts to collect the descaling solution.
6. Activate the descaling function (refer to your machine's specific descaling button or sequence, often indicated by a "descale" light).
7. Allow the machine to complete the descaling cycle.
8. After descaling, rinse the machine thoroughly by running several cycles of fresh water through it to clear any residual descaling fluid. **Failure to do so may result in an acidic taste in your coffee.**

## TROUBLESHOOTING

If you encounter issues with your Nespresso Lattissima EN560.B, consult the following common troubleshooting tips:

Problem	Possible Cause	Solution
No coffee or only drips dispensed.	<ul style="list-style-type: none"> <li>• Water tank empty.</li> <li>• Limescale buildup.</li> <li>• Capsule not inserted correctly or incompatible.</li> </ul>	<ul style="list-style-type: none"> <li>• Refill water tank.</li> <li>• Perform a descaling cycle (see Maintenance section).</li> <li>• Ensure capsule is correctly placed and lever is fully closed. Use only Nespresso Original capsules for optimal performance.</li> </ul>
Milk not frothing or poor foam quality.	<ul style="list-style-type: none"> <li>• Milk frother components are dirty or clogged.</li> <li>• Incorrect milk type or temperature (use cold, fresh milk).</li> <li>• Milk carafe not properly attached.</li> </ul>	<ul style="list-style-type: none"> <li>• Disassemble and thoroughly clean all milk frother components.</li> <li>• Ensure milk is cold and fresh.</li> <li>• Re-attach the milk carafe securely.</li> </ul>

Problem	Possible Cause	Solution
Water leaking from the machine.	<ul style="list-style-type: none"> <li>• Drip tray full or not properly seated.</li> <li>• Water tank not properly inserted.</li> <li>• Minor drips after use (normal).</li> </ul>	<ul style="list-style-type: none"> <li>• Empty and re-seat the drip tray.</li> <li>• Ensure water tank is firmly in place.</li> <li>• For minor drips, leave the drip tray open to collect them.</li> </ul>
Machine not turning on.	<ul style="list-style-type: none"> <li>• Not plugged in or power outlet issue.</li> <li>• Auto shut-off activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Check power cord connection and try a different outlet.</li> <li>• Press any button to wake the machine from auto shut-off.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Brand	De'Longhi
Model Number	EN 560.B
Colour	Black
Product Dimensions	16.97 x 32 x 25.81 cm (6.7D x 12.6W x 10.2H inches)
Item Weight	4.5 kg
Water Tank Capacity	0.9 Litres
Milk Carafe Volume Capacity	0.35 Litres
Voltage	220V
Auto Shutoff	Yes (after 9 minutes)
Special Features	Cord storage, Timer, Milk tank
Coffee Maker Type	Espresso Machine (Single Serve)

# ONE TOUCH RECIPE MAKER

500 ml milk carafe

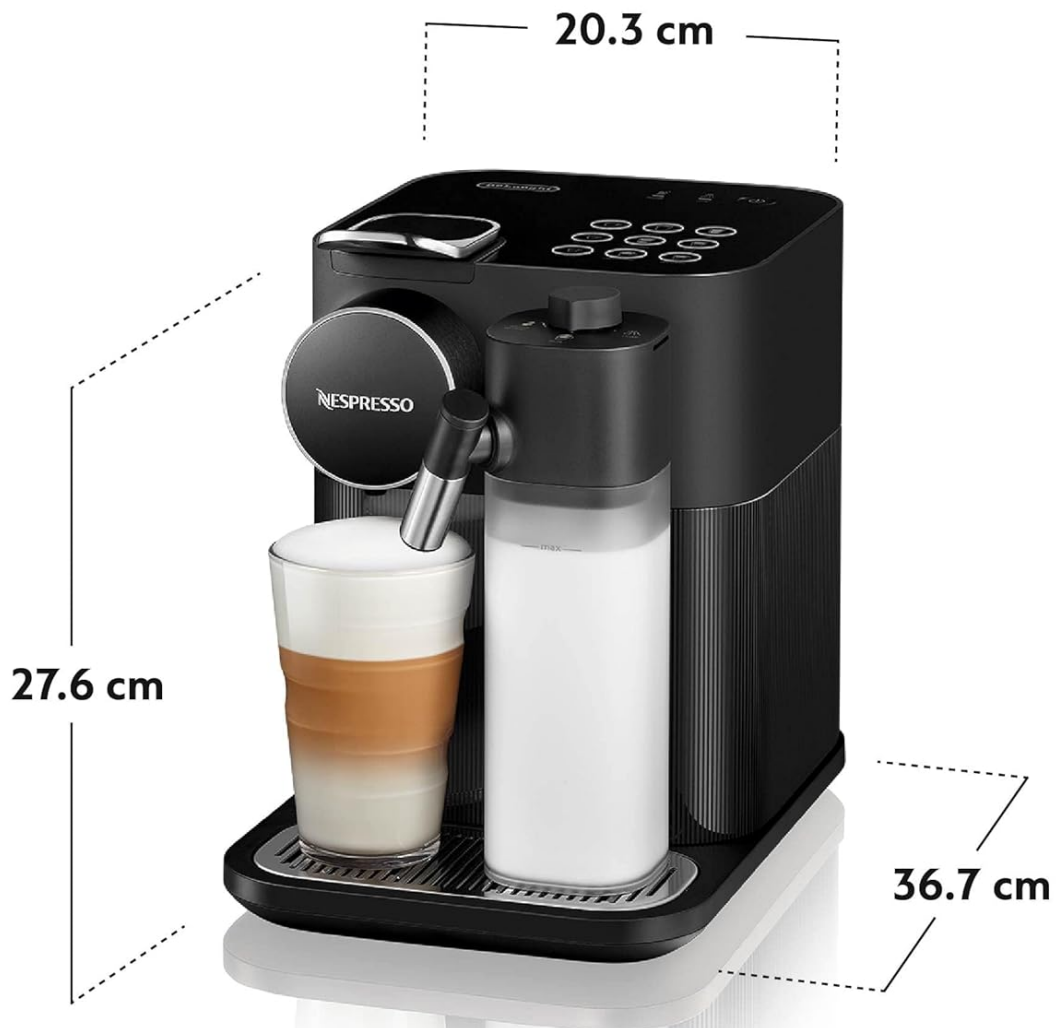


Image: The Nespresso Lattissima EN560.B machine with its key dimensions (width, depth, height) clearly indicated, providing a visual reference for its compact size.